




INSTALLATION/OPERATION MANUAL

3Dimension™ Series **D-113d**

Full-HD Private Cinema Projection System

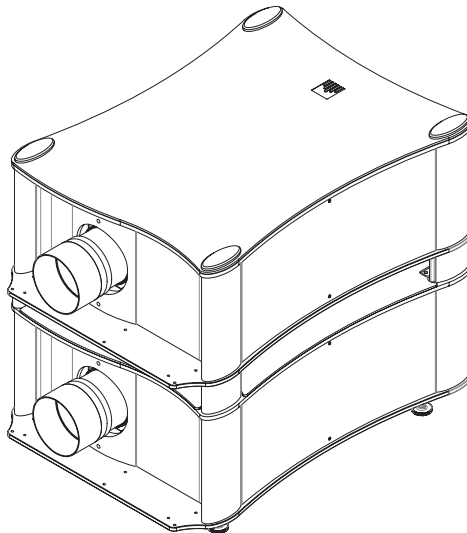

D-113d
D-113d/CineWide with AutoScope™



RuncoCare™ Standard Two Year Limited Warranty

Congratulations on your purchase of a Runco® product! With proper installation, setup and care, you should enjoy many years of unparalleled video performance.

This Limited Warranty is provided free of charge by Runco International, LLC ("Runco") with the purchase of a covered Runco product. This Limited Warranty is applicable to all Runco projectors, processors, LCD display and plasma display products, with the exception of the following models: XP-103DHD, SC-1 and SC-1a¹. This Limited Warranty applies to purchases of covered Runco products occurring on or after **June 1, 2011**.

RuncoCare™ Limited Warranty Coverage

Runco warrants its products to be free from defects in material and workmanship during the warranty period provided below. If a product proves to be defective in material or workmanship during the warranty period, Runco will repair the product, replace the product with a substantially similar new or like-new product, or refund a prorated share of the purchase price (calculated based on the remainder of the warranty period and the then-current, most-recent MSRP² of a similar product), if repair or replacement of the product is determined by Runco to not be feasible.

Length of RuncoCare™ Warranty Period

Runco products are warranted for two (2) years from the date of shipment from Runco. Lamps are warranted six (6) months from the date of shipment or 1000 hours of use, whichever comes first. A replacement lamp is warranted for the remaining portion (if any) of the original warranty period or ninety (90) days from the date it was shipped to you, whichever is longer. All other accessories, which include but are not limited to cables, remotes, carrying cases, lens cap and other peripherals sold with the Runco product, are warranted for ninety (90) days from the date of shipment.

RuncoCare™ Eligibility

This Limited Warranty is valid only in the country where the Product was originally purchased and for the buyer who originally purchased the covered product from the authorized Runco dealer or distributor. This warranty is not transferable; it is not valid for any subsequent buyer (if any). You may be required to provide proof of purchase in order to receive warranty services.

-
1. Runco may update this list of products excluded from this warranty from time to time at Runco's sole discretion, but updates will not apply on a retroactive basis.
 2. MSRP is defined as the most recent product price listed on Runco's price list.

RuncoCare™ Standard Claim Procedure

- In the event of a product defect, please follow the claim procedure provided below:
 - A. Register your product if you have not yet done so. Visit <http://www.runco.com/support/product-registration/> to register the product.
 - B. Contact your original authorized dealer or distributor who sold the product.
 - C. The dealer/distributor will contact Runco Technical Support via email at support@runco.com or via phone at 1-800-23-RUNCO (1-800-237-8626).
- The dealer/distributor will provide to Runco proof of purchase, serial number, product model number, description of the problem and any troubleshooting steps already attempted.
- Runco's technical support staff will attempt to assist the dealer/distributor in troubleshooting any technical issues that might be causing the product to malfunction. If Runco is unable to resolve the problem through troubleshooting, a Return Material Authorization (RMA) number will be issued for the exchange of the defective product if it is determined that the claim is covered by the warranty. Once an RMA has been created, RMA status is available at serviceorders@runco.com.
- If an RMA is issued, the dealer or customer will need to return the defective product to the Runco repair depot location specified by the Runco technical support representative. The dealer or customer will need to properly package the defective product in a suitable shipping container consisting of the product only, and not include any accessories (e.g., cables, remotes, carrying cases, lens, lens cap and other peripherals). Boxes may be purchased from a Runco technical support representative.
- The dealer or customer is responsible for paying freight charges and insurance to ship the defective product to the Runco repair depot location. If there are any shipping damages, the dealer or customer will need to address and resolve any shipping damage claims directly with the shipping company.
- Runco will not accept a returned product unless an RMA has been issued by Runco.
- For in-warranty repairs, Runco will pay freight charges to return the repaired/replacement product to the dealer/distributor from the Runco repair depot. For select countries or geographies Runco will ship via an economy express service. Return delivery time and availability may vary based on origin and destination, and Runco is unable to deliver to PO Box and FPO Box addresses.
- **Note:** in the 48 contiguous United States, other options for on-site service or advance exchange for the product may apply, if you purchased the Runco PremierCare™ Service Plan.

What to Include with Your Return

1. Return only the defective product with the lamp (if applicable).
2. Runco will not be responsible for returning or replacing any accessories (e.g., cables, remotes, carrying cases, lens, lens cap and other peripherals sold with the Runco product) that are returned with the defective product.
3. Repaired or replacement products will be shipped with a lamp (if applicable) but without any accessories.

RuncoCare™ Warranty Exclusions

This Limited Warranty does not include and is limited by the following:

1. Products not purchased from an authorized Runco dealer
2. Rental costs incurred by the customer in the event of product defect or failure
3. Any product with a defaced, modified, or removed serial number

-
4. Damage, deterioration, or malfunction resulting from:
 - A. Accident, abuse, misuse, neglect, improper ventilation, fire, water, disaster, lightning, or other acts of nature, smoke exposure (cigarette or otherwise), unauthorized product modification (including use of an unauthorized mount), or failure to follow instructions supplied with the product
 - B. Repair or attempted repair by anyone not authorized by Runco
 - C. Any damage to the product due to shipment
 - D. Removal or installation of the product
 - E. Causes external to the product, such as electric power fluctuations or failure
 - F. Use of supplies or parts (including lamps) that are not purchased from Runco or do not meet Runco's specifications
 - G. Normal wear and tear
 - H. Expected lamp degradation and normal decrease in lamp output over a period of time or as the lamp is consumed
 - I. Customer caused defects, including but not limited to, scratched/defaced/altered plastics
 - J. Failure to follow maintenance procedures as outlined in the product's user guide where a schedule is specified for regular cleaning of the product
 - K. Opening the product and/or tampering with internal circuitry
 - L. Products lost, stolen or discarded
 - M. Any damage or dissatisfaction associated with latent images, "burnin," or any other damage determined by Runco to be the result of customer use patterns
 - N. Any other cause, which does not relate to a product defect in material or workmanship
 5. Removal, installation, and set-up service charges are excluded from the warranty.
 6. Black uniformity issues or other LCD issues associated with usage outside the Runco recommended guidelines and specifications for the product.
 7. Bright or dark sub pixels that are characteristic of LCD technology and considered by Runco to be acceptable and within Runco's manufacturing specifications.

Specifically, it is not uncommon for one or more sub pixels to become bright or dark during or after the manufacturing process. A bright sub pixel is one that remains in the on position, and a dark sub pixel is one that appears black or off. The sub pixels are usually hard to see and will not detract from the display quality or usability at normal viewing distance. The following are Runco's criteria for identifying bright or dark sub pixels that would be considered unacceptable: a) the number of bright or dark sub pixels; b) the location of the bright or dark sub pixels; c) the color of the bright sub pixels; and d) the Runco model size. If sub pixels have been identified as unacceptable by Runco the LCD will be deemed faulty and will be replaced if reported within the warranty period.

Other Terms and Conditions

1. If the defective product is not properly packaged and is damaged in transit during its return to Runco, you may be invoiced for either the repair costs, if repairable, or the MSRP of a replacement product and shipping costs incurred by Runco.
2. The repaired or replaced product will assume the remainder of your original product's warranty term or 90 days from the date the repaired or replaced product is shipped, whichever is longer.
3. If a replacement product is sent, the replacement becomes the property of the customer and the defective product becomes the property of Runco.

RuncoCare™ Extended Service Options

Runco offers extended and expanded service plans. For information on additional product protection, please ask your authorized Runco dealer, email serviceorders@runco.com or call (toll free) (800) 23RUNCO (800-237-8626).

Exclusion of Implied Warranties

RUNCO PROVIDES NO WARRANTIES, EXPRESS OR IMPLIED, EXCEPT THOSE EXPRESSLY PROVIDED IN THIS DOCUMENT. RUNCO EXPRESSLY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF TITLE, NONINFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Limitation of Liability; Exclusion of Damages

RUNCO'S MAXIMUM AGGREGATE LIABILITY IS LIMITED TO THE COST OF REPAIR, REPLACEMENT OR REFUND OF THE PRODUCT.

RUNCO WILL NOT BE LIABLE FOR DAMAGE TO OTHER PROPERTY OR FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL OR FINANCIAL LOSS, EVEN IF RUNCO IS AWARE OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF A REMEDY HAS FAILED OF ITS ESSENTIAL PURPOSE.

RUNCO WILL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, EXEMPLARY, SPECIAL, PUNITIVE OR ANY OTHER TYPE OF DAMAGES, WHETHER THE CLAIM IS BASED ON CONTRACT, TORT, PRODUCT LIABILITY, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER LEGAL OR EQUITABLE THEORY.

RUNCO WILL NOT BE LIABLE FOR ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

Effect of Local Law

This Limited Warranty gives you specific legal rights, and you may have other rights, which vary from locality to locality. Some localities do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

COPYRIGHT AND TRADEMARKS:

© Copyright 2011 Runco International, LLC ("Runco"). This document contains proprietary information protected by copyright, trademark and other intellectual property laws. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of Runco.

The trademarks reproduced in this Runco Owner's Manual and used on the Runco Products are either owned by Runco or are licensed by Runco. You may not reproduce or use the trademarks without the prior written consent of Runco.



Runco Products are manufactured under one or more of the following patents: US. Patent 6755540 and Other Patents Pending.

This product contains intellectual property and technology licensed from Panavision.



Important Safety Instructions

Thank you for your purchase of this quality Runco video product! For the best performance, please read this manual carefully as it is your guide through the menus and operation.

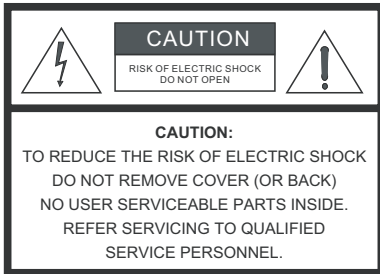

WARNING

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use the attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The +12V trigger only outputs 12Vdc signal for triggering. Do not connect to any other power input or output. This could cause damage to this unit.
16. Keep the packing material in case the equipment should ever need to be shipped.
17. The lamp becomes extremely hot during operation. Allow the projector to cool down for approximately 45 minutes prior to removing the lamp assembly for replacement.
18. Do not operate lamps beyond the rated lamp life. Excessive operation of lamps beyond rated life could cause them to explode in rare occasions.
19. Never look directly into the lens when the lamp is on.



IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D VIEWING:

Please read and make sure you understand the following safety information before using the product for viewing 3D content. Provide this information to the end users of this product and ensure that they understand it.



It is widely recognized that stereographic display devices can cause discomfort, including, without limitation, dizziness, nausea, headaches, eye fatigue and eye-strain, in some individuals. The 3D effect and experience will vary by individual, depending on a variety of factors, including his or her health and vision. Runco recommends that users take regular breaks when watching 3D video or playing games using stereoscopic displays. Discontinue use if any discomfort occurs. Parents of young children should ensure their children avoid extensive exposure to electronic stereographic entertainment.

The quality and appropriateness of the 3D screen materials onto which the image is projected and the quality of the 3D content being displayed both have a significant and noticeable impact on the overall 3D experience. A properly-calibrated projection system, including glasses and an optimized third-party screen, displaying high-quality 3D content is the best formula for immersive and comfortable 3D experiences. Please refer to the remainder of this manual for proper projector installation and usage instructions.

The glasses that accompany this product are not safe to use as sunglasses, protective eyewear or any use outdoors or other than only in conjunction with the proper operation of the Runco product with which they are sold. It is common to dim the lights in a theater. Using 3D glasses and the immersive imagery of stereoscopic imagery can increase the risk of tripping or falling the dark. Special care should be taken.

Do not tilt your head while using the 3D glasses.

Compliance Information

DECLARATION OF CONFORMITY:

Manufacturer's Name: Runco International, LLC

Manufacturer's Address: 1195 NW Compton Drive, Beaverton, OR 97006-1992

hereby declares that the Products' Model Numbers:

D-113d and D-113d/CineWide with AutoScope

conform with the provisions of:

Council Directive 2004/108/EC on Electromagnetic Compatibility;

EN 55022 "Limits and methods of measurements of radio interference characteristics of information technology equipment" 1998;

EN 55024 "Limits and methods of measurements of immunity characteristics of information technology equipment" 1998;

Including:

- EN 61000-4-2 "Electromagnetic compatibility (EMC) Part 4: Testing and measurement techniques Section 2: Electrostatic discharge immunity test"
- EN 61000-4-3 "Electromagnetic compatibility (EMC) Part 4: Testing and measurement techniques Section 3: Radiated, Radio-Frequency, Electromagnetic Field Immunity Test"
- EN 61000-4-4 "Electromagnetic compatibility (EMC) Part 4: Testing and measurement techniques Section 4: Electrical fast transient/burst immunity test"
- EN 61000-4-5 "Electromagnetic compatibility (EMC) Part 4: Testing and measurement techniques Section 5: Surge immunity test"
- EN 61000-4-6 "Electromagnetic compatibility (EMC) Part 4: Testing and measurement techniques Section 6: Conducted disturbances induced by radio-frequency fields immunity test"
- EN 61000-4-8 "Electromagnetic compatibility (EMC) Part 4: Testing and measurement techniques Section 8: Conducted disturbances induced by power frequency magnetic fields immunity test"
- EN 61000-4-11 "Electromagnetic compatibility (EMC) Part 4: Testing and measurement techniques Section 11: Voltage dips, short interruptions and voltage variations immunity tests"

And:

- EN 61000-3-2 "Electromagnetic compatibility (EMC) Part 3, Section 2: Limits for harmonic current emissions (equipment input current up to and including 16 A per phase)" 2000;
- EN 61000-3-3 "Electromagnetic compatibility (EMC) Part 3, Section 3: Limitations of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems, for equipment with rated current up to and including 16 A and not subject to conditional connection" 1995;

Council Directive 2006/95/EC and amended by M1 and C1 on Low Voltage Equipment Safety;

EN 60950 "Safety of information technology equipment, including electrical business equipment"

The Technical Construction file required by this Directive is maintained at the corporate headquarters of Runco International, LLC, located at 1195 NW Compton Drive, Beaverton, OR 97006-1992.

Date of Declaration: October 2011

FCC PART 15:

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INDUSTRY CANADA (ICES-003):

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

PRODUCT DISPOSAL:

The Product contains small amounts of tin, lead and/or mercury. Disposal of these materials may be regulated due to environmental considerations.

IMPORTANT RECYCLE INSTRUCTIONS



Lamp(s) inside this product contain mercury. This product may contain other electronic waste that can be hazardous if not disposed of properly. Recycle or dispose in accordance with local, state, or federal Laws.

For more information, contact the Electronic Industries Alliance at WWW.EIAE.ORG.

For lamp specific disposal information check WWW.LAMPRECYCLE.ORG.

DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT (Applicable throughout the European Union and other European countries with separate collection programs)



This symbol found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Table of Contents

RuncoCare™ Standard Two Year Limited Warranty	iii
Important Safety Instructions	vii
Compliance Information	ix
1. Introduction	1
About This Manual	1
Target Audience	1
If You Have Comments About This Manual.....	1
Textual and Graphic Conventions	1
Using This Manual	2
Description, Features and Benefits	3
Key Features and Benefits	4
Parts List	5
2. System Overview	7
Projector	8
D-113d Input Panel	9
Primary DHD Controller	11
Front Panel Layout.....	11
Rear Panel Layout	13
Secondary DHD Controller	15
3Dimension Processor	16
DHD Controller Remote Control Unit	18
3. Installation	21
Remote Control	21
Notes on Batteries	21
Notes on Remote Control Operation	22
Quick Setup	22

Installation Considerations	23
Pre-Wiring for 3D: Run Dual HDMI Cables	23
Installation Type.....	23
Ambient Light	24
Throw Distance.....	24
Vertical and Horizontal Position.....	25
Vertical and Horizontal Lens Shift.....	26
Audio/Video Synchronization Issues.....	27
Ventilation.....	28
Other Considerations.....	28
Installing the Optional CineWide with AutoScope Lens Motors	29
Assembling the Projection System	30
Attaching the Spacer Legs to the Top Projection Unit	30
Attaching the Top and Bottom Projection Units to Each Other	31
Mounting the D-113d	32
Adjusting the Feet.....	32
Installing the Primary Projection Lenses	32
Mounting the DHD Controllers and 3Dimension Processor	34
System Interconnections	35
Connecting the Primary and Secondary DHD Controllers to the Projector.....	35
Connecting the Primary and Secondary DHD Controllers to Each Other and to the 3Dimension Processor	37
Connecting an Audio Processor or Secondary Display Device to the Primary DHD Controller (Optional)	39
Additional Connections to the Primary DHD Controller (Optional)	40
Connecting Source Components to the 3Dimension Processor	44
Connecting to AC Power	48
Power-Up Sequence and Optical Alignment Procedure	49
Turning on the Power	51
Adjusting the Focus, Zoom and Position of the Primary Lenses	52
Adjusting the Picture Orientation.....	53
Adjusting the Image Geometry.....	54
Installing and Adjusting the CineWide Anamorphic Lens	56
Working With the Lamp	60

4. Operation	61
Using the On-Screen Menus	61
Main Menu.....	64
Input Source.....	64
Aspect Ratio	64
Screen.....	67
Picture	67
Input Position.....	71
Memory Presets	73
3D Processing	74
Sleep Timer	75
Information	76
Calibration	77
Service	86
5. Maintenance and Troubleshooting	97
Lamp Replacement	97
Troubleshooting Tips	99
6. External Control	103
Serial Communications	103
RS-232 Connection and Port Configuration	103
Command Format	103
Response Format	104
Command and Response Examples	105
Serial Command List.....	105
Using Discrete IR Codes	118
IR Command Protocol	118
IR Command List.....	120
Using HDMI CEC Messages	122
CEC Command List.....	122
7. Specifications	125
D-113d Projector Specifications	125
DHD Controller Specifications	127
3Dimension Processor Specifications	128
D-113d Dimensions	129
D-113d Dimensions with CineWide with AutoScope Assembly	130
Supported Timings	131

Notes:

List of Figures

2-1. D-113d Projection System Block Diagram.....	7
2-2. D-113d Top/Rear/Front View	8
2-3. D-113d Input Panel	9
2-4. Primary DHD Controller Front Panel.....	11
2-5. Primary DHD Controller Rear Panel	13
2-6. Secondary DHD Controller Front and Rear Panels.....	15
2-7. 3Dimension Processor Front and Rear Panel.....	16
2-8. DHD Controller Remote Control	18
3-1. Estimating Throw Distance	24
3-2. Projector Placement	25
3-3. Vertical Lens Shift (EXAMPLE ONLY).....	26
3-4. Horizontal Lens Shift (EXAMPLE ONLY).....	26
3-5. Ventilation Requirements for Enclosure Mounting	28
3-6. Attaching the AutoScope Lens Motor to the Projection Unit	29
3-7. Attaching the Spacer Legs to the Top Projection Unit.....	30
3-8. Securing the Top and Bottom Projection Units to Each Other.....	31
3-9. Attaching the Rack Mounting Hardware	34
3-10. RS-232 Connection from the Primary DHD Controller to the Projector.....	35
3-11. Connecting the Primary and Secondary DHD Controllers to the Projector	36
3-12. DHD Controller/3Dimension Processor Interconnection.....	37
3-13. Audio Processor Connection to Primary DHD Controller.....	39
3-14. RS-232 Control System Connection to Primary DHD Controller	40
3-15. Connecting 12-volt Trigger Outputs.....	41
3-16. External IR Receiver Connection.....	42
3-17. Ethernet Network Connection to Primary DHD Controller	43
3-18. HDMI Source Connections	44
3-19. Component Video Source Connections.....	45
3-20. RGBHV Source Connections.....	46
3-21. SCART RGBS Source Connections.....	47
3-22. Composite Video Source Connections	48
3-23. Keystone and Pincushion Distortion	54
3-24. Image Alignment Controls	55
3-25. Anamorphic Lens Mounting Assembly - Exploded View	56
3-26. Attaching the Anamorphic Lens to the Lens Ring	57

4-1. D-113d OSD Menu Structure	62
4-2. Typical PLUGE Pattern for Adjusting Brightness	68
4-3. Typical Gray Bar Pattern for Adjusting Contrast	69
4-4. Typical Color Bar Pattern for Adjusting Color Saturation and Tint.....	69
4-5. Typical Test Pattern for Adjusting Sharpness	71
4-6. Overscan Modes	72
4-7. CIE 1931 Chromaticity Diagram	78
5-1. Opening the Lamp Door	97
6-1. RC5 Message Format	119
7-1. D-113d Dimensions.....	129
7-2. D-113d/CineWide with AutoScope Dimensions	130

1. Introduction

This Owner's Manual describes how to install, set up and operate the Runco D-113d Projection System.

Throughout this manual, the Runco D-113d Projection System is referred to as the "D-113d."

Runco has prepared this manual to help custom audio/video installers and end users get the most out of the D-113d.

Runco has made every effort to ensure that this manual is accurate as of the date it was printed. However, because of ongoing product improvements and customer feedback, it may require updating from time to time. You can always find the latest version of this and other Runco product manuals on-line, at www.Runco.com.

Runco welcomes your comments about this manual. Send them to support@Runco.com.

Text Conventions: The following conventions are used in this manual, in order to clarify the information and instructions provided:

- Remote and built-in keypad button identifiers are set in upper-case bold type; for example, "Press **EXIT** to return to the previous menu."
- Computer input (commands you type) and output (responses that appear on-screen) is shown in monospace (fixed-width) type; for example: "To change the aspect ratio to Letterbox, type `LETTERBOX <Enter>`."
- All keys with functional names are initial-capped, set in bold type and enclosed in angle brackets. These keys are the following: **<Enter>**, **<Spacebar>**, **<Control>**, **<Esc>** and **<Tab>**.
- **<Enter>** indicates that you may press either the RETURN or ENTER key on your keyboard if it has both keys.

In addition to these conventions, underlining, boldface and/or italics are occasionally used to highlight important information, as in this example:



Note

*A carriage return **must** be used after each command or string.*

1.1

About This Manual

◀ Target Audience

◀ If You Have Comments About This Manual...

◀ Textual and Graphic Conventions

Graphic Conventions: These symbols appear in numerous places throughout the manual, to emphasize points that you must keep in mind to avoid problems with your equipment or injury:



Tip

TIPS highlight time-saving short cuts and helpful guidelines for using certain features.



Note

NOTES emphasize text with unusual importance or special significance. They also provide supplemental information.



Caution

CAUTIONS alert users that a given action or omitted action can degrade performance or cause a malfunction.



WARNING

WARNINGS appear when a given action or omitted action can result in damage to the equipment, or possible non-fatal injury to the user.



DANGER!

DANGER appears when a given action can cause severe injury or death.

1.2 Using This Manual

Use the following table to locate the specific information you need in this manual.

If you need...	... Turn to page:
Information about obtaining service	iv
General information about the D-113d Projection System	3
Installation instructions	21
First-time configuration instructions	52
Advanced configuration instructions	77
Troubleshooting tips	99
Product specifications	125

Offering the best and brightest in high-end luxury projection, the 3Dimension™ D-113d expands Runco's line of custom-built personal cinema projectors. The D-113d pairs Runco's unique, award-winning Constant Stereoscopic Video™ (CSV) approach with the optical filters and glasses of the Panavision 3D System® – which has been developed for premiere commercial cinemas. The result is the brightest CSV projection in the world, and an exceptional 3D, as well as 2D, experience for private theaters.

The Runco D-113d offers exceptional product performance with a state-of-the-art product that enables an extraordinary cinematic experience because the product and room are custom built with the finest components to exactly match owners' specifications. The D-113d employs a highly-efficient illumination system consisting of four HPM lamps, which offer brightness and redundancy. Combined with the unique and flexible engine design, the D-113d provides better, richer color performance for pristine color accuracy. These benefits combine into a brilliant image that provides a spectacular color gamut and contrast, as well as unmatched color brightness, even on the largest screen sizes.

Selecting from multiple lens options that allow the flexibility for seamless integration into the most sophisticated personal cinemas, each D-113d projector is custom built to suit the exact requirements specified for every client. The D-113d features 1080p HD native resolution 3-chip system for the finest projection image and 16:9 native aspect ratio to match all digital programming including seamlessly switching aspect ratios for both 2D and 3D content for all media, including broadcast, film, sports and gaming.

For unparalleled reproduction of Hollywood's 2.35:1 CinemaScope standard, the D-113d is available with Runco's legendary CineWide™ with AutoScope™ technology. With Runco CineWide, the projection system is able to use the full pixel array, thereby producing a 2.35:1 image with enhanced resolution and increased brightness. No resolution or image area is lost to those black bars that contain no picture information. CineWide with AutoScope provides a motorized, remote-controlled anamorphic lens mechanism.

**Note**

CineWide requires the use of a 2.35:1 (or similar aspect ratio), "superwide" format screen.

1.3 Description, Features and Benefits

- Key Features and Benefits** ➤ The D-113d Projection System offers these key features and benefits:
- A first-of-its-kind, no-compromise 3D projection solution
 - DLP system using three, high-performance Digital Micromirror Device (DMD) chips
 - Runco's proprietary Constant Stereoscopic Video™ (CSV™) architecture is an incomparable approach to 3D visualization, paired with the spectral filtration technology of the Panavision® 3D System
 - Runco's 3Dimension Series pair with passive glasses, with a design unique to Runco formulated for precise stereo separation
 - Stellar performance in both 2D and 3D modes, with native 1080p DLP 16x9 performance
 - Incredibly efficient illumination system, the biggest Runco solution to accommodate screens up to 420 inches
 - Cinema-quality color: with the most accurate and exceptionally broad color gamuts
 - Multiple lens options including compatibility with Runco's award-winning CineWide™ with AutoScope®
 - Ships with Runco's DHD controller featuring ViVix™ video processing for exceptional scaling, analog to digital signal conversion, and control via IR or RS-232
 - New industrial design with Runco ColourPalette™ custom options
 - Bundled with two years of Runco PremierCare™ service program

Your D-113d is shipped with the following items. If any items are missing or damaged, please contact your Runco dealer or Runco Customer Service at (800) 23RUNCO.

◀ **Parts List**

- D-113d Projection System:
 - Projection Units (2)
 - Two (2), DHD Controller units (Primary and Secondary)
 - 3Dimension Processor
- Remote Control Unit and two (2), AAA-size batteries
- AC power cords for projector (with ferrite sleeve, rated at 15 amps) (2)
- AC Power Cords for DHD Controller units and 3Dimension Processor (3)
- **Cables and Adapters for Connecting the DHD Controllers to Each Other and to the 3Dimension Processor:**
 - HDMI-to-HDMI Cable, 1.6 feet (0.5 meters) (2)
 - BNC-to-BNC Cable, 11.8 inches (0.3 meters) (10)
 - RCA-to-RCA Cable, 11.8 inches (0.3 meters) (2)
 - RS-232 Cable (Null-modem), DB-9 female to DB-9 female, 11.8 inches (0.3 meters)
 - RJ-11 Telephone Cable, 50 feet (15.24 meters) (2)
 - Serial Port Adapter, RJ-11 Female to DB-9 Male (2)
- Panavision™ 3D Glasses (6 pairs)
- HDMI-to-HDMI Cables (2), sold separately (refer to **Optional Accessories**, below)
- Rack-mount hardware for the DHD Controllers and 3Dimension Processor
- Spacer Legs (4)
- 5.0-mm Hex wrench (for attaching the Spacer Legs to the top and bottom projection units)
- Runco D-113d Quick Setup Guide

Optional Accessories:

- CineWide™ with AutoScope™ system (secondary anamorphic lens and motorized mount)
- Additional 3D glasses
- HDMI-to-HDMI Cable, length specified at time of order:
 - 16.4 feet (5.0 meters) (part number 903-1010-00)
 - 24.6 feet (7.5 meters) (part number 903-1011-00)
 - 32.8 feet (10.0 meters) (part number 903-1012-00)
 - 49.2 feet (15.0 meters) (part number 903-1013-00)
 - 65.6 feet (20.0 meters) (part number 903-1014-00)

Notes:

2. System Overview

The D-113d Projection System consists of the following components:

- The projector, consisting of two discrete optical engines stacked one on top of the other to provide either two-dimensional (2D) or three-dimensional (3D) content.
- A Primary DHD Controller unit that provides a video signal and on-screen display (OSD) menu to the “left eye” optical engine of the projector. In addition, the Primary DHD Controller controls all of the other system components (projector, Secondary DHD Controller and 3Dimension Processor), in response to user input via its infrared (IR) remote control unit or front-panel keypad, an external control system or HDMI Consumer Electronics Control (CEC) messages.
- A Secondary DHD Controller unit that provides a video signal and OSD menu to the right optical engine of the projector.
- The 3Dimension Processor, which accepts video signals from multiple analog and digital sources, multiplexes them and distributes them to the Primary and Secondary DHD Controllers.

Figure 2-1 shows how these components connect to and interact with each other. The following sections describe each one in detail.

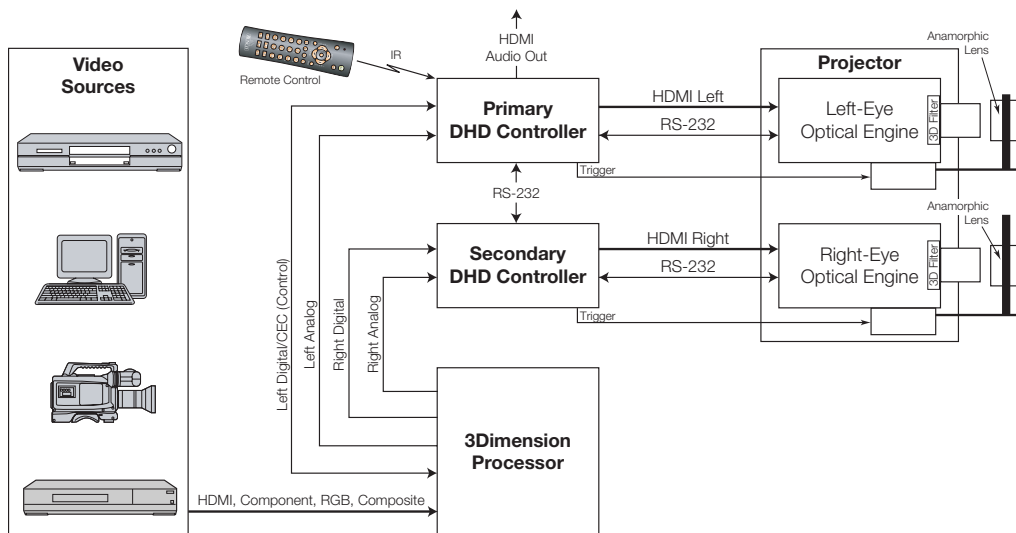


Figure 2-1. D-113d Projection System Block Diagram

2.1 Projector

The standard D-113d projector, shown in Figure 2-2, consists of two discrete optical engines stacked one on top of the other to provide either three-dimensional (3D) or two-dimensional (2D) content.

For 3D content, each engine produces images for one eye. Two dichroic comb filters – installed between the lamp and the lens in each engine – parse the visible light spectrum into 10 narrow, non-overlapping bands. Five of these are directed to the left eye and five are directed to the right eye. The projector superimposes the output from one engine onto that from the other engine to produce an extremely bright and focused image.

The left-eye and right-eye images are reflected by the screen back toward the viewing area and kept isolated by a second set of filters built into the 3D glasses worn by the viewer. (Each eye sees only those wavelengths sent to it.)

The “left-eye” (top) optical engine receives an HDMI video signal from the Primary DHD Controller. The “right-eye” (bottom) optical engine receives an HDMI video signal from the Secondary DHD Controller.

Figure 2-2 shows the key D-113d components.

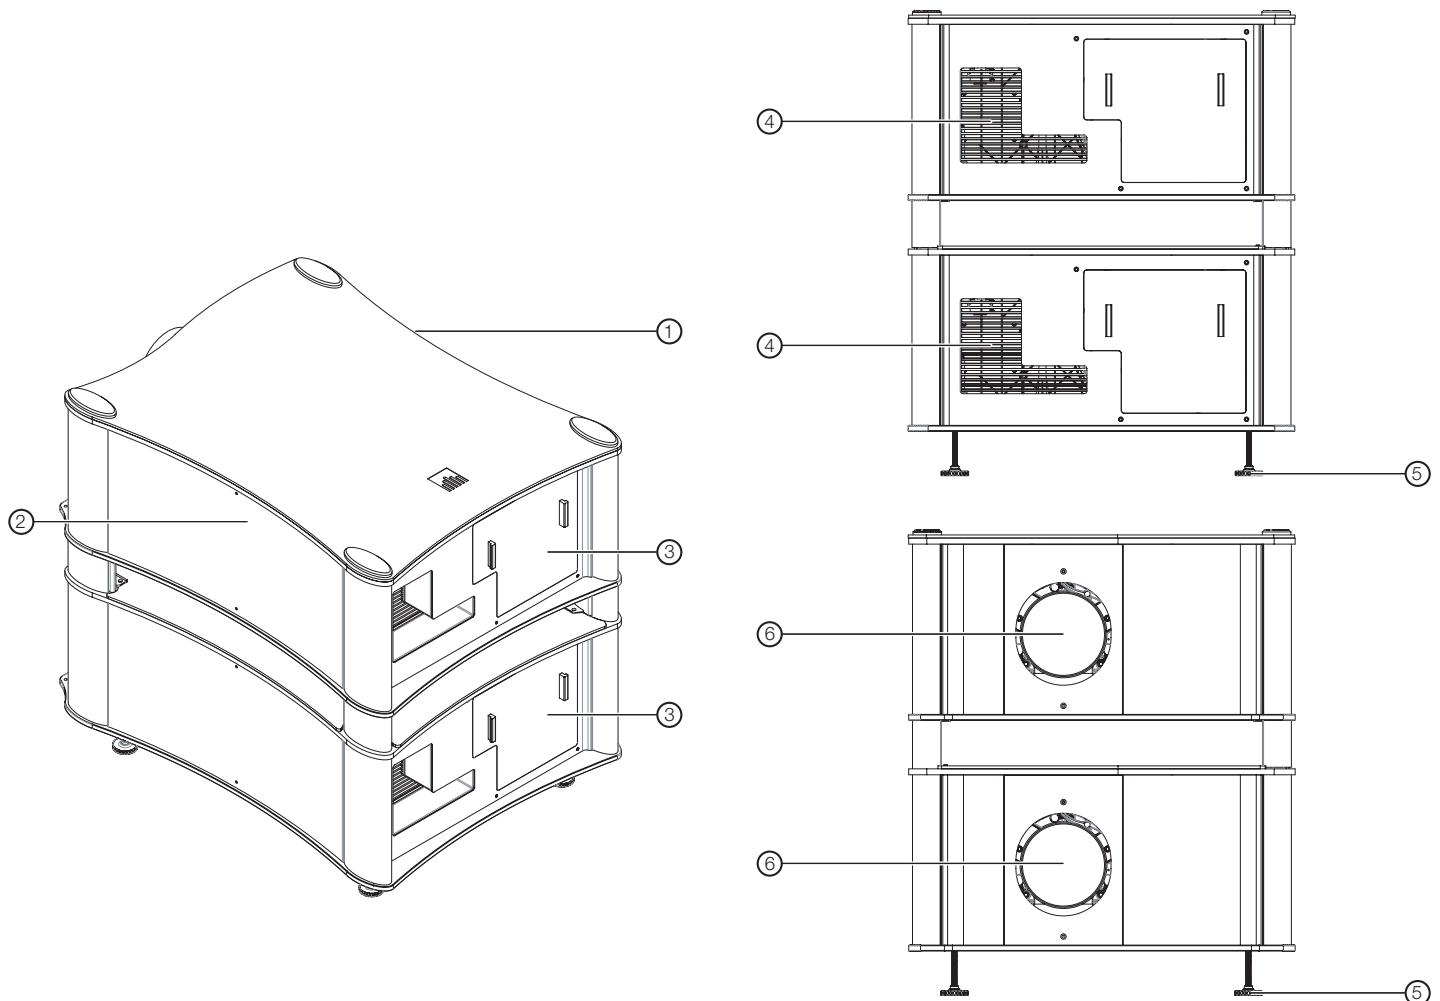


Figure 2-2. D-113d Top/Rear/Front View

1. RIGHT (INTAKE) SIDE PANEL

The right side panel is perforated to allow cool air to enter the projector.

2. LEFT (EXHAUST) SIDE PANEL

The left side panel is perforated to allow warm air to exit the projector. Removing this panel provides access to the lamps.

3. INPUT PANEL COVER

Removing this panel provides access to the projector input panel. For more information, refer to **D-113d Input Panel** on page 9.

4. REAR EXHAUST VENT

Warm air exits the projector through this vent. Ensure that it is not obstructed in any way.

5. ADJUSTABLE FEET (4)

Located on the underside of the projector are four adjustable feet. Raise or lower these feet when positioning the projector to ensure it is level on all sides so the displayed image will appear rectangular without any keystone.

6. PROJECTION LENS

Figure 2-3 shows the D-113d rear input panel. The top and bottom input panels are labeled “Primary” and “Secondary” respectively, but are otherwise identical.

2.2

D-113d Input Panel

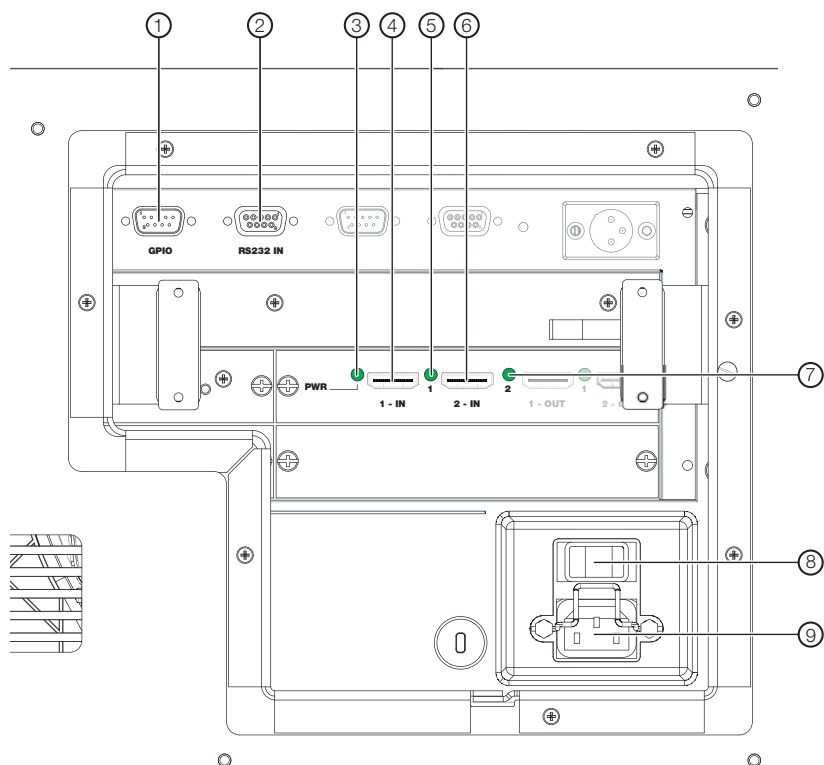


Figure 2-3. D-113d Input Panel

1. **GPIO**
Not used.
2. **RS232 IN**
Connect the RS-232 output from the DHD Controller here, using the provided RJ11-to-DB9 adapter and communication cable.
3. **PWR LED**
Lights green to indicate that power is applied and the HDMI input module is initialized. During normal operation, always on.
4. **1 - HDMI Input**
HDCP-compliant digital video input. Connect the HDMI output from the DHD Controller to this input (see Figure 2-5).
5. **1 LED**
Lights green to indicate that a valid digital signal from the DHD Controller is present.
6. **2 - HDMI Input**
Not used.
7. **2 LED**
Not used; always off.
8. **MAIN POWER SWITCH**
Disconnects or applies power to the D-113d.
9. **POWER INPUT (100 to 240 VAC)**
Connect the projector to power here.



WARNING

Use ONLY the AC power cord shipped with the D-113d for this purpose (the one with the ferrite sleeve). Doing otherwise creates a fire hazard risk.

The Primary DHD Controller provides a video signal and OSD menu to the left-eye optical engine of the projector. It controls the other D-113d system components in response to user input via the following interfaces:

- Front-panel keypad
- IR remote control unit
- HDMI CEC messages
- RS-232 serial commands
- Ethernet

2.3 Primary DHD Controller

Figure 2-4 shows the controls and indicators on the Primary DHD Controller front panel; the paragraphs that follow describe them.

◀ Front Panel Layout

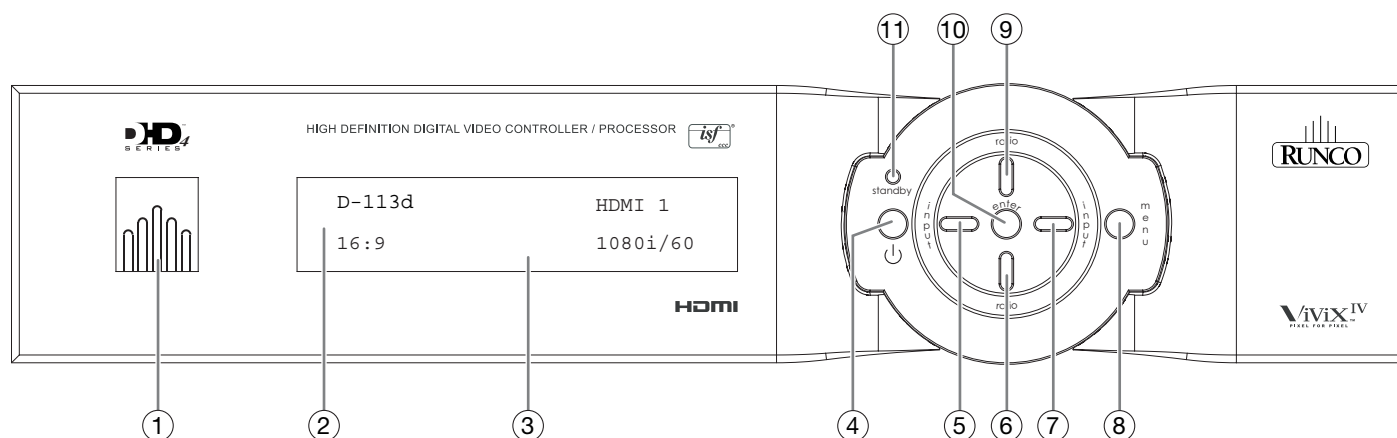


Figure 2-4. Primary DHD Controller Front Panel

1. **RUNCO ICON**
Lights blue to indicate that the controller is on or powering up.
2. **IR SENSOR**
Receives IR commands from the remote control.
3. **VACUUM FLUORESCENT DISPLAY**
Can be used instead of the On-Screen Display (OSD). Displays currently-selected menu or – if no menu is selected – the connected display device model, current source, input resolution and aspect ratio.
4. **ON/STANDBY BUTTON**
Press once to toggle from standby mode to on mode. Press it again to return to standby mode. For a discrete on or off command, you can use the direct access buttons on the remote control.
5. **LEFT BUTTON**
Used to direct-select inputs or move the menu cursor left in the OSD. When no menu is present on-screen, the **LEFT** button toggles through the different sources, in this order:
HDMI 4 - HDMI 3 - HDMI 2 - HDMI 1 - SCART - HD 2 - HD 1 - Component - Composite 3 - Composite 2 - Composite 1
6. **DOWN BUTTON**
Use to direct-select aspect ratios or move the menu cursor down in the OSD. When no menu is present on-screen, this button toggles through aspect ratios in the following order:
16:9 - 4:3 - Letterbox - VirtualWide - Cinema - Virtual Cinema - Native
7. **RIGHT BUTTON**
Used to direct-select inputs or move the menu cursor right in the OSD. When no menus are present on-screen, the **RIGHT** button toggles through the different sources, in this order:
Composite 1 - Composite 2 - Composite 3 - Component - HD 1 - HD 2 - SCART - HDMI 1 - HDMI 2 - HDMI 3 - HDMI 4
8. **MENU BUTTON**
Press the **MENU** button to bring up the main menu, or to exit the current menu and return to the previous one.
9. **UP BUTTON**
Use to direct-select aspect ratios or move the menu cursor up in the OSD. When no menus are present on-screen, the **UP** button toggles through aspect ratios in the following order:
Native - Virtual Cinema - Cinema - VirtualWide - Letterbox - 4:3 - 16:9
10. **ENTER BUTTON**
When an item is highlighted on the OSD, the **ENTER** button selects the item.
11. **STANDBY LED**
Lights amber when the DHD Controller is in standby mode; otherwise it is off.

Figure 2-5 shows the rear connector panel on the Primary DHD Controller.

◀ Rear Panel Layout

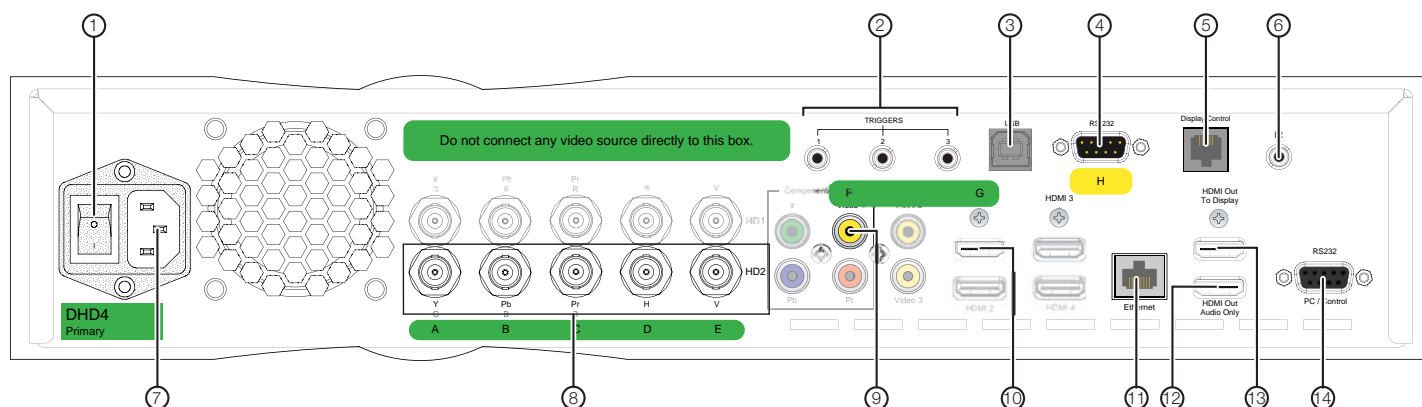


Figure 2-5. Primary DHD Controller Rear Panel

1. **MAIN POWER SWITCH**
Disconnects or applies power to the DHD Controller.
2. **TRIGGERS**
Connection for up to three (3), 12-volt trigger-controlled devices such as retractable screens or screen masks. Output current is limited to 250 milliamperes (mA).
3. **USB**
A standard, USB Series “B” connection to a personal computer, for performing software upgrades and other service procedures.
4. **RS-232 (To Accessory Box)**
A male, 9-pin D-sub connector for interfacing with the Secondary DHD Controller. (Use a “null-modem” serial cable for this connection.)
5. **Display Control**
Connect this to the RS-232 input on the left-eye (top) optical engine on the D-113d projector.
6. **IR**
Wired input from a Niles- or Xantech-compatible, infrared (IR) repeater system. It is a 3.5-mm, mini phono jack, wired as follows:
Ring = No connection
Tip = IR Input
Sleeve = Ground
7. **POWER INPUT (100 to 240 VAC)**
Connect the DHD Controller to power here.
8. **HD2 Input (5 x Analog BNCs)**
Connect the HD 2 input to the Left Analog output on the 3Dimension Processor.
The HD 1 input is not used with the D-113d. Connect your Component/RGBHV sources to the 3Dimension Processor.
9. **Video 1 Input (RCA)**
Connect the Video 1 input to the Left Composite video output on the 3Dimension Processor.
The Video 2 and Video 3 inputs are not used with the D-113d. Connect your Composite video sources to the 3Dimension Processor.

10. **HDMI 1 Input (Digital)**

Connect the HDMI 1 input to the Left HDMI output on the 3Dimension Processor.

The HDMI 2, HDMI 3 and HDMI 4 inputs are not used with the D-113d.

Connect your HDMI sources to the 3Dimension Processor.

11. **Ethernet**

A female RJ-45 connector for wired network communications.

12. **HDMI Out (Audio Only)**

Connect this output to an audio control system to pass through HDMI audio.



Note

The DHD Controller does not transmit HDMI CEC control messages from the "HDMI Audio Out" connector.

13. **HDMI Out (To Display)**

Connect this to the HDMI input on the "left eye" (top) optical engine on the D-113d projector.

14. **RS-232 (PC / Control)**

A female, 9-pin D-sub connector for interfacing with a PC or automation/control system.

The Secondary DHD Controller provides a video signal and OSD menu to the right-eye optical engine of the projector.

Figure 2-6 shows the Secondary DHD Controller front and rear panels.

2.4 Secondary DHD Controller

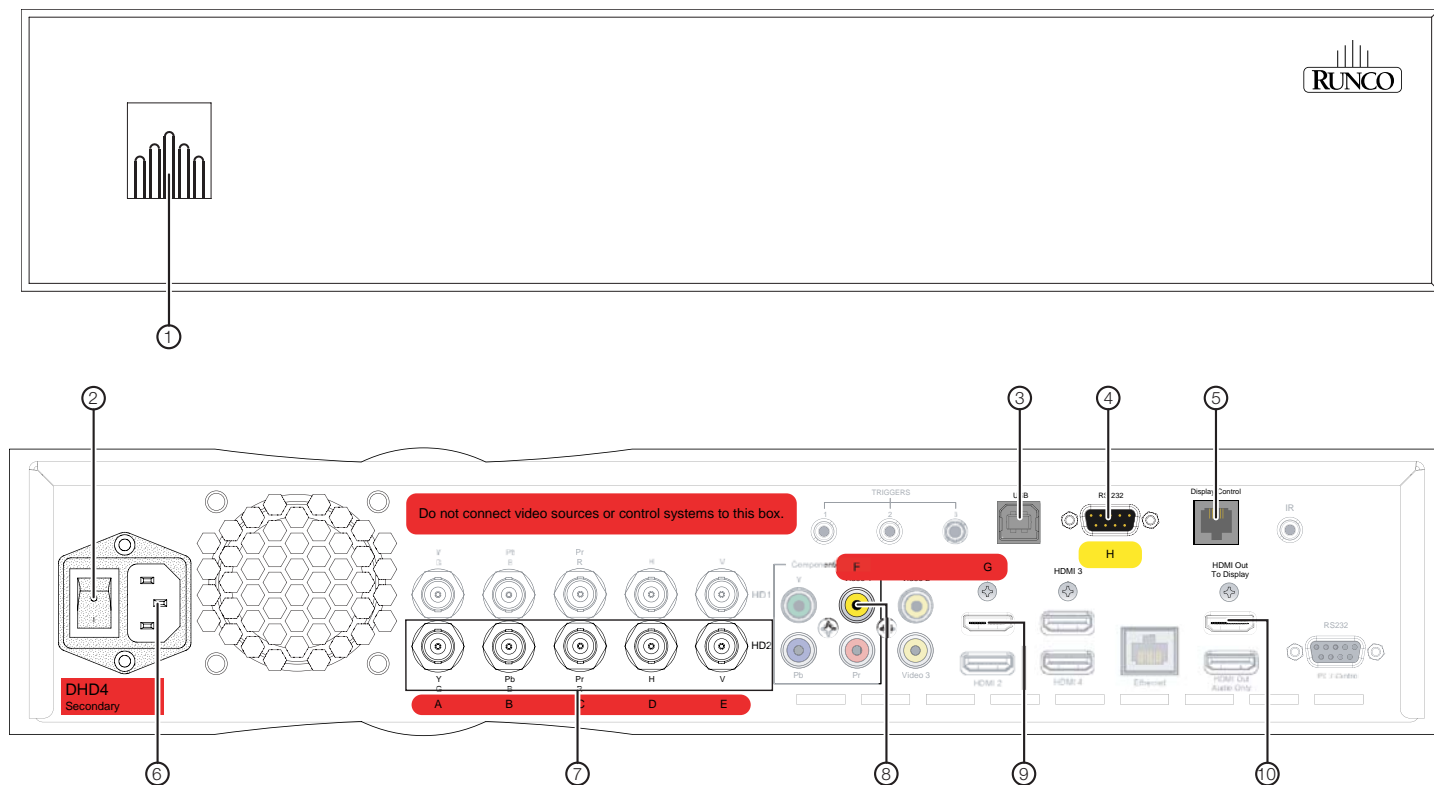


Figure 2-6. Secondary DHD Controller Front and Rear Panels

1. **RUNCO ICON**
Lights blue to indicate that the controller is on or powering up.
2. **MAIN POWER SWITCH**
Disconnects or applies power to the DHD Controller.
3. **USB**
A standard, USB Series “B” connection to a personal computer, for performing software upgrades and other service procedures.
4. **RS-232 (To Accessory Box)**
A male, 9-pin D-sub connector for interfacing with the Primary DHD Controller. (Use a “null-modem” serial cable for this connection.)
5. **Display Control**
Connect this to the RS-232 input on the “right eye” (bottom) optical engine on the D-113d projector.
6. **POWER INPUT (100 to 240 VAC)**
Connect the DHD Controller to power here.

7. HD2 Input (5 x Analog BNCs)

Connect the HD 2 input to the Right Analog output on the 3Dimension Processor.
The HD 1 input is not used with the D-113d. Connect your Component/RGBHV sources to the 3Dimension Processor.

8. Video 1 Input

Connect the Video 1 input to the Right Composite video output on the 3Dimension Processor.

The Video 2 and Video 3 inputs are not used with the D-113d. Connect your Composite video sources to the 3Dimension Processor.

9. HDMI 1 (Digital)

Connect the HDMI 1 input to the Right HDMI output on the 3Dimension Processor.

The HDMI 2, HDMI 3 and HDMI 4 inputs are not used with the D-113d. Connect your HDMI sources to the 3Dimension Processor.

10. HDMI Out (To Display)

Connect this to the HDMI input on the “right eye” (bottom) optical engine on the D-113d projector.

2.5 3Dimension Processor

Figure 2-7 shows the controls and indicators on the 3Dimension Processor front panel; the paragraphs that follow describe them.

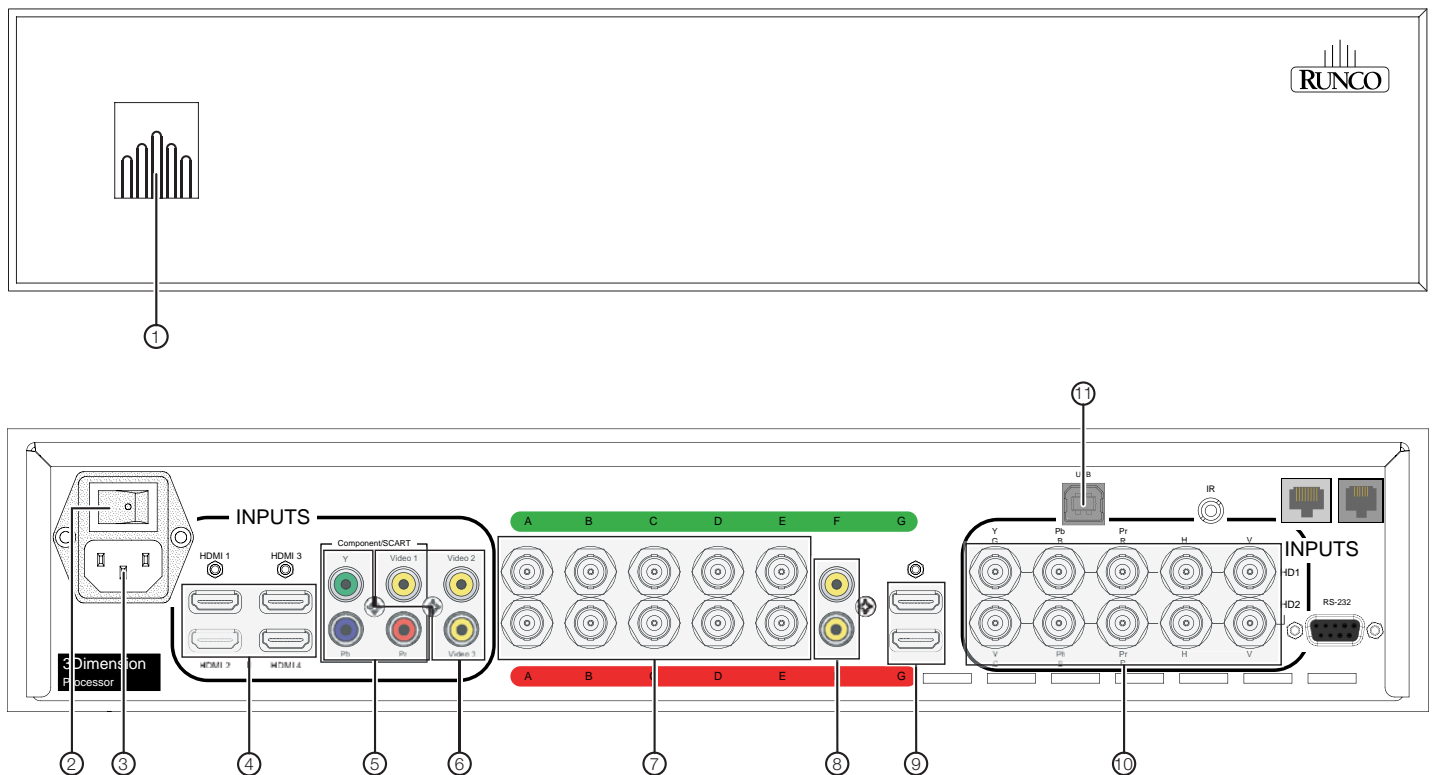


Figure 2-7. 3Dimension Processor Front and Rear Panel

-
1. **RUNCO ICON**
Lights blue to indicate that the 3Dimension Processor is on or powering up.
 2. **MAIN POWER SWITCH**
Disconnects or applies power to the 3Dimension Processor.
 3. **POWER INPUT (100 to 240 VAC)**
Connect the 3Dimension Processor to power here.
 4. **HDMI 1 / HDMI 2 / HDMI 3 / HDMI 4 In (Digital)**
HDCP-compliant digital video inputs for connecting an HDMI or DVI source.
 5. **Component / SCART In (3 x RCA connectors)**
SD/HD input for connecting SDTV, EDTV or HDTV component video sources. Also provides RGB input for SCART RGBS sources.
 6. **Video 1 / Video 2 / Video 3 In**
Standard, composite video inputs for connecting a VCR, camcorder or other composite video source. The Video 1 input also provides composite sync input for SCART RGBS sources.
 7. **LEFT / RIGHT Analog Out (5 x BNCs)**
Two outputs (five BNCs per output) that connect to the HD2 input on the Primary and Secondary DHD Controllers.
 8. **LEFT / RIGHT Composite Video Out (RCA connector)**
Two standard, composite video outputs that connect to the Composite 1 video input on the Primary and Secondary DHD Controllers.
 9. **LEFT / RIGHT HDMI Out**
Two HDCP-compliant digital video outputs that connect to the HDMI 1 input on the Primary and Secondary DHD Controllers. The Left HDMI output also provides a CEC channel for control messages.
 10. **HD1 / HD2 In (5 x Analog BNCs)**
Two inputs (five BNCs per input) for connecting standard-definition (SD = 480i/576i), enhanced-definition (ED = 480p/576p) or high-definition (HD = 720p/1080i/1080p) component video sources, or RGBHV sources such as personal computers.
 11. **USB**
A standard, USB Series "B" connection to a personal computer, for performing software upgrades and other service procedures.

2.6 DHD Controller Remote Control Unit

Figure 2-8 shows the D-113d remote control, and the paragraphs that follow describe its functionality.

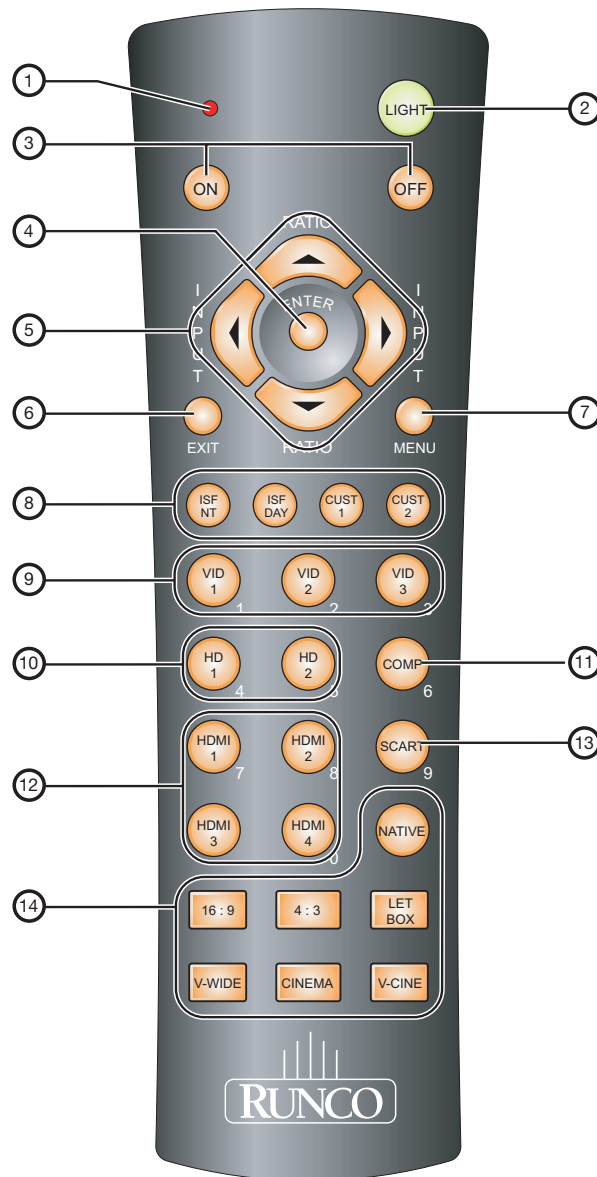


Figure 2-8. DHD Controller Remote Control

1. **IR OUTPUT INDICATOR**

Lights when a button is pressed to indicate that an IR signal is being transmitted.

2. **LIGHT**

Press to illuminate the buttons.

3. **ON / OFF**

Press to turn the DHD Controller and projector on or off.

4. **ENTER**

Press to select a highlighted menu item or confirm a changed setting.

5. **Cursor Buttons (▲, ◀, ▼, ▶)**

Use these buttons to select items or settings, adjust settings or switch display patterns.

When no menu is present on-screen, the **UP** and **DOWN** buttons toggle through the available aspect ratios, in this order:

UP Button = Native - Virtual Cinema - Cinema - VirtualWide - Letterbox - 4:3 - 16:9

DOWN Button = 16:9 - 4:3 - Letterbox - VirtualWide - Cinema - Virtual Cinema - Native



Note

For more information about aspect ratios, refer to Table 4-1.

Likewise, the **LEFT** and **RIGHT** buttons toggle through the different source inputs, in this order:

LEFT Button = HDMI 4 - HDMI 3 - HDMI 2 - HDMI 1 - SCART - HD 2 - HD 1 -

Component - Composite 3 - Composite 2 - Composite 1

RIGHT Button = Composite 1 - Composite 2 - Composite 3 - Component - HD 1 -

HD 2 - SCART - HDMI 1 - HDMI 2 - HDMI 3 - HDMI 4

6. **EXIT**

Press this button to exit the current menu and return to the previous one.

7. **MENU**

Press this button to show or hide the OSD controls.

8. **Memory Preset Buttons:**

ISF NIGHT

Press to recall settings for the current input from the "ISF Night" memory preset.

ISF DAY

Press to recall settings for the current input from the "ISF Day" memory preset.

CUST 1

Press to recall settings for the current input from the "Custom 1" memory preset.

CUST 2

Press to recall settings for the current input from the "Custom 2" memory preset.

9. **VID 1 (1) / VID 2 (2) / VID 3 (3)**

Press to select a composite video input as the source or to enter the numeric character "1," "2" or "3."

10. **HD 1 (4) / HD 2 (5)**

Press to select a HD (RGBHV or YPbPr component) input or to enter the numeric character “4” or “5.”

11. **COMP (Component) (6)**

Press to select the Component video input as the source or to enter the numeric character “6.”

12. **HDMI 1 (7) / HDMI 2 (8) / HDMI 3 / HDMI 4 (0)**

Press to select an HDMI input as the source or to enter the numeric character “7,” “8” or “0.”

13. **SCART (9)**

Press to select the SCART video input as the source or to enter the numeric character “9.”

14. **Aspect Ratio Selection Buttons**

Use these buttons to select an aspect ratio directly, as follows:

NATIVE

Displays the source signal in its native resolution, centered in the display area.

16:9

For viewing 16:9 DVDs or HDTV programs in their native aspect ratio.

4:3

Scales the input signal to fit 4:3 display mode in the center of the screen.

LETBOX (Letterbox)

For viewing non-anamorphic (“full-screen”) DVDs on a 16:9 screen.

V-WIDE (VirtualWide)

Enlarges a 4:3 image horizontally in a non-linear fashion to fit 16:9 full screen display.

CINEMA

For viewing 2.35:1 source material.

V-CINE

Selects the Virtual Cinema aspect ratio, used for viewing 16:9 source material on a 2.35:1 screen.

3. Installation






Note

Installation **must** be performed by a qualified custom video installation specialist. Due to the weight, size and complexity of the D-113d Projection System, two persons are recommended for some of the procedures described here.

To install batteries in the remote control:

1. Press down the tab on the cover and pull the cover in the direction of the arrow.
2. Insert the included batteries. Ensure that the polarities correctly match the \oplus and \ominus markings inside the battery compartment.
3. Insert the lower tab of the cover into the opening, and press down the cover until it clicks in place.

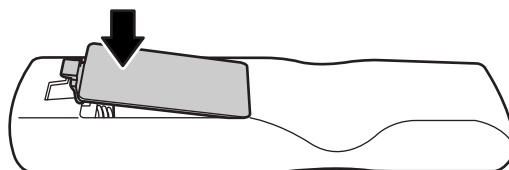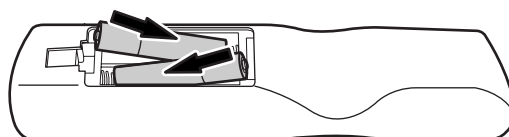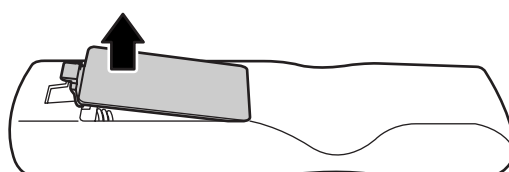

- Make sure that the battery polarities are correct when installing the batteries.
- Do not mix an old battery with a new one or different types of batteries.
- If you will not use the remote control for a long time, remove the batteries to avoid damage from battery leakage.
- Do not expose batteries to excessive heat such as from sunshine, fire or the like.

3.1 Remote Control

◀ Notes on Batteries

Notes on Remote Control Operation ➤

- Make sure that there is nothing obstructing the infrared beam between the remote control and the IR receiver on the DHD Controller.
- If the effective range of the remote control decreases, or it stops working, replace the batteries with new ones.
- The remote control may fail to operate if the infrared remote sensor is exposed to bright sunlight or fluorescent lighting.
- Ambient conditions may possibly impede the operation of the remote control. If this happens, point the remote control at the DHD Controller, and repeat the operation.

3.2 Quick Setup

Table 3-1 gives a quick overview of the D-113d installation process. The sections following this one provide detailed instructions.

Table 3-1. Installation Overview

Step	Procedure	For Details, Refer to page...
1	Choose a location for the projector	23
2	Install CineWide with AutoScope lens motor on top projection unit (optional)	29, 41
3	Install CineWide with AutoScope lens motor on bottom projection unit (optional)	
4	Attach spacer legs to bottom of top projection unit	30
5	Attach top projection unit to bottom projection unit	31
6	Place the projector in the installation location	32
7	Install primary projection lenses	32
8	Mount the Primary DHD Controller, Secondary DHD Controller and 3Dimension Processor	34
9	Connect the Primary and Secondary DHD Controllers to the projector	35
10	Connect the 3Dimension Processor to the Primary and Secondary DHD Controllers	37
11	Connect other external equipment to Primary DHD Controller (optional): <ul style="list-style-type: none"> • Audio processor or secondary display device • Control system interface (RS-232) • 12-volt trigger-activated equipment (retractable screens or screen masking) • External IR repeater • Network hub, router or gateway (Ethernet) 	39
12	Connect signal sources to the 3Dimension Processor	44
13	Connect system components to AC power	48
14	Apply power to the projector	48, 49
15	Adjust primary lens: projected image size (zoom), position (shift) and focus; copy and paste settings as needed	26, 52

Table 3-1. Installation Overview (continued)

16	For rear-screen installations, select the proper picture orientation	53
17	Use Image Alignment controls to fine-tune image geometry	54
18	Install CineWide anamorphic lens (optional)	56
19	Adjust CineWide anamorphic lens: position, pitch (angle), geometry and focus	58
20	DHD Controller input calibration: adjust the following for each DHD Controller input and display mode (resolution/frame rate) ; save settings when finished: <ul style="list-style-type: none"> • Aspect ratio • Brightness • Contrast • Color level • Tint • Input position • Color temperature and white balance 	64 through 84

Proper installation of your projector will ensure the quality of your display. Whether you are installing a projector temporarily or permanently, you should take the following into account to ensure your projector performs optimally.

It is a common practice in custom audio/video installations to conceal cables by running them through walls.

If you plan to do this with your D-113d installation, you will need to run four cables from the projector to the other projection system components: two (2) HDMI cables and two (2) serial control cables (typically Category 5 or 4-wire telephone cable).

Choose the installation type — front- or rear-screen — that best suits your needs. Table 3-2 compares these installation methods.

Table 3-2. Projector Installation Options

Advantages	Considerations
Front Screen, Floor Mount Installation	
<ul style="list-style-type: none"> • Easy to set up • Can be moved or changed quickly • Easy to access 	<ul style="list-style-type: none"> • Shares floor space with audience
Rear Screen, Floor Mount Installation	
<ul style="list-style-type: none"> • Projector is completely hidden • Projector is easily accessed • Usually good ambient light rejection 	<ul style="list-style-type: none"> • Requires separate room • Installation cost is usually higher

3.3 Installation Considerations

◀ **Pre-Wiring for 3D: Run Dual HDMI Cables**

◀ **Installation Type**

Ambient Light ➤ In general, minimize or eliminate light sources directed at the screen. Contrast ratio in your images will be noticeably reduced if light directly strikes the screen, such as when a shaft of light from a window or floodlight falls on the image. Images may then appear washed out and less vibrant.

Throw Distance ➤ Throw distance is the distance measured from the front of the projector to the screen. This is an important calculation in any projector installation as it determines whether or not you have enough room to install your projector with a desired screen size and if your image will be the right size for your screen.

You can quickly estimate the throw distance by taking the width of the screen and multiplying it by the lens throw ratio; see Figure 3-1. The result of this calculation tells you roughly how far back the projector should be positioned from the screen in order to project a focused image large enough to fill the screen.

Estimating Throw Distance

Throw Distance (TD) =
Screen Width (w) x Lens Throw Ratio

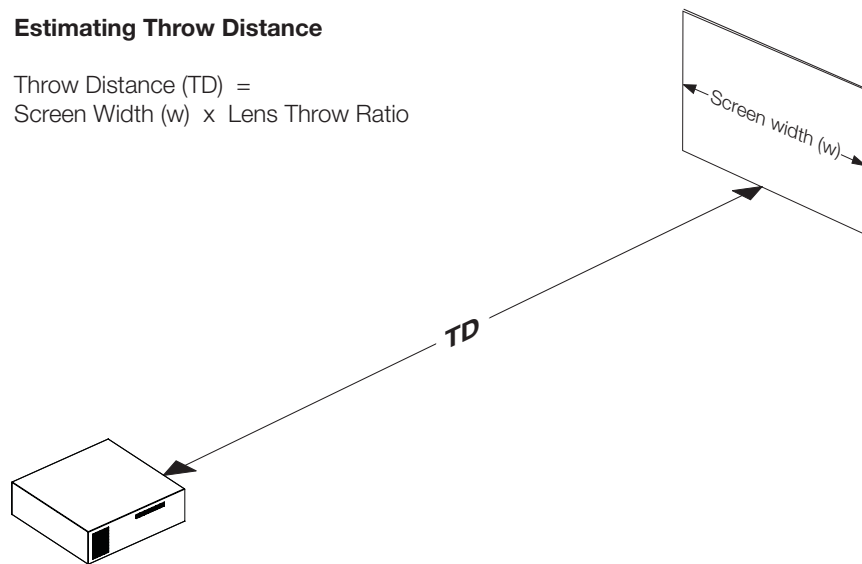


Figure 3-1. Estimating Throw Distance

Table 3-3 lists the available D-113d lens options and their throw ratios.

Table 3-3. D-113d Lens Options and Throw Ratios (Note)

Lens Option	Throw Ratio with Primary Lens Only	Throw Range in inches, with 120x67.5-inch (1.78:1) Screen		Throw Ratio with Primary Lens and Anamorphic Lens	Throw Range in inches, with 158.6x67.5-inch (2.35:1) Screen	
		Minimum	Maximum		Minimum	Maximum
Athena Uno	0.70 (Fixed)	For rear-screen installations only. Contact Runco Technical Support for more information.		Athena Uno cannot be used with an anamorphic lens.		
Athena Dos	1.46 - 1.85	175.20	222.00	Athena Dos cannot be used with an anamorphic lens.		
Athena Tres	1.94 - 2.59	232.80	310.80	1.68 - 1.94	266.50	307.74
Athena Cuatro	2.72 - 4.16	326.40	499.20	2.04 - 3.12	323.61	494.93
Athena Cinco	4.37 - 6.93	524.40	831.60	3.28 - 5.20	520.31	824.88
Note: Due to normal manufacturing variances, throw distance can vary by up to +/- 5 percent from these specifications.						

Proper placement of the projector relative to the screen will yield a rectangular, perfectly-centered image that completely fills the screen.

Ideally, the projector should be positioned perpendicular to the screen and in such a way that the lens center is aligned with the bottom edge of the screen area, and centered horizontally. See Figure 3-2.

◀ Vertical and Horizontal Position


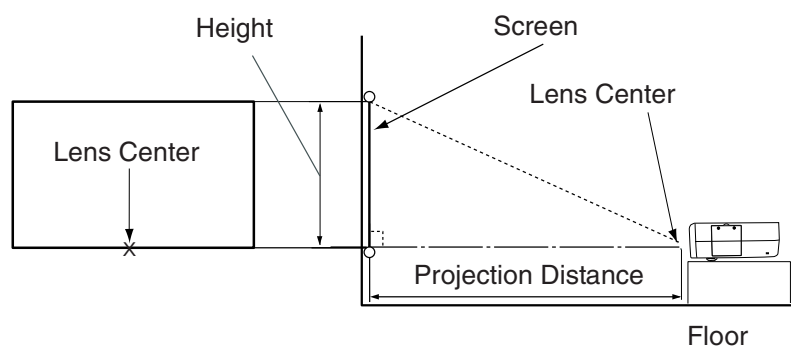


Figure 3-2. Projector Placement


Vertical and Horizontal Lens Shift

You can use the lens shift controls to center the image on the screen. Lens shift is generally expressed as a percentage of the screen height or width, as shown in Figure 3-3 and Figure 3-4.

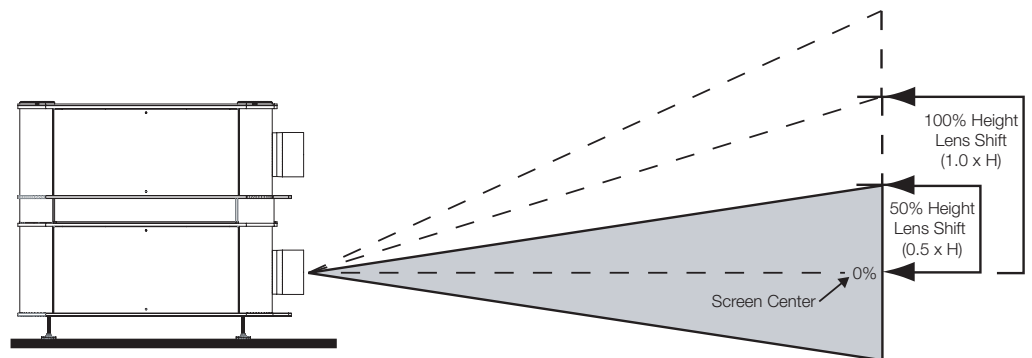

Note: This is a general example of lens shift. Lenses vary in their shift capabilities. **No particular lens or projector is used in this example.**

Figure 3-3. Vertical Lens Shift (EXAMPLE ONLY)

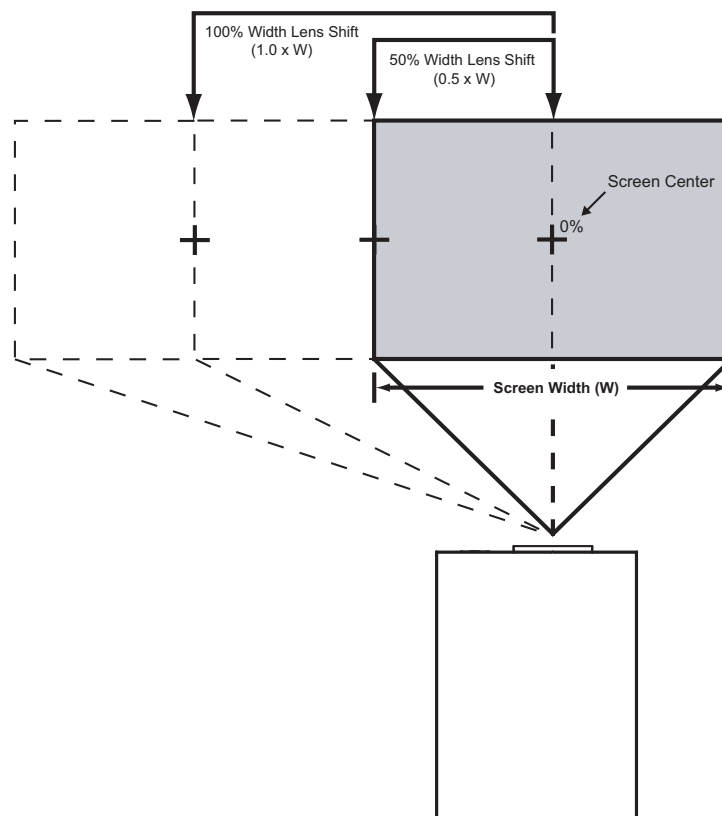

Note: This is a general example of lens shift. Lenses vary in their shift capabilities. **No particular lens or projector is used in this example.**

Figure 3-4. Horizontal Lens Shift (EXAMPLE ONLY)

Table 3-4 lists the lens shift limits for each available D-113d lens, as percentages and absolute measurements with a 120 x 67.5 inch (1.78:1) screen.

Table 3-4. Vertical and Horizontal Lens Shift Limits

		Lens Option	
		Athena Uno	Athena Dos Athena Tres Athena Cuatro Athena Cinco
Lens Shift Limits, as Percentages of Screen Height or Width (Note)			
Vertical (Note 2)	Up	17%	60%
	Down	17%	60%
Horizontal	Left	6%	25%
	Right	6%	25%
Lens Shift Limits in Inches, with a 120-by-67.5 inch (1.78:1) Screen			
Vertical	Up	11.48	40.50
	Down	11.48	40.50
Horizontal	Left	7.20	30.00
	Right	7.20	30.00
Note: Vertical shift limits are percentages of the screen height. Horizontal shift limits are percentages of the screen width.			

Due to its extraordinarily high level of video processing performance, the DHD Controller may distribute video signals with a perceptible level of audio latency. In order to easily solve this issue, Runco recommends using the DHD Controller with a high-quality audio receiver that has the ability to effectively synchronize audio and video signals.

Most mainstream audio receiver/switchers have the ability to synchronize the audio and video to the Advanced Television Systems Committee (ATSC) prescribed tolerances. According to the ATSC, the sound program should never lead the video program by more than 15 milliseconds, and should never lag behind the video program by more than 45 milliseconds.

In addition, many video displays and A/V receivers introduce additional latency that needs to be compensated for during the installation.

Table 3-5 shows the amount of possible audio latency given different signal input timings.

Table 3-5. Possible Audio Latency for Various Input Timings


Input Timing	Possible Audio Latency (milliseconds)
480i	133
480p	83
576i	160
576p	100
720p/50	100
720p/60	83

◀ Audio/Video Synchronization Issues

Table 3-5. Possible Audio Latency for Various Input Timings (continued)

Input Timing	Possible Audio Latency (milliseconds)
1080i/25	160
1080i/30	133
1080p/24	125
1080p/50	80
1080p/60	67

Ventilation ➤ If you are mounting the D-113d in an enclosure, leave at least 10 inches (250 mm) of space on the left and right sides between it and surrounding objects, as shown in Figure 3-5. This allows heat to disperse, maintaining the proper operating temperature.

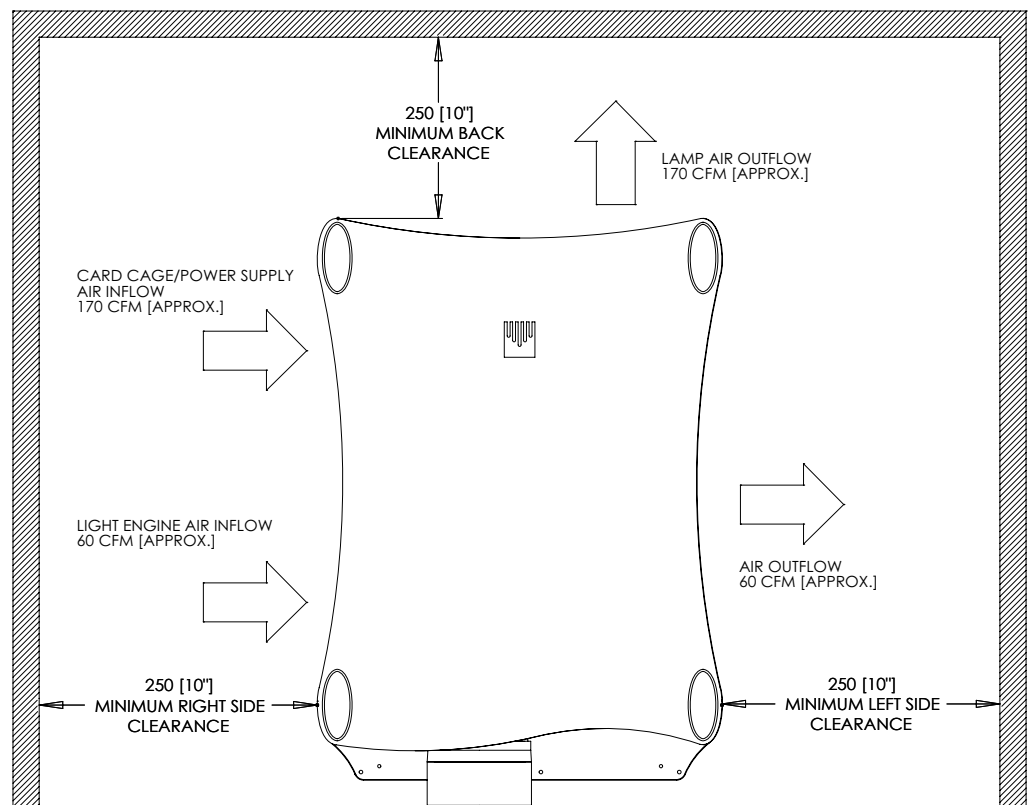**Figure 3-5. Ventilation Requirements for Enclosure Mounting**

Other Considerations ➤ Other considerations and tips that can help improve your installation:

- Keep the ambient temperature constant and below 35°C (95°F). Keep the projector away from heating and/or air conditioning vents. Changes in temperature may cause drifts in the projector circuitry, which may affect performance.
- Keep the projector away from devices that radiate electromagnetic energy such as motors and transformers. Common sources of these include slide projectors, speakers, power amplifiers and elevators.

**Note**

*Your D-113d/CineWide with AutoScope may have shipped with the AutoScope lens motors pre-installed. If so — or if you are installing a standard D-113d (without an anamorphic lens) — skip this step and proceed with **Assembling the Projection System** (page 30).*

If you are installing a D-113d/CineWide with AutoScope, proceed as follows to install the lens mount/motor assemblies on the top and bottom projection units.

**Note**

1. *Do not install the CineWide lens yet, only the AutoScope lens motor. You will install the CineWide lens after you install the projector and adjust the primary lens.*
2. *Some components shipped with your projector may differ slightly from what is shown in these instructions.*

1. Carefully unpack the top and bottom projection units.
2. Place the top projection unit (the one with the cosmetic caps on the top) upside down on a smooth, flat surface covered with a blanket or other soft material.
3. Line up the eight mounting holes on the lens motor housing with those on the bottom of the top projection unit. Secure the motor to it with the eight screws provided for this purpose. See Figure 3-6.

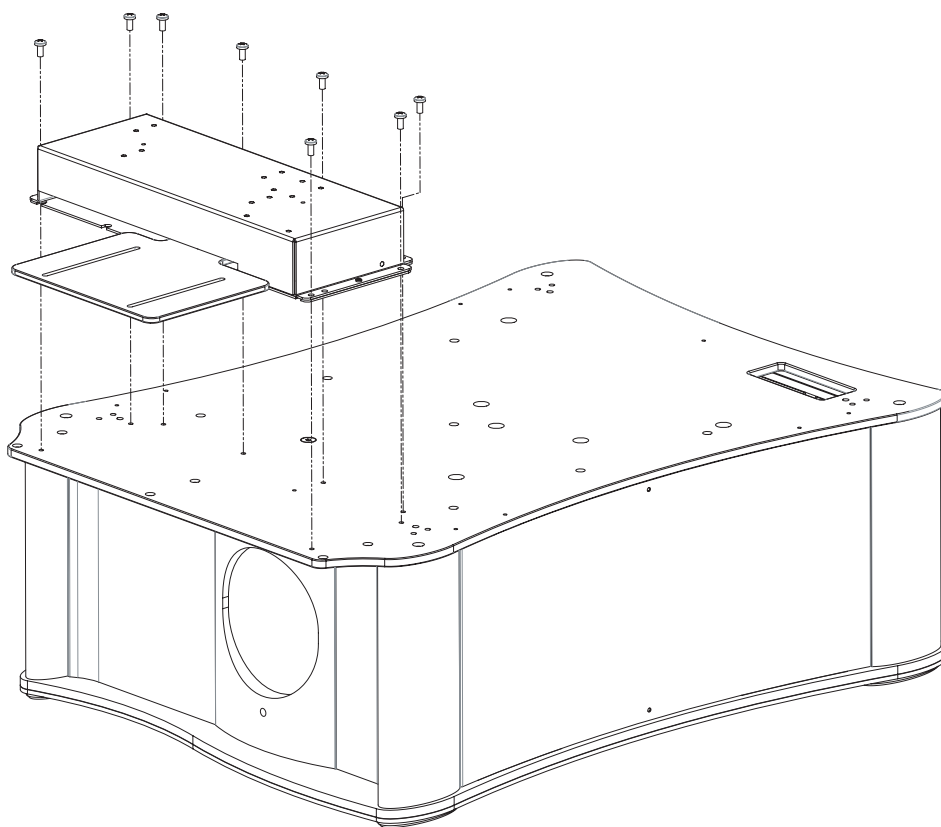


Figure 3-6. Attaching the AutoScope Lens Motor to the Projection Unit



Caution

DO NOT OVER-TIGHTEN THE SCREWS.

4. Place the bottom projection unit (the one with pockets and tapped holes in place of the cosmetic caps on the top) upside down on a smooth, flat surface covered with a blanket or other soft material. Loosen and remove the two front feet on the projection unit.
5. Repeat Step 3 for the bottom projection unit.

3.5 Assembling the Projection System

Attaching the Spacer Legs to the Top Projection Unit ➤

The top and bottom projection units must be secured to each other using the four (4), supplied spacer legs and associated hardware.

Using a hex wrench and eight (8) of the supplied, M6 x 16mm socket-head cap screws, attach the spacer legs to the top projection unit as shown in Figure 3-7.

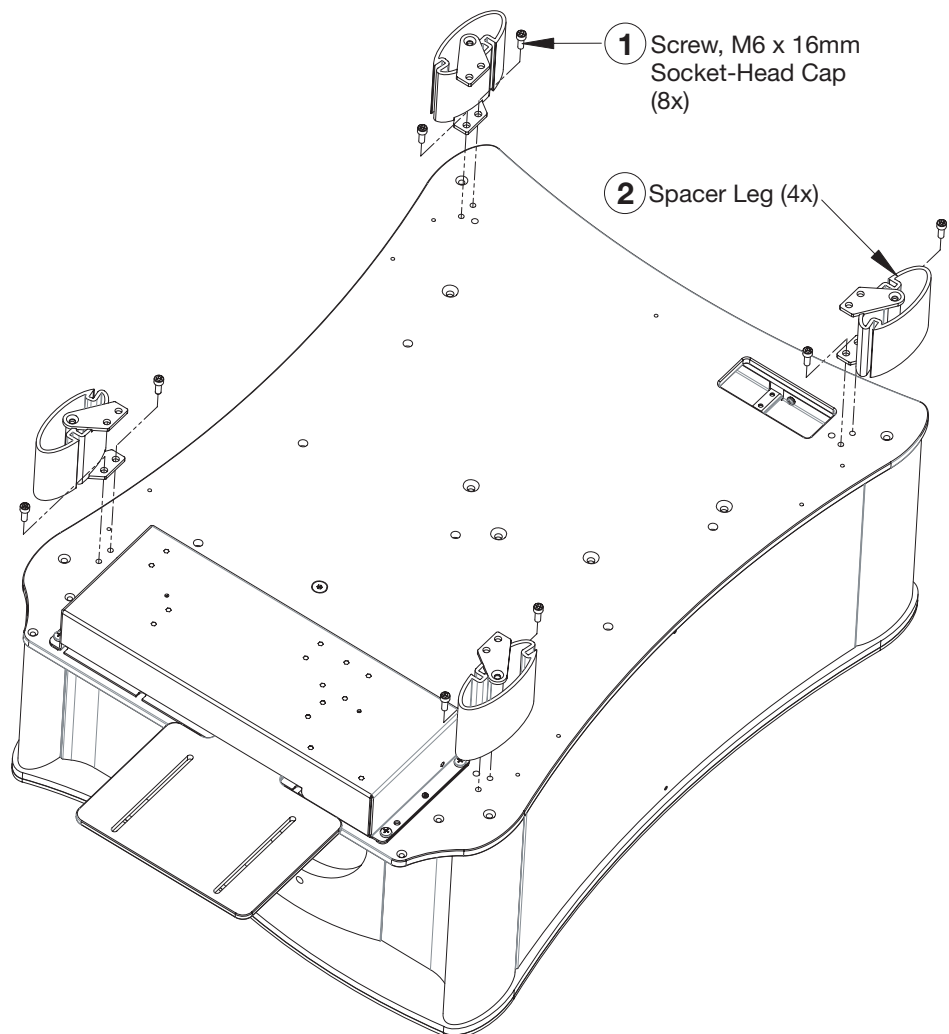


Figure 3-7. Attaching the Spacer Legs to the Top Projection Unit

1. **With the help of an assistant,** carefully lift the top projection unit and place it right side up on a flat surface.
2. Repeat Step 1 for the bottom projection unit.
3. Carefully lift the top projection unit and place it on top of the bottom projection unit. Ensure that the bottom of each spacer leg mates with the pocket at each corner on the top of the bottom projection unit.
4. Using a hex wrench and eight (8) of the supplied, M6 x 16mm socket-head cap screws, secure the spacer legs to the bottom projection unit as shown in Figure 3-8.

◀ **Attaching the Top and Bottom Projection Units to Each Other**

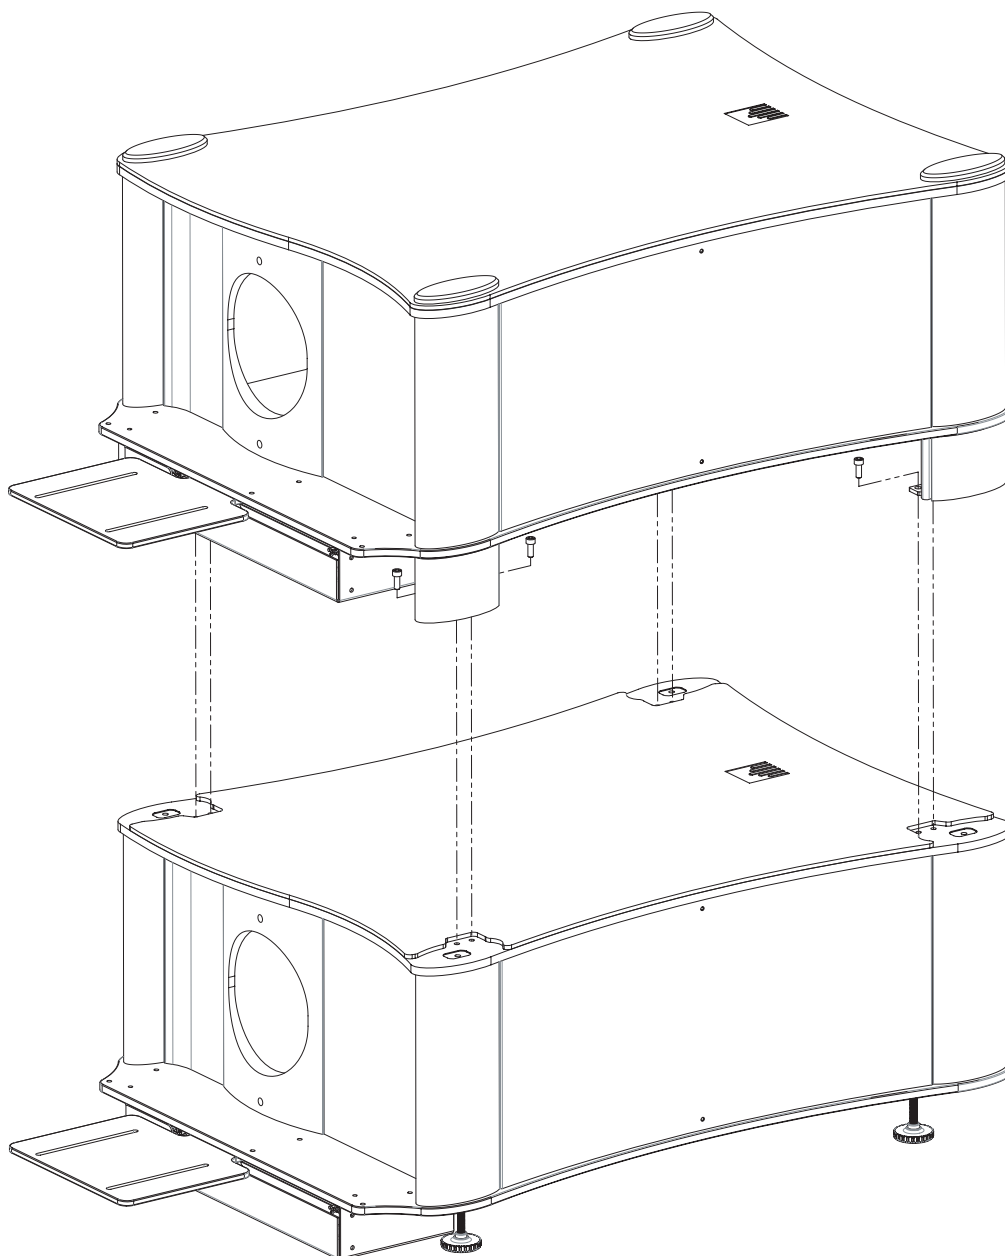


Figure 3-8. Securing the Top and Bottom Projection Units to Each Other

3.6 Mounting the D-113d

Place the D-113d on a strong supporting structure or cart. Carts can be useful when moving a projector during a presentation or from site to site. If possible, lock the wheels when it's in position to prevent it from being moved during a presentation.

Take special care if using a mobile cart; avoid sudden stops, force and uneven surfaces that may cause the top-heavy cart to lurch and overturn. Make sure your mounting structure is reasonably level, then adjust one or more projector feet as necessary to fine-tune.



WARNING

Do not attempt to invert, tilt or ceiling-mount the D-113d. The projector must be mounted horizontally and cannot be turned upside down.

Adjusting the Feet ➤

For installations on a floor or suitable supporting structure, the projector should rest firmly on its feet. To adjust the height and level of the projector, extend or retract the feet by rotating them.

3.7 Installing the Primary Projection Lenses

The projection lenses are shipped separately from the projector. Proceed as follows to install the primary projection lenses:


1. Remove the decorative front jewelry around the lens cavity.
2. Remove the lens plug from the lens opening in the projector.




WARNING

Never operate this projector without a lens. The lens seals the projector, preventing contaminants from entering the interior of the projector.

3. Remove the rear cap from the lens. (Keep the front lens cap on the projection lens to protect it from damage during the installation process.)
4. Rotate the lens clamp to the OPEN position.

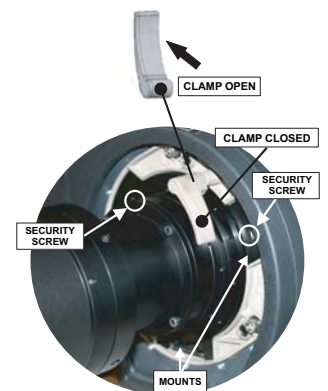

5. Remove and retain the two security screws from the lens mount.

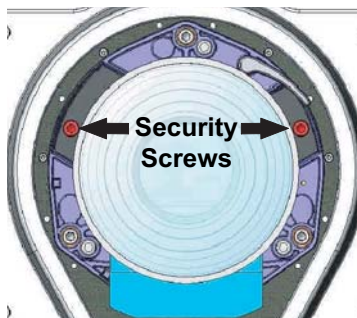

6. Align the lens interface plate with the lens mount. Align the lens electrical connector with the mating connector on the lens mount. Fully insert the assembly straight into the lens mount opening without turning. Press using your hand.

**Note**


When installing the lens, ensure that it is not inserted at an angle, as this can cause damage.

7. While holding the lens flat against the lens mount, rotate the lens clamp clockwise to lock the lens assembly in place.
8. Re-attach the lens mount security screws that you removed in Step 5.
9. Remove the front lens cap.

3.8 Mounting the DHD Controllers and 3Dimension Processor

The DHD Controller units and 3Dimension Processor can be placed on any flat, stable surface such as a shelf or table, or they can be rack-mounted using the supplied mounting hardware. Place these components in a location that provides easy access to the power connectors.

The DHD Controller units and 3Dimension Processor each require 2U (3.5 inches) or more of vertical rack space (at least 10.5 inches total). To minimize cable clutter, Runco recommends that you install the 3Dimension Processor between the Primary and Secondary DHD Controllers in the rack.

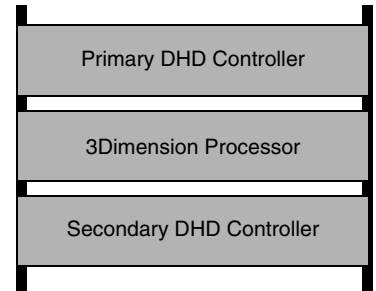

To mount the DHD Controllers and 3Dimension Processor in a standard, 19-inch equipment rack, install the mounting ears on either side of the chassis using the supplied screws; see Figure 3-9. Then, secure the mounting ears to the rack.

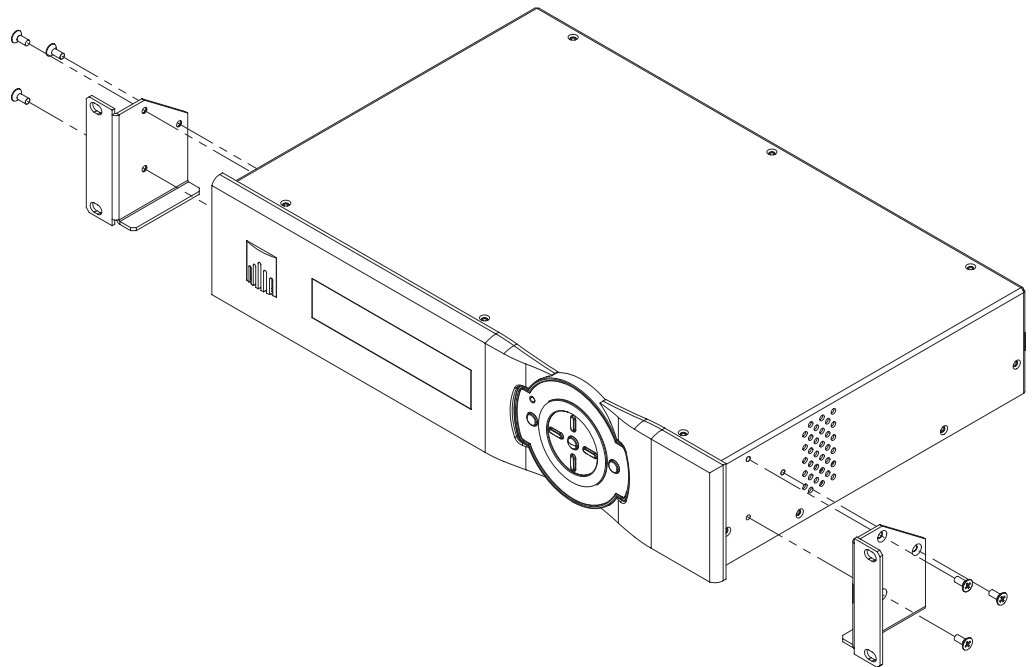


Figure 3-9. Attaching the Rack Mounting Hardware

Proceed as follows to connect the D-113d system components to each other and to AC power.

When connecting your equipment:

- Turn off all equipment before making any connections.
- Use the correct signal cables for each source.
- For best performance and to minimize cable clutter, use high-quality cables that are only as long as necessary to connect two devices. (Don't use a 20-foot cable when a 6-foot cable will suffice.)
- Ensure that the cables are securely connected. Tighten the thumbscrews on connectors that have them.

Digital Video Connection: Connect the **HDMI Out (To Display)** connector on the Primary DHD Controller to the HDMI input on the “left eye” (top) optical engine on the D-113d projector. Similarly connect the **HDMI Out (To Display)** connector on the Secondary DHD Controller to the HDMI input on the “right eye” (bottom) optical engine on the D-113d projector.

RS-232 Connection: Connect the **Display Control** output from the Primary DHD Controller to the RS-232 input on the “left eye” (top) optical engine on the D-113d projector.

Similarly connect the **Display Control** output from the Secondary DHD Controller to the RS-232 input on the “right eye” (bottom) optical engine on the D-113d projector.

Use the provided modular telephone cables with RJ11 plugs at both ends for the RS-232 connections. These cables have color-coded labels at each end to facilitate these connections. On the D-113d end, use the provided RJ11-to-DB9 adapters. These adapters are wired as shown in Figure 3-10.

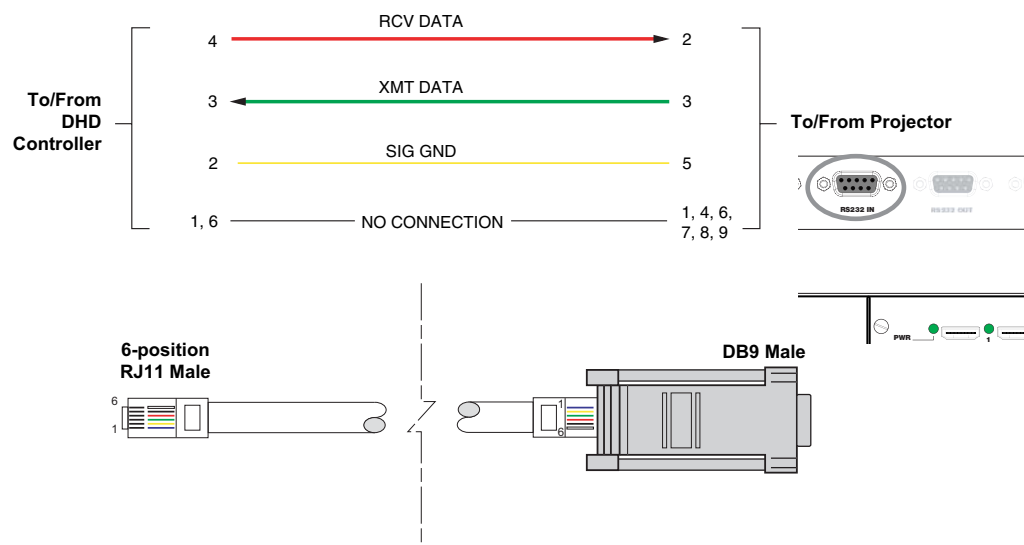


Figure 3-10. RS-232 Connection from the Primary DHD Controller to the Projector

3.9 System Interconnections

◀ Connecting the Primary and Secondary DHD Controllers to the Projector

Figure 3-11 shows how to connect the Primary and Secondary DHD Controllers to the projector.

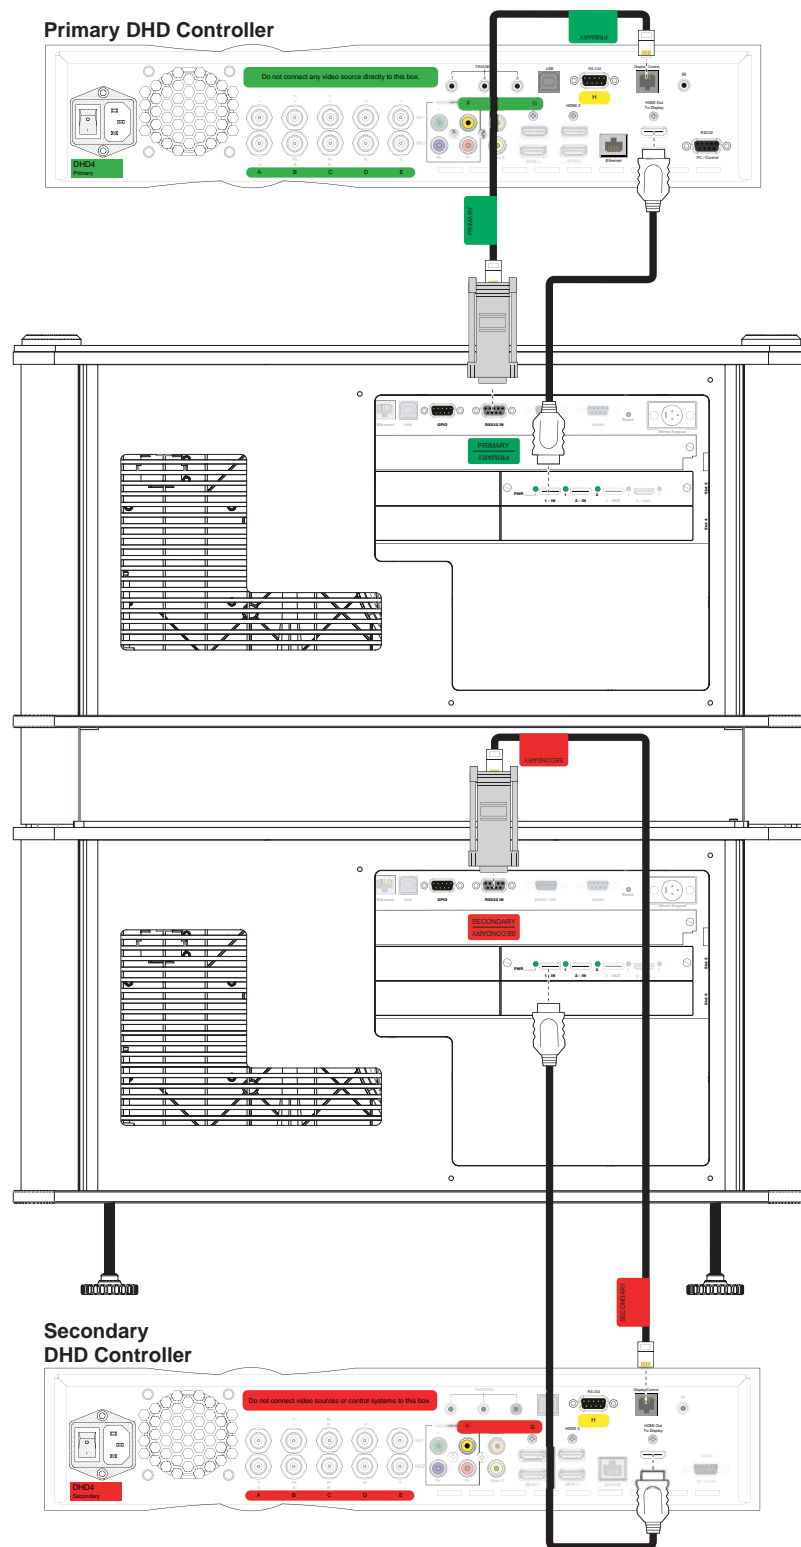


Figure 3-11. Connecting the Primary and Secondary DHD Controllers to the Projector

Figure 3-12 shows the connections between the 3Dimension Processor and Primary and Secondary DHD Controllers.

◀ **Connecting the Primary and Secondary DHD Controllers to Each Other and to the 3Dimension Processor**

Primary DHD Controller

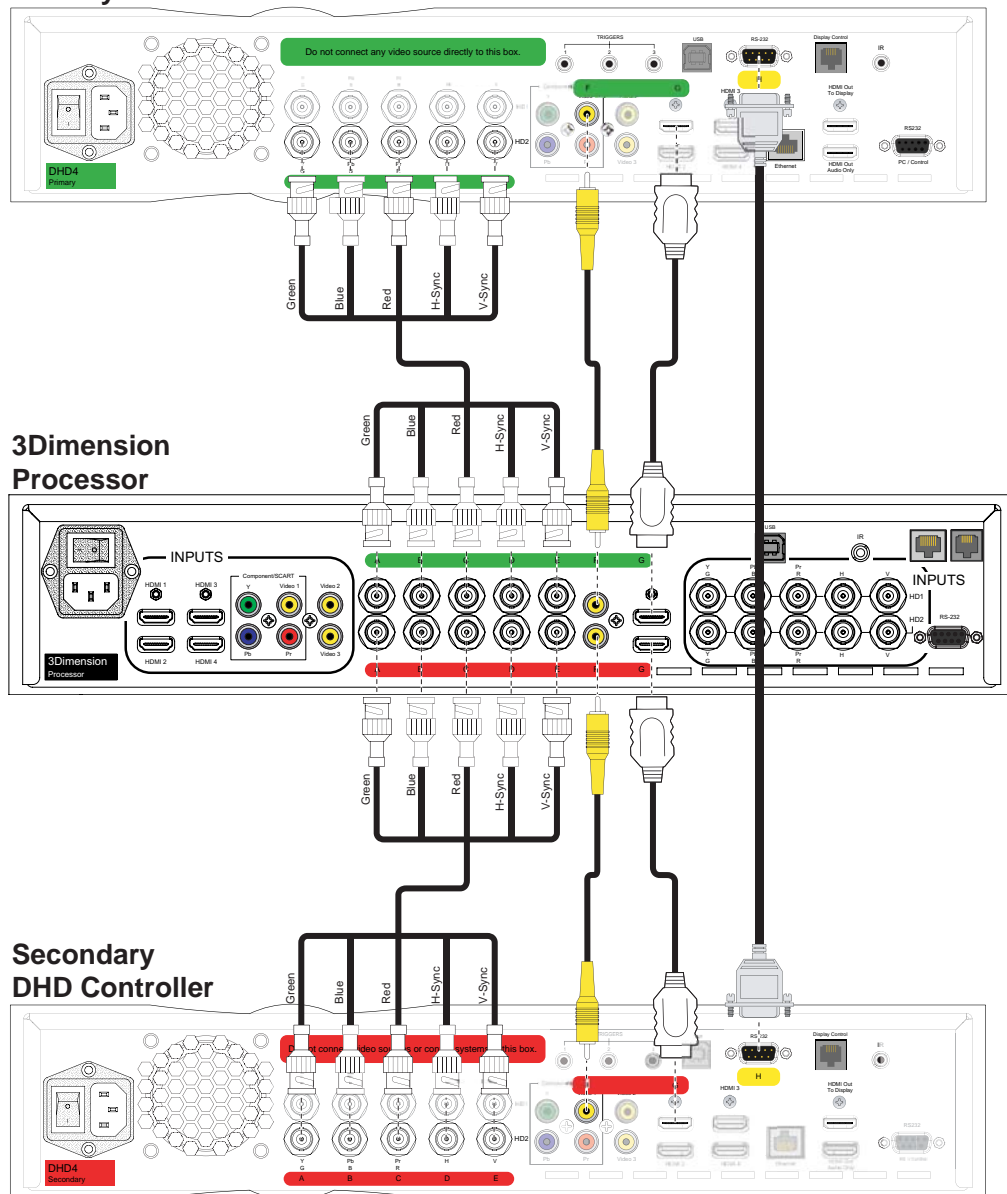


Figure 3-12. DHD Controller/3Dimension Processor Interconnection

To make these connections easier, the rear-panel connectors on the 3Dimension Processor and DHD Controllers are identified and color-coded as follows:

Identifier	Color/Function
A, B, C, D, E	Green - Analog (HD) video from 3Dimension Processor to Primary DHD Controller
	Red - Analog (HD) video from 3Dimension Processor to Secondary DHD Controller
F	Green - Analog (SD) video from 3Dimension Processor to Primary DHD Controller
	Red - Analog (SD) video from 3Dimension Processor to Secondary DHD Controller
G	Green - Digital (HDMI) video and CEC messages from 3Dimension Processor to Primary DHD Controller
	Red - Digital (HDMI) video from 3Dimension Processor to Secondary DHD Controller
H	Yellow - RS-232 serial communication between Primary and Secondary DHD Controllers

Digital Video Connection (G): Connect the HDMI 1 input on the Primary DHD Controller to the Left HDMI output on the 3Dimension Processor. Similarly connect the HDMI 1 input on the Secondary DHD Controller to the Right HDMI output on the 3Dimension Processor.

Analog (HD) Video Connection (A through E): Connect the HD 2 input on the Primary DHD Controller to the Left HD video output on the 3Dimension Processor. Similarly connect the HD 2 input on the Secondary DHD Controller to the Right HD video output on the 3Dimension Processor.

Analog (SD) Video Connection (F): Connect the Composite 1 input on the Primary DHD Controller to the Left Composite video output on the 3Dimension Processor. Similarly connect the Composite 1 input on the Secondary DHD Controller to the Right Composite video output on the 3Dimension Processor.

RS-232 Connection (H): Connect the **RS-232 (To Accessory Box)** connectors on the Primary and Secondary DHD Controllers to each other, using the provided “null-modem” (cross-over) cable.

The DHD Controller provides a second HDMI output (labeled **HDMI Out (Audio Only)**) for connection to an audio receiver/switching system or secondary display device for monitoring purposes. See Figure 3-13.



Note

The DHD Controller does not transmit HDMI CEC control messages from the “HDMI Audio Out” connector.

◀ **Connecting an Audio Processor or Secondary Display Device to the Primary DHD Controller (Optional)**

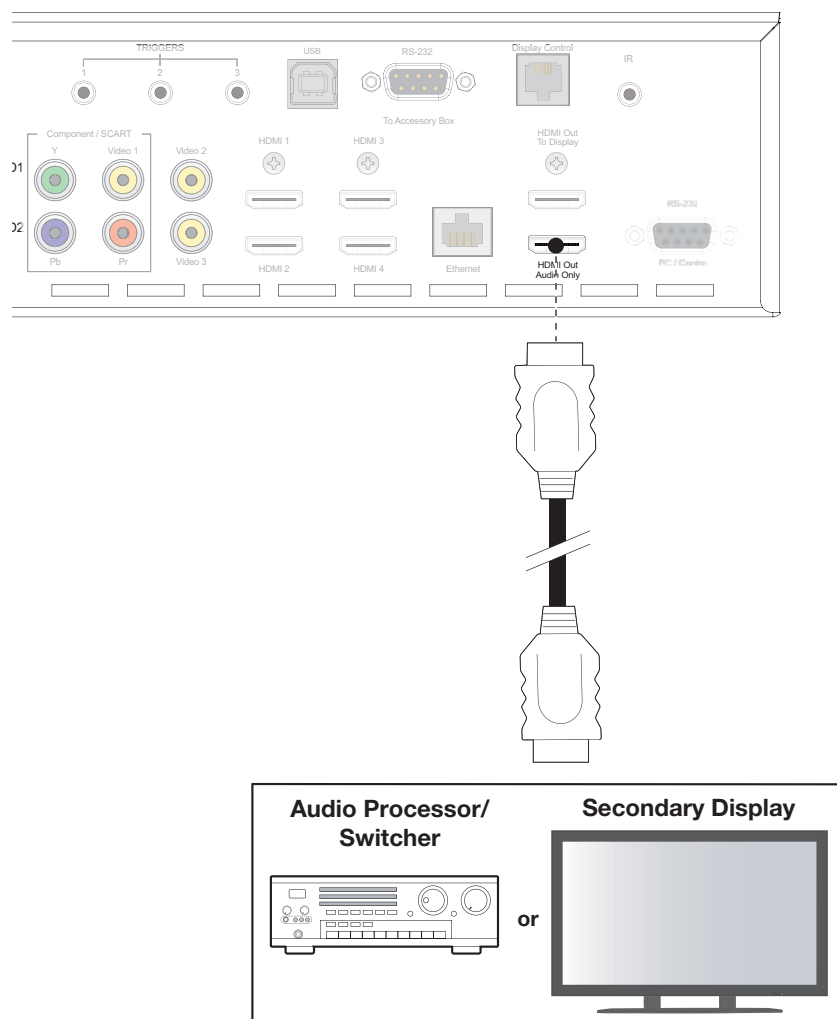


Figure 3-13. Audio Processor Connection to Primary DHD Controller

Additional Connections to the Primary DHD Controller (Optional)

The DHD Controller provides the following interfaces to external equipment that allow it to control or be controlled by that equipment:

- An RS-232 interface to a PC or control/automation system;
- Three (3), 12-volt trigger outputs;
- An infrared (IR) repeater input;
- An Ethernet network interface for firmware updates and maintenance notifications.

The following sections describe how to make these interface connections.

RS-232 Controller Connection: Use a straight-through, 9-pin RS-232 cable to connect a PC or control/automation system (if present) to the RS-232 port on the DHD Controller; see Figure 3-14.

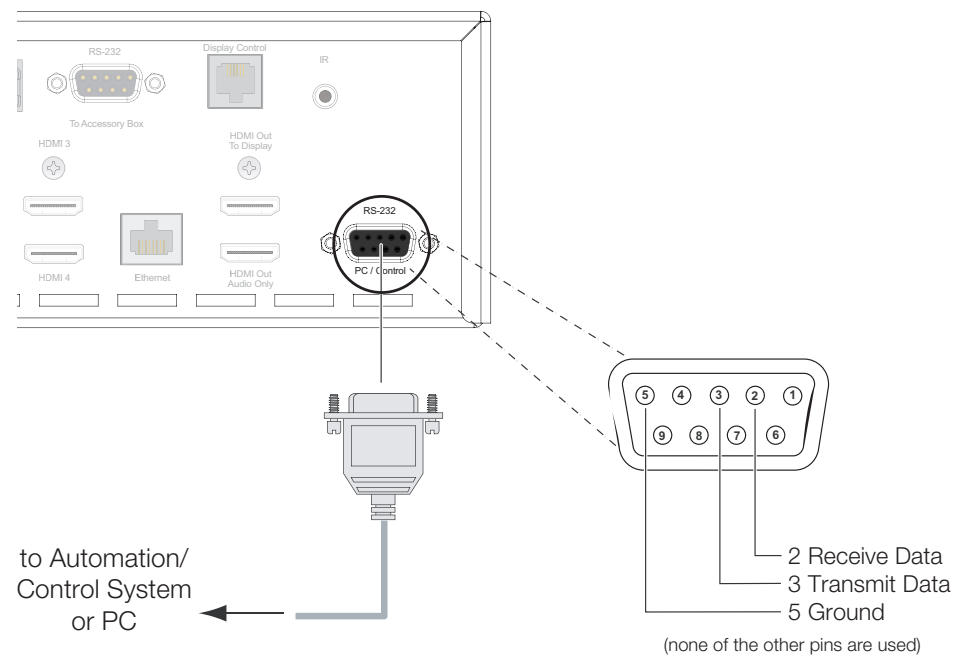


Figure 3-14. RS-232 Control System Connection to Primary DHD Controller

Connecting 12-volt Trigger Outputs to External Equipment: If you are installing a D-113d/CineWide with AutoScope, connect the AutoScope lens motor on the top (left-eye) optical engine to a 12-volt trigger output on the Primary DHD Controller; see Figure 3-15. Connect the the AutoScope lens motor on the bottom (right-eye) optical engine to a 12-volt trigger output on the Secondary DHD Controller.

Similarly connect other 12-volt trigger-activated equipment (such as retractable screens or screen masks) to the other trigger outputs.

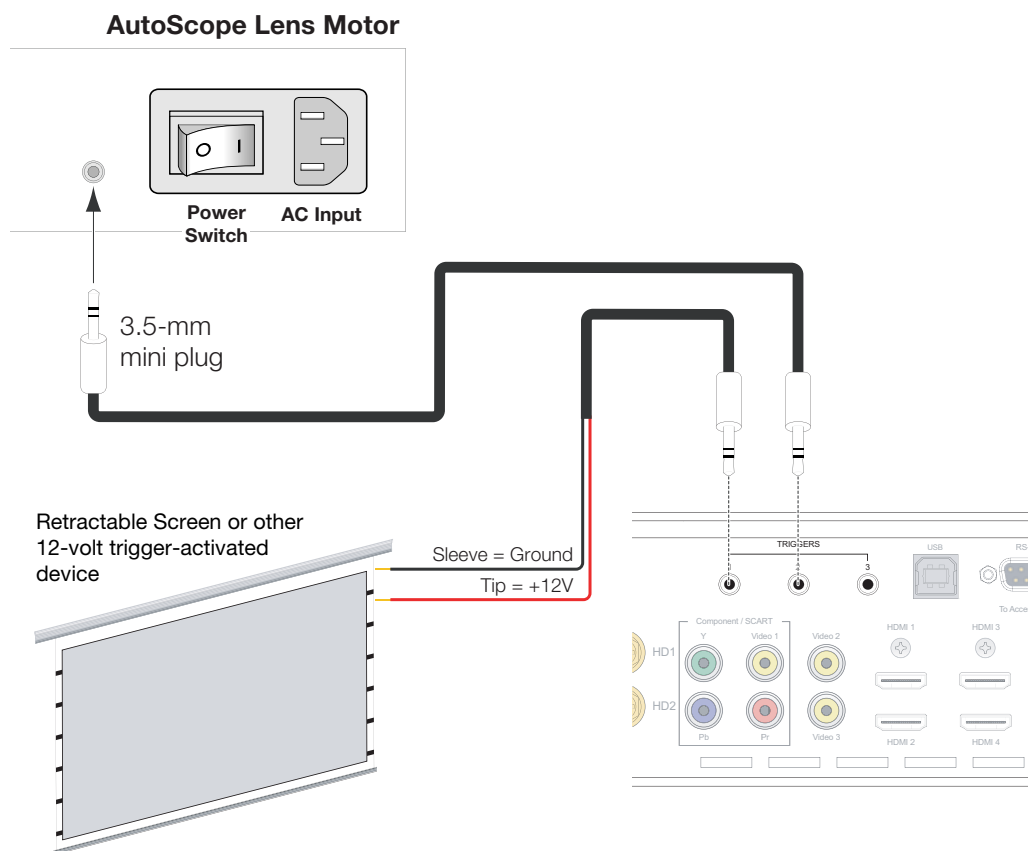


Figure 3-15. Connecting 12-volt Trigger Outputs

Connecting an External IR Receiver to the DHD Controller: If infrared signals from the remote control cannot reach the DHD Controller due to excessive distance or obstructions such as walls or cabinet doors, you can connect an external IR receiver to extend the range of the remote control. See Figure 3-16.

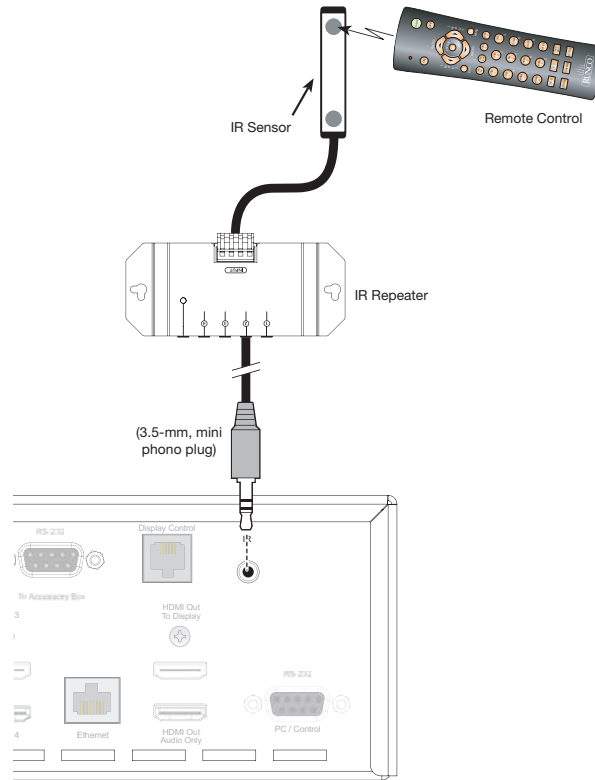


Figure 3-16. External IR Receiver Connection

Ethernet Network Connection: Use a standard, Category 5 network cable with an RJ-45 plug to connect a network hub, router or gateway to the Ethernet port on the Primary DHD Controller; see Figure 3-17.

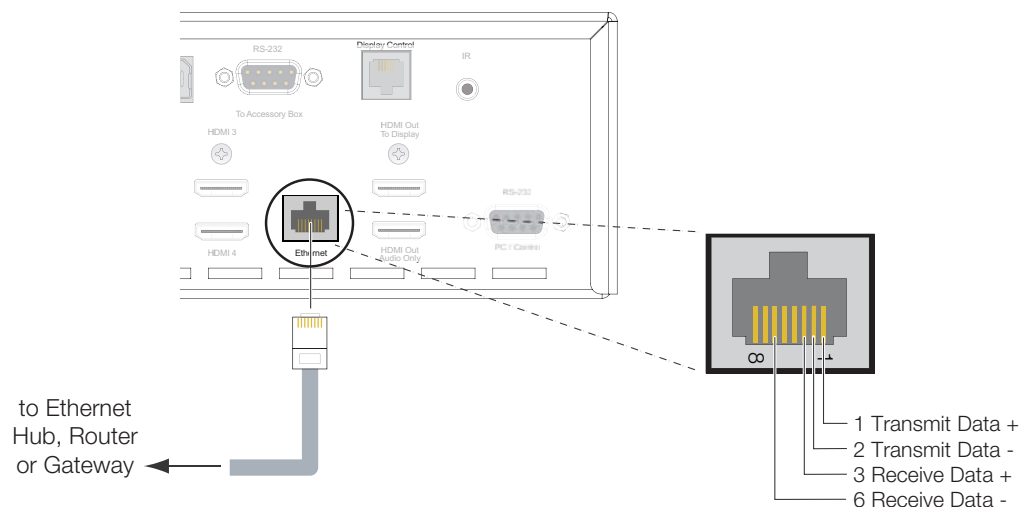


Figure 3-17. Ethernet Network Connection to Primary DHD Controller

Connecting Source Components to the 3Dimension Processor

Connect your video sources to the 3Dimension Processor as shown and described in the sections that follow.

HDMI Source Connections: See Figure 3-18.



Tip

Use the HDMI inputs whenever possible. This ensures the highest video quality because the signal is carried in the digital domain throughout the entire signal path, from source component output into the projector.



Note

You can also connect computers with DVI output to these inputs. Refer to **Supported Timings** on page 131 for a list of compatible input signals.

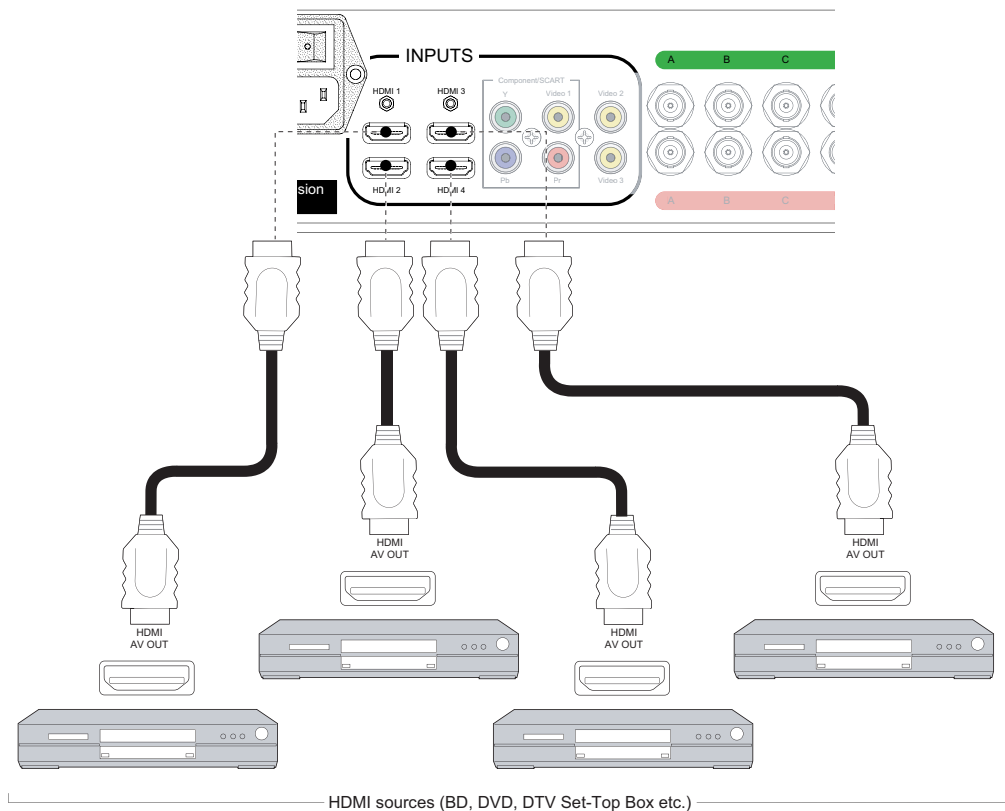


Figure 3-18. HDMI Source Connections

Component Video Source Connections: Connect your component video sources to the HD1, HD2 and/or Component/SCART inputs as shown in Figure 3-19.

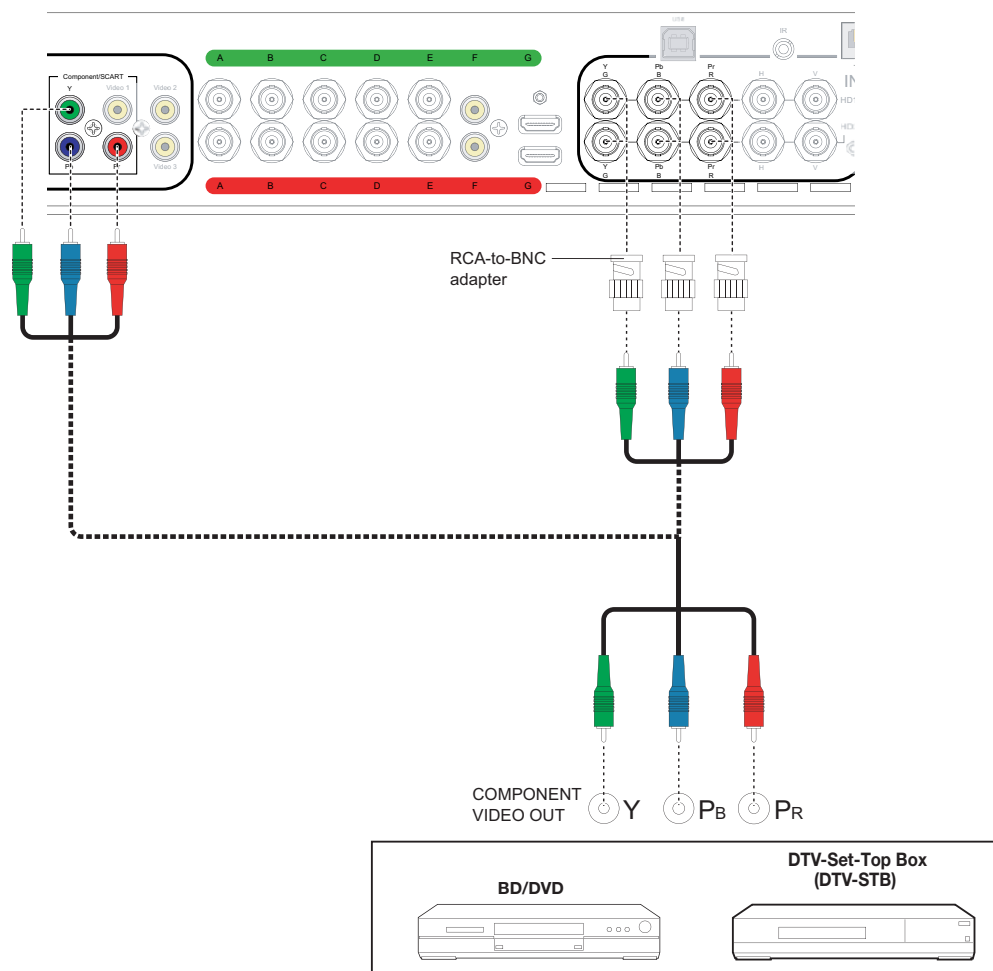


Figure 3-19. Component Video Source Connections

RGBHV Source Connections: Connect personal computers and/or other RGB sources to the HD1 and/or HD2 inputs as shown in Figure 3-20.

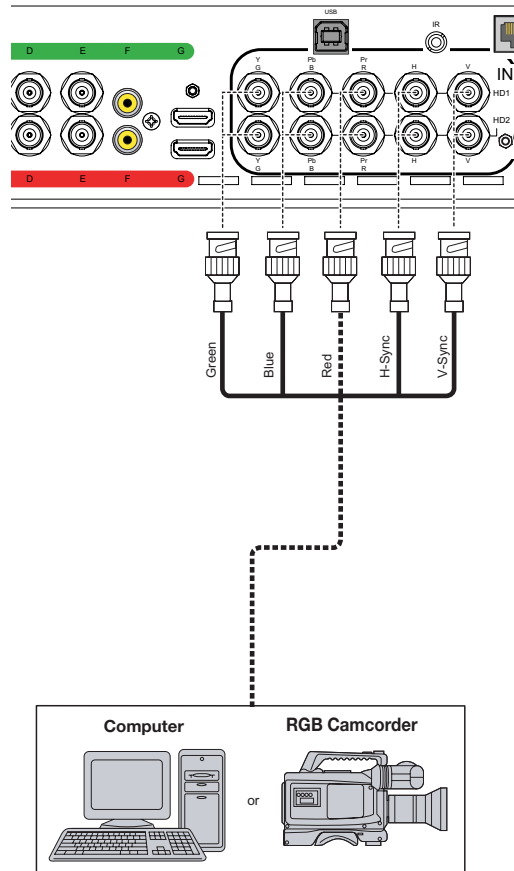


Figure 3-20. RGBHV Source Connections

SCART RGBS Source Connections: Connect the green, blue and red outputs from your SCART source to the Component/SCART input on the 3Dimension Processor. Connect the sync output from your SCART source to the **Video 1** input on the 3Dimension Processor. See Figure 3-21.

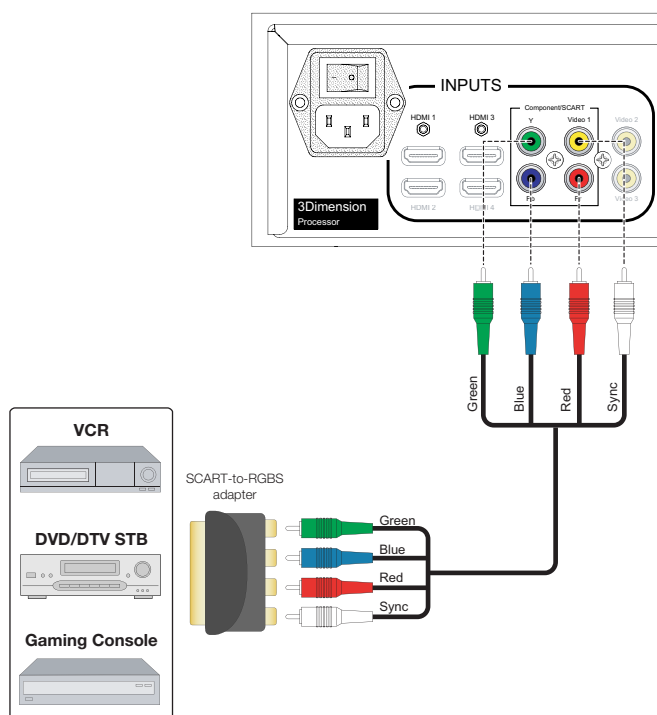


Figure 3-21. SCART RGBS Source Connections

Composite Source Connections: See Figure 3-22.


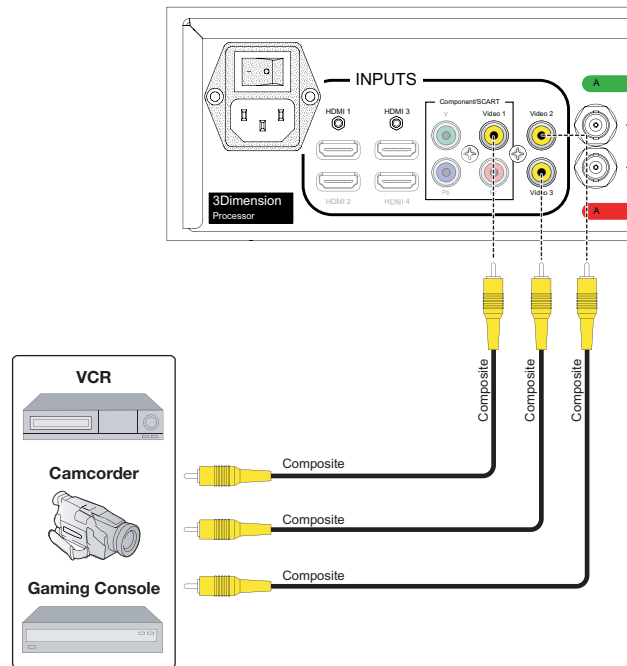


Figure 3-22. Composite Video Source Connections

Connecting to AC Power ➤

Projector: The projector ships with two (2), AC power cords: one for the DHD Controller and one for the projector. **They are not interchangeable.** The projector power cord is rated at 15 amps and has a ferrite sleeve, to reduce radio frequency interference (RFI) emissions to a level that conforms to FCC regulations:

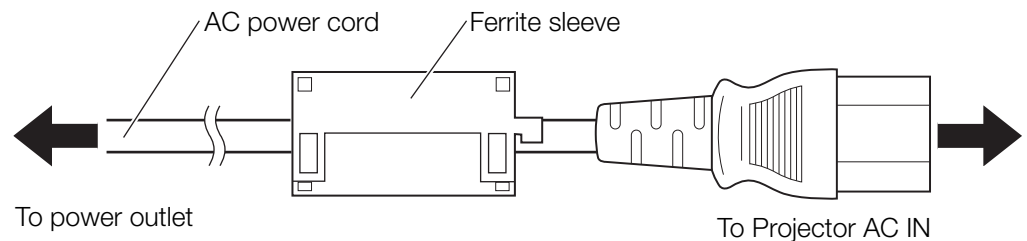

Plug the female end of the projector power cord into the AC receptacle on the rear of the projector (AC 100V ~ 240V). Then, connect the other end to your AC power source.



WARNING

Use ONLY the AC power cord with the ferrite sleeve to connect the projector to AC power. Doing otherwise creates a fire hazard risk.

Similarly connect the Primary and Secondary DHD Controller units and the 3Dimension Processor to nearby AC outlets.

AutoScope Lens Motor: With AutoScope-equipped projectors, an additional power cord is provided for the lens motor. Plug the female end of the AC power cord into the AC input on the rear of the lens motor assembly. Connect the other end to your AC power source.

At this point you are ready to perform the initial power-up sequence and optical alignment procedure, which is summarized in Table 3-6 and described in detail in the sections that follow.

This procedure assumes the following:

- You are installing a projector equipped with anamorphic lenses. (If not, you can skip those tasks relating to the anamorphic lenses.)
- You have already completed the physical installation of the projector, DHD Controllers and 3Dimension Processor as described in the previous sections. If you have not, do so now.
- You have connected the various system components to each other, to external equipment and to AC power. If you have not, do so now.

3.10 Power-Up Sequence and Optical Alignment Procedure

Table 3-6. D-113d Optical Alignment Procedure (with Anamorphic Lenses)

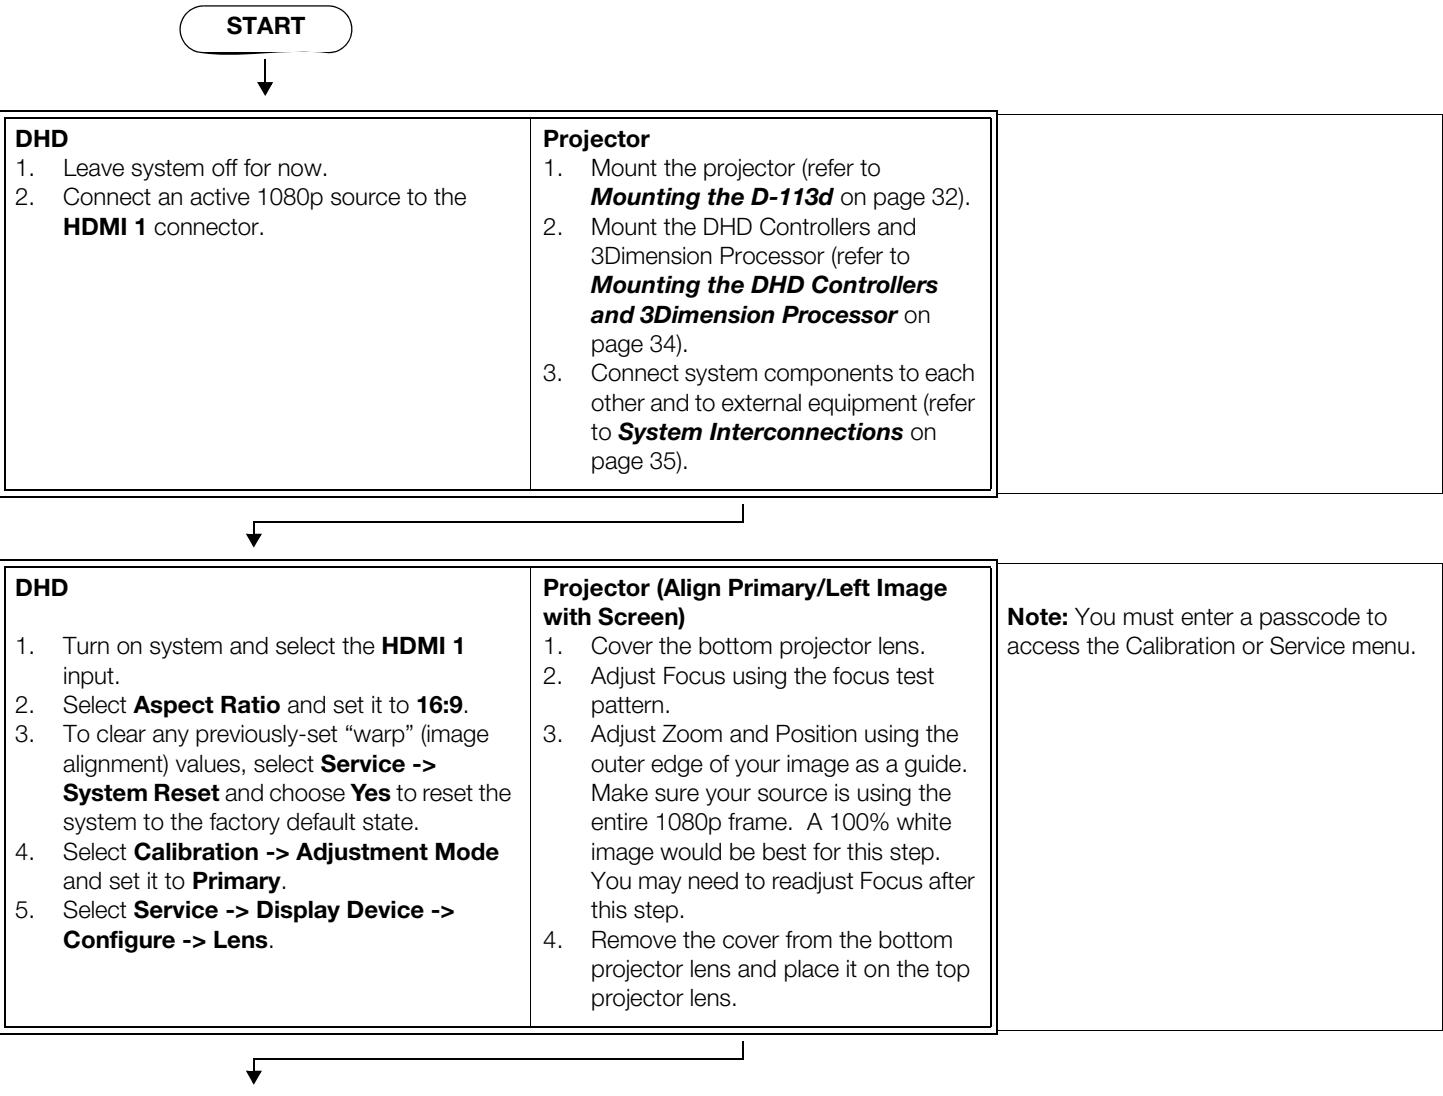


Table 3-6. D-113d Optical Alignment Procedure (with Anamorphic Lenses) (continued)

DHD <ol style="list-style-type: none"> 1. Select Calibration -> Adjustment Mode and set it to Secondary. 2. Select Service -> Display Device -> Configure -> Lens. 	Projector (Align Secondary/Right Image with Screen) <ol style="list-style-type: none"> 1. Adjust Focus using the focus test pattern. 2. Adjust Zoom and Position using the outer edge of your image as a guide. Make sure your source is using the entire 1080p frame. A 100% white image would be best for this step. You may need to readjust Focus after this step. 3. Remove the cover from the top projector lens. 	
DHD <ol style="list-style-type: none"> 1. For a rear-projection installation, select Service -> Display Device -> Configure -> Installation -> Picture Orientation and set it as needed. 2. Select Calibration -> Image Alignment -> Corner Alignment, check the Primary Test Pattern and Secondary Test Pattern boxes and adjust corners. 3. Select Calibration -> Image Alignment -> Midpoint Alignment, check the Primary Test Pattern and Secondary Test Pattern boxes and adjust midpoints. 	Projector No adjustment needed.	Note: The default warp is 46 pixels on the left and right sides (x) and 26 pixels at the top and bottom (y). If more is needed, use the "Image Alignment" controls to increase it.
DHD <ol style="list-style-type: none"> 1. Select Calibration -> Adjustment Mode and set it to Both. 2. Assign 12-volt trigger outputs to Cinema and Virtual Cinema aspect ratios; refer to Configure Lens Motor Trigger (CineWide with AutoScope) on page 58. 3. Select Aspect Ratio and set it to Cinema. On a D-113d/CineWide with AutoScope, this should position the anamorphic lens transport in front of the primary lenses. 4. Select Service -> Test Video and choose Primary Alignment. 	Projector <ol style="list-style-type: none"> 1. Install anamorphic lenses. 2. Align the primary (left-eye) image with the screen by adjusting the Left (top) anamorphic lens to produce the least amount of distortion. 	
DHD <ol style="list-style-type: none"> 1. Select Service -> Test Video and choose Secondary Alignment. 	Projector <ol style="list-style-type: none"> 1. Align the secondary (right-eye) image to the screen by adjusting the Right (bottom) anamorphic lens to produce the least amount of distortion. 	

Table 3-6. D-113d Optical Alignment Procedure (with Anamorphic Lenses) (continued)

<p>DHD (Align Secondary Image with Primary Image)</p> <ol style="list-style-type: none"> 1. Select Calibration -> Adjustment Mode and set it to Secondary. 2. Select Calibration -> Image Alignment -> Corner Alignment, check the Primary Test Pattern and Secondary Test Pattern boxes and adjust corners. 3. Select Calibration -> Image Alignment -> Midpoint Alignment, check the Primary Test Pattern and Secondary Test Pattern boxes and adjust midpoints. 	<p>Projector</p> <p>No adjustment needed.</p>	<p>Notes:</p> <ol style="list-style-type: none"> 1. The Primary lens image is usually left un-warped. This provides the best image quality and will be un-scaled for 1080p sources. You can adjust the Primary image if needed, however, by setting the Adjustment Mode to Primary, checking the Primary Test Pattern and Secondary Test Pattern boxes and adjusting the corners and/or midpoints prior to this step. 2. The DHD Controller saves the Image Alignment (warp) settings for each aspect ratio. To program additional aspect ratios, select each one and use the controls in the Corner Alignment and Midpoint Alignment menus. Or, select Calibration -> Copy/Paste -> Aspect Ratio -> Copy Settings, select a different aspect ratio and choose Paste Settings.
---	--	---

END

1. Power up your source components.
2. Connect an active, 1080p source to the **HDMI 1** input on the 3Dimension Processor if you have not already done so.

◀ **Turning on the Power**



Note

The **HDMI 1** input must be connected to an active 1080p source for the optical alignment procedure that you will perform later.

3. Turn on the main power switch at the rear of each DHD Controller and the 3Dimension Processor.




Note

Leave the AC power switch on the anamorphic lens transport in the “off” position for now.

4. Press the **ON** button on the remote control (or the **ON/STANDBY** (⏻) button on the Primary DHD Controller front panel) to turn on the system. The vacuum fluorescent display on the Primary DHD Controller front panel briefly displays “Initializing System,” followed by “Starting D-113d.”

- When the display is ready for use, the fluorescent display indicates the active source, input resolution/frame rate and aspect ratio/screen; for example:

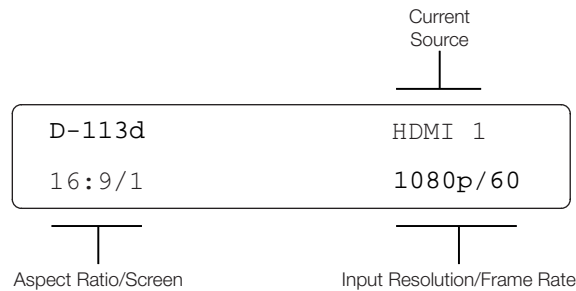

Adjusting the Focus, Zoom and Position of the Primary Lenses

Lens zoom, focus and position are motorized adjustments that are adjustable using the remote control (Figure 2-8). This allows you to adjust the focus and image size while at the screen for more accurate results.

Proceed as follows to adjust the left (top) and right (bottom) primary lenses for optimum image quality.

Left (Top) Primary Lens Adjustment:

- On the DHD Controller remote control or front panel, press **MENU**.
- Select **Calibration** from the Main Menu and enter the Calibration Menu passcode.



Note

You must enter a passcode to access the Calibration menu.

- Select **Adjustment Mode** from the Calibration Menu and set it to **Primary**.
- Press **EXIT** (or **MENU**) repeatedly to return to the Main Menu.
- Select **Service** from the Main Menu.
- Select **Display Device** from the Service Menu.
- Select **Configure** from the Display Device menu, then select **Lens**.



Note

*Lens controls are **not** available when the Adjustment Mode is set to **Both** (refer to **Adjustment Mode** on page 85).*

- Cover the Right (Bottom) primary lens.
- Focus Left (Top) Primary Lens:** To focus the projected image, use the cursor buttons to highlight "In" or "Out." Then, press and hold the **ENTER** button.
- Adjust Zoom on Left (Top) Primary Lens:** To make the picture smaller (zoom out), use the cursor buttons to highlight the minus sign (-). Then, press and hold the **ENTER** button. To enlarge the picture (zoom in), use the cursor buttons to highlight the plus sign (+). Then, press and hold the **ENTER** button.

11. **Adjust Position of Left (Top) Primary Lens:** To change the lens position, use the cursor buttons to highlight “Left,” “Right,” “Up” or “Down” in the Lens menu. Then, press and hold the **ENTER** button to shift the lens in that direction.

To return the lens to its home position (no horizontal or vertical shift), use the cursor buttons to highlight “Home” in the Lens menu. Then, press the **ENTER** button.

12. Remove the cover from the Right (bottom) primary lens and place it on the Left (top) projector lens.

Right (Bottom) Primary Lens Adjustment:

1. On the DHD Controller remote control or front panel, press **MENU**.
2. Select **Calibration** from the Main Menu.
3. Select **Adjustment Mode** from the Calibration Menu and set it to **Secondary**.
4. Press **EXIT** (or **MENU**) repeatedly to return to the Main Menu.
5. Select **Service** from the Main Menu.
6. Perform Steps 6 through 11 above with the right (bottom) primary lens.

When you have completed the primary lens adjustments (D-113d/CineWide with AutoScope only): Set the lens transport motor power switch to the “on” position.

By default, the D-113d is configured for a “floor/front” installation, in which the projector is installed upright and in front of the screen. If it is installed behind the screen, you must change the picture orientation. To do this:

◀ **Adjusting the Picture Orientation**

1. On the DHD Controller remote control or front panel, press **MENU**.
2. Select **Service** from the Main Menu and enter the Service Menu passcode.



Note

You must enter a passcode to access the Service menu.

3. Select **Display Device** from the Service Menu.
4. Select **Configure** from the Display Device menu, then select **Installation**.
5. Select **Orientation**, then choose Floor/Rear.

Adjusting the Image Geometry ➤

Projector and/or screen placement — among other things — can cause geometric distortion in the projected image.

To correct this, the DHD Controller provides precise, nine-point control over the projected image geometry. Use these controls as (and **only if**) needed to re-position the image corners, mid-points and center to eliminate “keystoning” (mis-aligned corners) or “pincushion” distortion (mid-points not aligned with corners). See Figure 3-23.

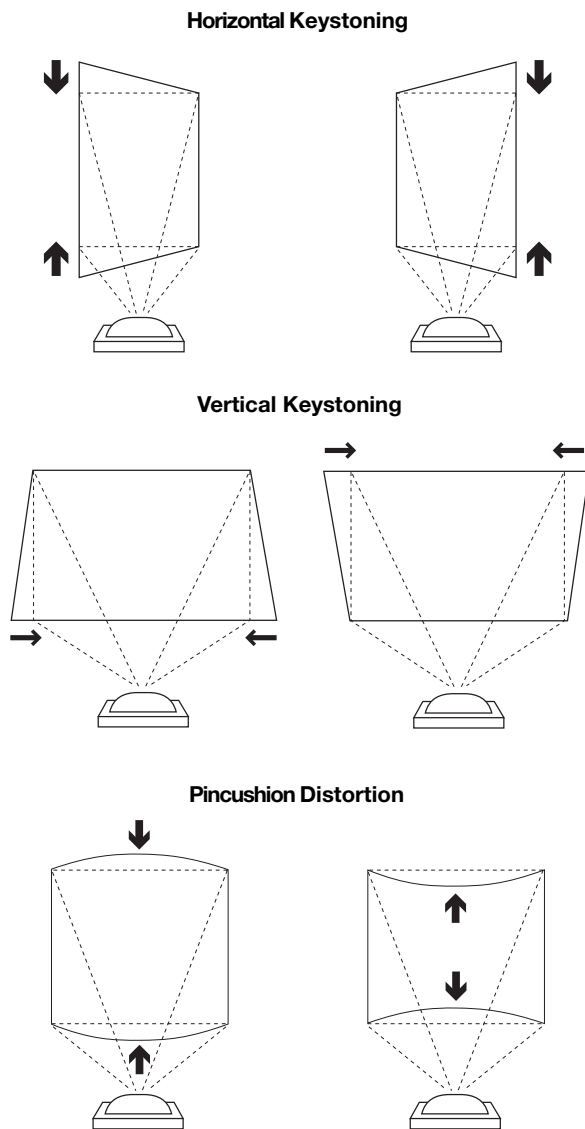


Figure 3-23. Keystone and Pincushion Distortion

“Keystoning” usually occurs when the projector is tilted relative to the screen. “Pincushion” distortion can sometimes occur if the throw distance is very short and/or the projector is equipped with an anamorphic lens.

To correct keystoneing or pincushion distortion:

1. On the DHD Controller remote control or front panel, press **MENU**.
2. Select **Calibration** from the Main Menu and enter the Calibration Menu passcode.



Note


You must enter a passcode to access the Calibration menu.

3. Select **Image Alignment** from the Calibration Menu.
4. Select **Corner Alignment** to correct a “keystoned” image by adjusting the image corner positions. Select **Midpoint Alignment** to correct pincushion distortion by adjusting the image edge mid-points. See Figure 3-24.



Tip

*Use the built-in test pattern when adjusting the image corners or midpoints. To access it, check the **Test Pattern** box in the Corner Alignment or Midpoint Alignment menu.*

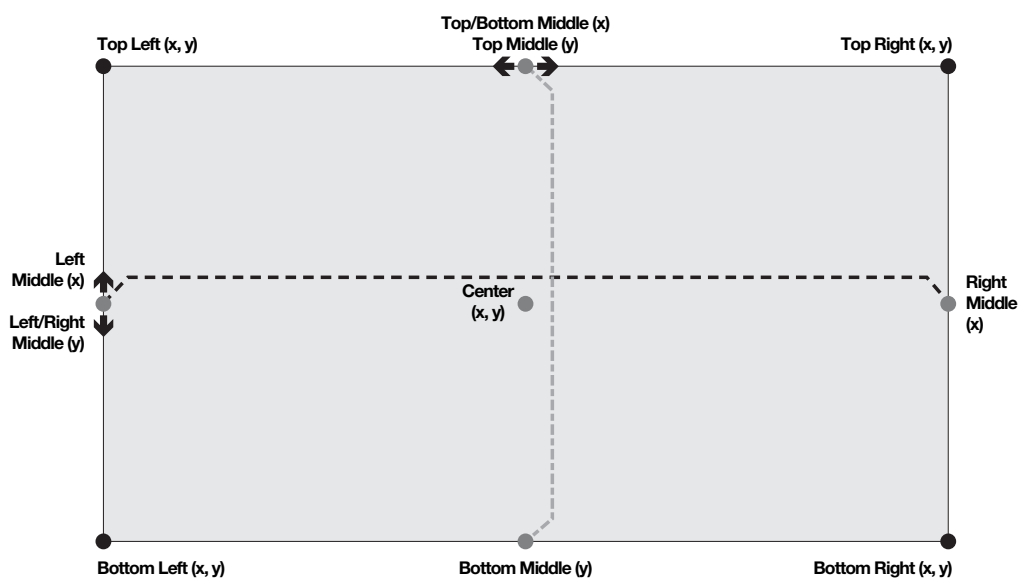

Notes:

1. Smaller “x” values move a point to the left; larger values move it to the right.
2. Smaller “y” values move a point up; larger values move it down.

Figure 3-24. Image Alignment Controls

Installing and Adjusting the CineWide Anamorphic Lens

If you are installing a D-113d/CineWide with AutoScope, proceed as follows to install and adjust the secondary anamorphic lens.



Note

It is extremely important that the primary lens is properly adjusted before you install the anamorphic lens. Ensure that the image from the primary lens is perfectly centered on the screen.

The D-113d Anamorphic lens mount kit consists of everything shown in Figure 3-25. Some components shipped with your projector may differ slightly from what is shown in these instructions. If any items are missing or damaged, please contact your Runco dealer or Runco Customer Service at (800) 23-RUNCO.

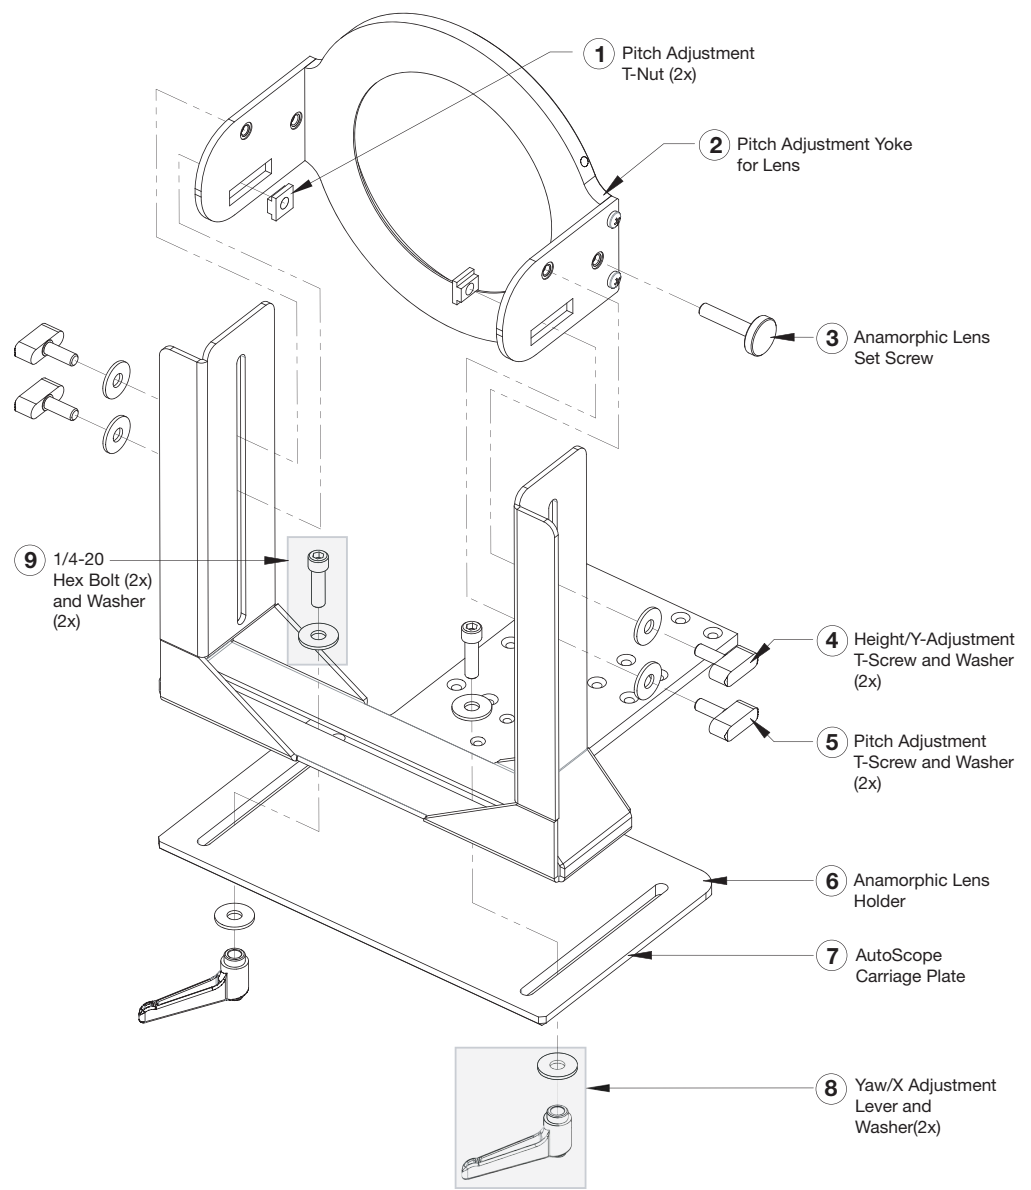
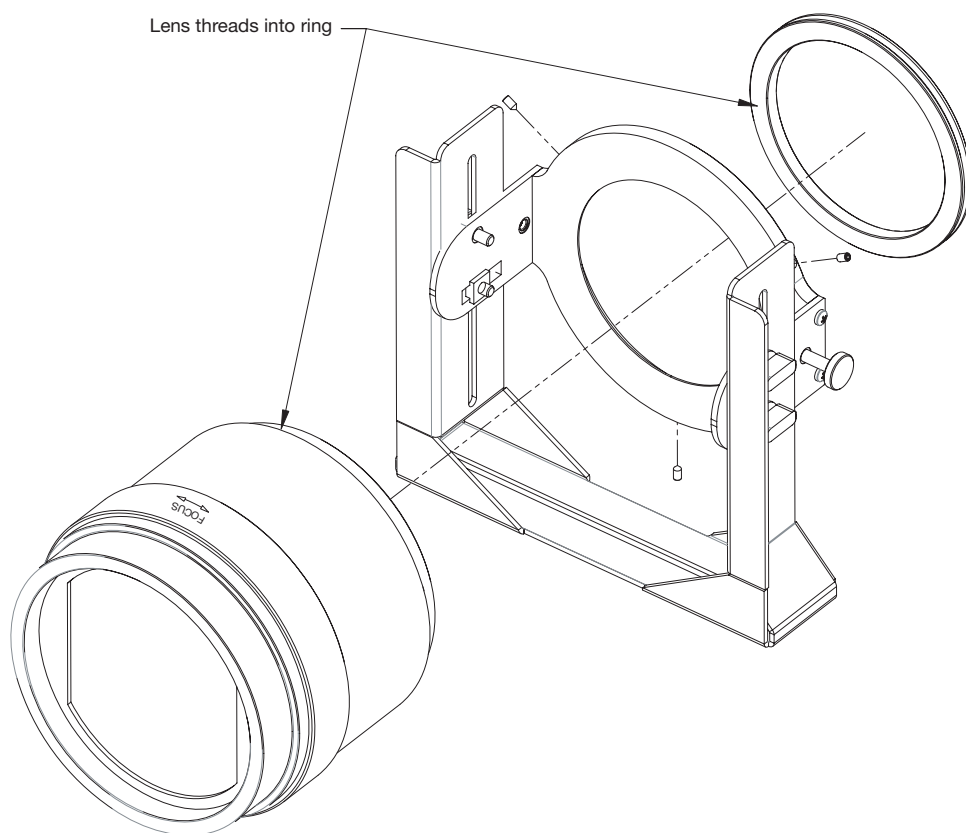


Figure 3-25. Anamorphic Lens Mounting Assembly - Exploded View

Attach Lens Mounting Assembly to Lens Motor Carriage Plate:


1. Remove the two Yaw/X Adjustment Levers and Washers (item #8) from the bottom of the Anamorphic Lens Holder (item #6).
2. Place the Anamorphic Lens Holder on top of the AutoScope Carriage Plate (item #7). Position the bracket so that the long slot at the bottom of the lens holder is perpendicular to the corresponding slots on the plate.
3. Secure the Anamorphic Lens Holder to the plate using the Hex Bolts/Washers (item #9) and Yaw/X Adjustment Levers that you removed in Step 1.
4. Use the Height/Y Adjustment T-Screws/Washers (item #4), Pitch Adjustment T-Screws/Washers (item #5) and T-Nuts (item #1) to attach the Pitch Adjustment Yoke and Lens Adapter Ring to the Anamorphic Lens Holder. **The Yoke should be as close to the primary lens as possible.**
5. Attach the lens to the Lens Adapter Ring by threading it clockwise.

**Figure 3-26. Attaching the Anamorphic Lens to the Lens Ring**

Configure Lens Motor Trigger (CineWide with AutoScope):

CineWide with AutoScope maintains constant image height independent of the aspect ratio, while using the full display resolution of the projector. It accomplishes this by moving the anamorphic lens in front of the primary lens when widescreen material is being viewed. When the viewer transitions back to 16:9 or 4:3 source material, the anamorphic lens moves out of the light path.

To configure the lens motor trigger on the DHD Controller for proper AutoScope operation:

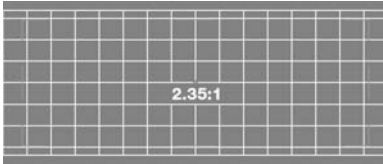

1. Project a 2.35:1 aspect ratio test pattern or other image on the screen.
2. On the DHD Controller remote control or front panel, press **MENU**.
3. Select **Calibration** from the Main Menu and enter the Calibration Menu passcode.
4. Select **Adjustment Mode** from the Calibration Menu and set it to **Both** (if it isn't already). Then, press **EXIT** twice to return to the Main Menu.
5. Select **Service** from the Main Menu and enter the Service Menu passcode.



Note

You must enter a passcode to access the Service menu for the first time after turning on the system.

6. Select **Triggers** from the Service menu.
7. Assign the trigger outputs to which the lens motors are connected to the **Cinema** and **Virtual Cinema** aspect ratios. This enables the lens motors to move the anamorphic lenses into position (in front of the primary lenses) when either aspect ratio is selected.
8. Select the Cinema or Virtual Cinema aspect ratio to move the anamorphic lenses into position, if they aren't already. To do this, press **CINEMA** or **V-CINE** on the DHD Controller remote control (Figure 2-8), or press **▲** or **▼** repeatedly with no menus visible on-screen.
9. Proceed as described in the following sections to adjust the top and bottom anamorphic lenses.


Horizontal Position (X) Adjustment:

1. Select **Service -> Test Video** and choose **Primary Alignment** (if adjusting the top anamorphic lens) or **Secondary Alignment** (if adjusting the bottom anamorphic lens).
2. Loosen the Yaw/X-Adjustment Levers underneath the lens.
3. Slowly move the anamorphic lens into place (from right to left or vice versa) so that there are no shadows on either side of the screen.
4. When the horizontal position is properly set, tighten the Yaw/X-Adjustment Levers to secure the lens in place.

Adjusting the Height (Y): With the alignment pattern still on-screen, loosen the Height/Y Adjustment T-Screws on either side of the lens. Then, slowly move the anamorphic lens into place so that there are no shadows on the top or bottom of the screen.

When the height is properly set, tighten the Height Adjustment T-Screws to secure the lens in place.

Adjusting the Pitch (Angle): Next, angle the lens to even out any top-to-bottom pincushion distortion. To do this, loosen the Pitch Adjustment T-Screws (directly below the Height/Y Adjustment T-Screws) on either side of the lens to allow it to pivot freely. Then, adjust the anamorphic lens angle so that the projected image is rectangular:

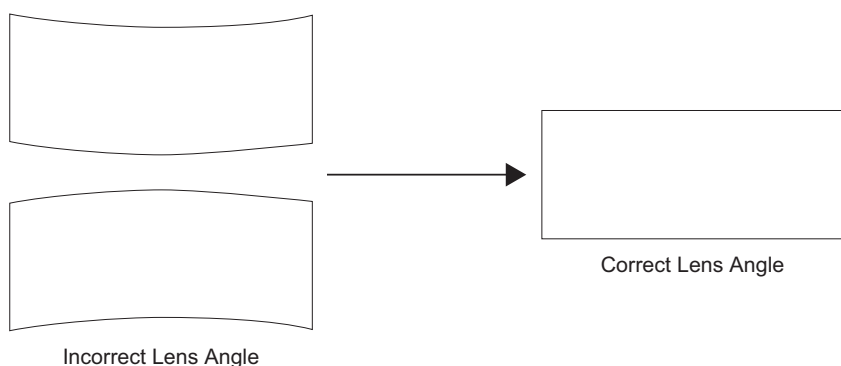

The anamorphic lens will almost always be angled with respect to the projector; this is normal.

Once the proper lens angle has been set, firmly tighten the Pitch Adjustment T-Screws to secure the lens in place.




Note

There may be some pincushion distortion even after the lens is properly adjusted, especially at shorter throw distances. If this is the case, Runco recommends that you slightly over-scan the image into the screen frame area to mask the distortion.

Yaw Adjust: Loosen the Yaw/X-Adjustment Levers to allow the lens to pivot freely from side to side. Then, angle the lens to even out any left-to-right pincushion distortion:


Anamorphic Lens (Top View)

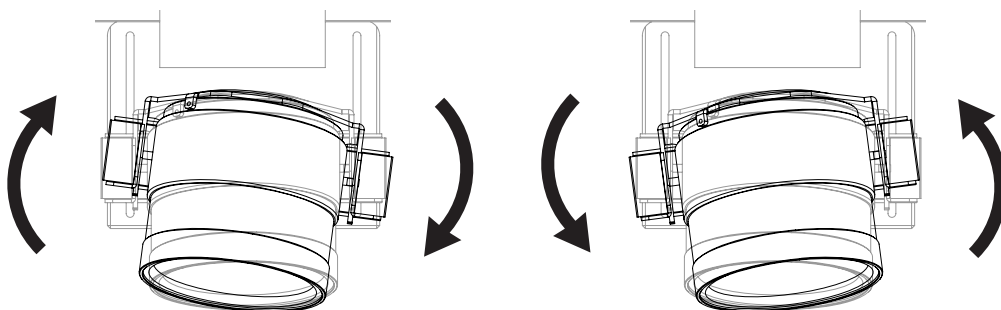


Once the proper lens angle has been set, firmly tighten the Yaw/X-Adjustment Levers to secure the lens in place.

Geometry:


1. Unscrew the Anamorphic Lens just enough to allow it to rotate freely.
2. Grasp the lens by the center ring and rotate the lens until the image is properly anamorphic:

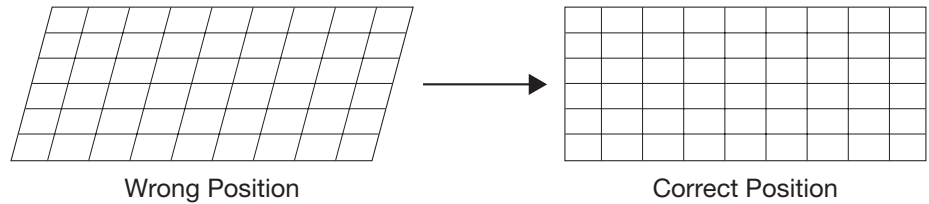

3. When the image geometry appears correct, tighten the Anamorphic Lens Set Screw (item #3) to secure the lens in place. (When viewed from the front, the rear opening on the anamorphic lens should appear as a tall, narrow oval.)

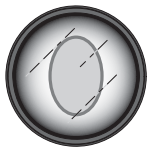

Focus: Finally, rotate the Focus Ring on the anamorphic lens to fine-tune the optical focus.

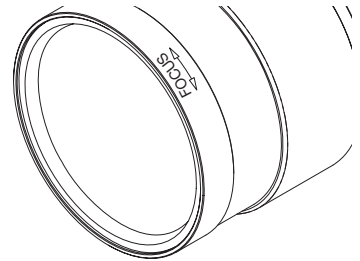

Verify Proper Image Alignment with Anamorphic Lenses:

After you have installed the anamorphic lenses, ensure that the 2.35:1 image corners and edges are aligned with the screen with no geometric distortion:

1. Select **Adjustment Mode** from the Calibration Menu and set it to **Secondary**.
2. Use the Image Alignment controls to make any necessary adjustments (refer to **Adjusting the Image Geometry** on page 54).

3.11 Working With the Lamp

At this point you may want to check and adjust the following settings to optimize lamp performance:

- Adjust the lamp intensity level to maintain uniform, constant brightness over time as the lamps age.
- Change the optical aperture size.

To access them, choose Calibration from the Main Menu and enter the Calibration menu passcode. Then, choose Display Color - Projector Settings -> Lamp (refer to **Lamp** on page 81) or Display Color - Projector Settings -> RVR (refer to **RVR** on page 82).

4. Operation

To display the Main Menu, press the **MENU** button on the remote control or Primary DHD Controller front panel (Figure 2-4).

To select a menu item, use the ▲ and ▼ buttons on the remote control or Primary DHD Controller front panel to highlight it. Then, to confirm your selection, press **ENTER** on the remote control or DHD Controller front panel.

The D-113d OSD menus are arranged hierarchically, as shown in Figure 4-1. Some menu options apply only to certain input signal types. For example, Phase and Tracking can only be adjusted for RGB, Component video or SCART signals.

4.1 Using the On-Screen Menus

Input Source	Composite 1
	Composite 2
	Composite 3
	Component
	HD 1
	HD 2
	SCART
	HDMI 1
	HDMI 2
	HDMI 3
Aspect Ratio	16:9
	4:3
	Letterbox
	VirtualWide
	Cinema
	Virtual Cinema
Screen	Native
	Screen 1 / Screen 2
Picture	Brightness
	Contrast
	Color
	Tint
	Sharpness
	Noise Filter
Input Position	Left/Right
	Up/Down
	Width
	Height
	Overscan
	Overscan Mode (Zoom/Crop)
	Phase (RGB/Component/SCART signals only)
	Tracking (RGB/Component/SCART signals only)
	Recall ISF Night or ISF Day
	Recall/Save Custom 1 or Custom 2
Memory Presets	Reset Custom 1 and Custom 2 to Factory Default
3D Processing	3D Mode (Auto, Off, Side-by-Side, Top-and-Bottom or Frame Packing)
	Reverse Eyes (On/Off)
Sleep Timer	Off, 30 Minutes, 60 Minutes, 90 Minutes, 2 Hours or 4 Hours
Information	Signal
	System
	Network
	Field Service
	Manufacturing

Calibration	Display Color - Common Settings	Gain	-100, -99... 0 ... 99, 100 (Red, Green, Blue)
		Offset	
		Gamma	Mode (Simple / Advanced)
			Simple (1.00, 1.01, 1.02 ... 2.20 ... 3.38, 3.39, 3.40)
			Advanced (0 (2.2 gamma curve), 1, 2, 3 ... 20 (custom gamma tables))
		Color Temp	Simple (3200K, 5500K, 6500K , 7500K or 9300K)
		Color Gamut	Auto , REC709, SMPTE-C, EBU or PCE
		PCE	Red x, y
			Green x, y
			Blue x, y
			White x, y
	Display Color - Projector Settings	Lamp	Mode (Power / Intensity)
			Power (300, 301, 302 ... 350W ... 370)
			Intensity (0% , 1%, 2% ... 100%)
		ConstantContrast	Off , Low or High
	Input Image	RVR	0 , 1, 2 ... 9
		Engine Configuration	Dual / Single
		Brightness	
		Contrast	
		Color	-50, -49 ... 0 ... 49, 50
	Input Color	Tint	
		Sharpness	
		Gain	-32, -31... 0 ... 31, 32 (HD 1, HD 2 and Component inputs only)
		Offset	
		Chroma Delay	0 , 1, 2 ... 7 (Composite inputs only)
	Save ISF Night / Save ISF Day	Noise Filter	0 , 1, 2 ... 63
		Back / Confirm	
	Copy/Paste	Memory Preset	Copy Settings
			Paste Settings
		Aspect Ratio	Copy Settings
	Output Shift		Paste Settings
		Left/Right	
		Up/Down	-50, -49 ... 0 ... 49, 50
		Width	
		Height	-50, -49, 48 ... 0
	Image Alignment	Screen Masking	0 , 1, 2 ... 100 (Top / Bottom / Left / Right / Test Pattern Enable)
		Corner Alignment	Top Left / Top Right / Bottom Left / Bottom Right / Test Pattern Enable
		Midpoint Alignment	Center / Top Middle / Left Middle / Right Middle / Bottom Middle / Test Pattern Enable
	Adjustment Mode	Both, Primary or Secondary	
		Owner Name	
		ISF Calibrated	
		ISF Other	
		Splash Timer	5, 6, 7 ... 15 ... 59, 60
	Splash Configure	Splash Enable	On/Off
	OSD Position	Hor. / Ver.	0 , 1, 2 ... 100

Note: Default settings appear in **bold type**.

Figure 4-1. D-113d OSD Menu Structure

Service	Test Video	Color Bars 1	
		Color Bars 2	
		Focus	
		Grey Bars	
		Primary / Secondary / Dual Alignment	
		3D	
	Input Names	Rename/Restore	
	Display Device - Configure	Installation - Picture Orientation	Auto, Floor Front , or Floor Rear
		Lens	Focus Zoom Shift (Up / Down, Left / Right, Home)
		Display Info. (read-only)	Projector Serial Number Lamp 1 Hours / Lamp 2 Hours
		Lamp Hours Reset	Lamp 1 Hours Reset Lamp 2 Hours Reset
		Lamp Calibration	Yes (confirm) / No
		Diagnostics	White, Red, Green, Blue, Yellow, Cyan, Magenta
	Network	IP Configuration	DHCP (On / Off), IP Address, Subnet Mask, Default Gateway, Communication Test
		Auto Firmware Upgrade	Auto Check for New Firmware, Auto Perform Upgrade, Check for New Firmware
		E-Mail Notification	E-Mail Address, Error Notification, Error Notification to Runco, Periodic Service Notification, Lamp Life Notification, Customer Information, E-Mail Calibration Data
		Remote Network Control	On / Off
	Color Space	Auto , REC601, REC709, RGB-PC or RGB-Video	(Not available on Composite 1, Composite 2 or Composite 3 inputs)
	Triggers	1 / 2 / 3	
	Miscellaneous	Language	English , Français, Deutsch, Italiano, Español, Svenska, 简体中文 (Simplified Chinese), 繁體中文 (Traditional Chinese), Português, Русский (Russian), 日本語 (Japanese) or 한국어 (Korean)
		OSD Timer	0 (no timeout) or 5, 6, 7 ... 30 ... 60 sec.
		OSD Messages	On / Off
		Blank Screen Color	Red/Green/Blue = 0 , 1, 2, 3 ... 255
		Sidebar Color	
		Film Mode (SD sources only)	On / Off
		CUE (Chroma Upsampling Error)	On / Off
		Remote Code	00, 01, 02 ... 17 ... 31
	Sync Threshold	0, 1, 2 ... 15	(HD 1, HD 2 and Component inputs only)
	HDMI	HDMI EDID Extension	On / Off (per HDMI input)
		Audio Format	Combined / HDMI Out (To Display) / HDMI Out (Audio Only)
		CEC	On / Off
		HPD Toggle Rejection	Auto / On / Off
	Front Panel Brightness	Logo LED	0 (off), 1, 2 ... 31
		Standby LED	On / Off
		LCD	0 (off), 1, 2, 3 or 4
	Auto Power Off	Enable	On / Off
		Hours	1, 2, 3, 4, ... 8 ... 23, 24
	Standby Mode	Low Power / Fast Startup	
	System Reset		

Figure 4-1. D-113d OSD Menu Structure (continued)

Main Menu ➤

The Main Menu is the starting point for accessing all DHD Controller functions. (You must enter a passcode to access the Calibration and Service menus.)

Runco Video	
Input Source	
Aspect Ratio	
Screen	
Picture	
Input Position	
Memory Presets	
3D Processing	
Sleep Timer	
Information	
Calibration	
Service	

**Note**

You must perform and save all image adjustments on both the Primary and Secondary DHD Controllers. The **Adjustment Mode** setting allows you to do this. For more information, refer to **Adjustment Mode** on page 85.

When you set the Adjustment Mode to **Primary** or **Secondary**, the Main Menu title becomes “Runco Video (Pri.)” or “Runco Video (Sec.)” respectively.

Input Source ➤

From the Main Menu, select Input Source to choose a video signal source.

The active source is indicated by an arrow (➔) to its left; in this example, Composite is the active source.

Input Source	
➔ Composite 1	
Composite 2	
Composite 3	
Component	
HD 1	
HD 2	
SCART	
HDMI 1	
HDMI 2	
HDMI 3	
HDMI 4	

Aspect Ratio ➤

To change the aspect ratio (size and shape) of the projected image, select Aspect Ratio from the Main Menu and press **ENTER**. Select the appropriate aspect ratio for your screen size and the type of program material being viewed; refer to Table 4-1.

The currently-selected aspect ratio is indicated by a “☒” to its left; in this example, 16:9 is selected.

Aspect Ratio	
<input checked="" type="checkbox"/> 16:9	
<input type="checkbox"/> 4:3	
<input type="checkbox"/> Letterbox	
<input type="checkbox"/> VirtualWide	
<input type="checkbox"/> Cinema	
<input type="checkbox"/> Virtual Cinema	
<input type="checkbox"/> Native	

Note that some aspect ratios are unavailable and/or not useful with certain types of source material. The optimal setting depends on a number of factors, such as:

- The aspect ratio of the source material, as broadcast or encoded on the playback medium.
- The “display type” (16:9 or 4:3) and output resolution settings at the source component. Most modern DVD/BD players and set-top boxes have such controls.
- Viewer preference (original aspect ratio with “black bars,” or a full-screen presentation with some distortion or cropping).

**Note**

The aspect ratio selection is automatically saved for each input and resolution.

Table 4-1. Aspect Ratio Settings

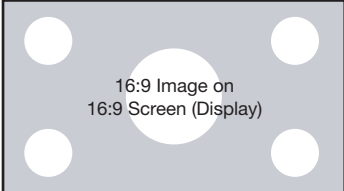
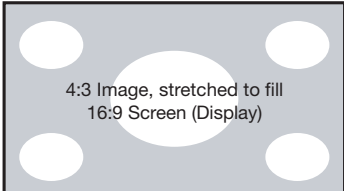
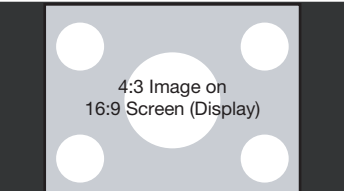
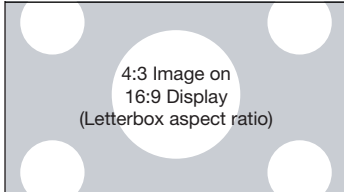
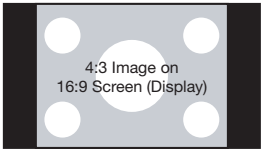
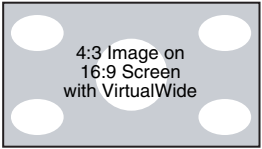

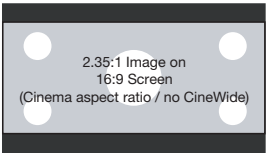
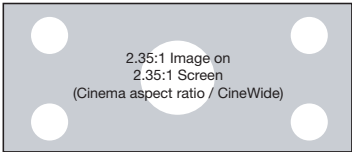
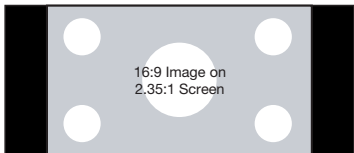
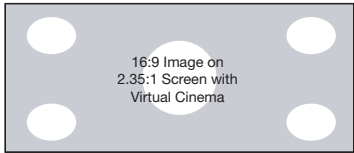

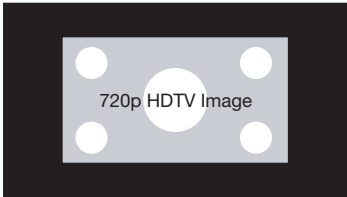
Aspect Ratio	Remote Control Key	Description	
16:9	16:9	 <p>16:9 Image on 16:9 Screen (Display)</p>  <p>4:3 Image, stretched to fill 16:9 Screen (Display)</p>	<p>Select 16:9 to view 16:9 DVDs and HDTV programs in their native aspect ratio.</p> <p>4:3 images are stretched horizontally to fit a 16:9 screen.</p>
4:3	4:3	 <p>4:3 Image on 16:9 Screen (Display)</p>	<p>Standard 4:3 scales the input signal to fit in the center of the 16:9 screen. 4:3 is the aspect ratio used by computer monitors, standard television programming and most VHS video cassettes.</p>
Letterbox	LET BOX	 <p>4:3 Image on 16:9 Display (Letterbox aspect ratio)</p>	<p>Letterbox mode scales (zooms in on) a 4:3 image linearly (by the same amount on all sides) to fill a 16:9 display. Letterbox is best suited for viewing LaserDisc movies or non-anamorphic DVDs on a 16:9 screen.</p>
VirtualWide	V-WIDE	 <p>4:3 Image on 16:9 Screen (Display)</p>  <p>4:3 Image on 16:9 Screen with VirtualWide</p>  <p>4:3 Image on 2.35:1 Screen with VirtualWide</p>	<p>VirtualWide scales a 4:3 image NON-linearly (more on the sides than in the center) to fit a 16:9 screen.</p> <p>On a 2.35:1 screen, the image is centered between black bars on either side.</p>

Table 4-1. Aspect Ratio Settings (continued)

Aspect Ratio	Remote Control Key	Description	
Cinema	CINEMA		<p>Select Cinema to view 2.35 source material in its native aspect ratio.</p> <p>With a 16:9 screen and a standard D-113d (without an anamorphic lens), the upper and lower portions of the screen are masked, but the geometry of the active image area is unchanged.</p>
			<p>With a 2.35:1 screen and an anamorphic lens, the DHD Controller scales the 2.35:1 image so that the active image area fills the 16:9 chip surface, eliminating the black bars. The secondary, anamorphic lens then restores the proper geometry to the 2.35:1 image.</p>
Virtual Cinema	V-CINE		<p>A 16:9 image is scaled NON-linearly (more on the sides than in the center) to fit a 2.35:1 screen.</p>
			
Native	NATIVE		<p>Select Native to display the source signal in its native resolution, centered in the display area with no re-sizing or overscan.</p> <p>This means, for example, that 720p HDTV programs will display with unused pixels on all sides: 320 on the left and right sides and 180 above and below.</p> <p>With SDTV and EDTV sources, the DHD Controller scales the image horizontally to achieve a 16:9 aspect ratio.</p>
			

The Screen Menu allows you to recall multiple sets of stored values for certain controls (Output Shift and Image Alignment) that are saved for each aspect ratio. Such settings are also saved “per screen.” To recall the Output Shift and Image Alignment settings associated with “Screen 1” or “Screen 2,” make that selection here.

Use the controls in the Picture Menu to calibrate each DHD Controller input to achieve optimum picture quality.

The DHD Controller has been designed to incorporate setup and calibration standards established by the Imaging Science Foundation (ISF). The ISF has developed carefully crafted, industry-recognized standards for optimal video performance and has implemented a training program for technicians and installers to use these standards to obtain optimal picture quality from Runco video display devices. Accordingly, Runco recommends that setup and calibration be performed by an ISF certified installation technician.

All signal types require separate processing. Therefore, you need to calibrate each DHD Controller input separately.

◀ Screen

Screen
Screen 1
Screen 2

◀ Picture

Picture
Brightness
Contrast
Color
Tint
Sharpness
Noise Filter



Note

1. When you change a picture quality setting, save the change to a preset afterwards. Otherwise, the change will be lost when a different input is selected. (Picture quality settings are saved for each input and display mode separately.) For information about saving settings, refer to **Memory Presets** on page 73.
2. For best results, Runco recommends that you set **ConstantContrast** to Off before adjusting Brightness, Contrast and other image quality settings in this menu (refer to **ConstantContrast** on page 82). After you have completed the initial calibration, set **ConstantContrast** to On if desired.

Although it may be possible to obtain satisfactory picture quality using the naked eye and regular program material, Runco recommends using an external test pattern source (Ovation Multimedia, Digital Video Essentials or AVIA test DVD or equivalent) for best results.

Connect your test pattern source to the input that you are calibrating and proceed as follows. **Perform the adjustments in the order listed here.**

Brightness: On your external test pattern source, select a PLUGE pattern. (PLUGE is an acronym for “Picture Line-Up Generation Equipment.”) Figure 4-2 shows a typical PLUGE pattern.

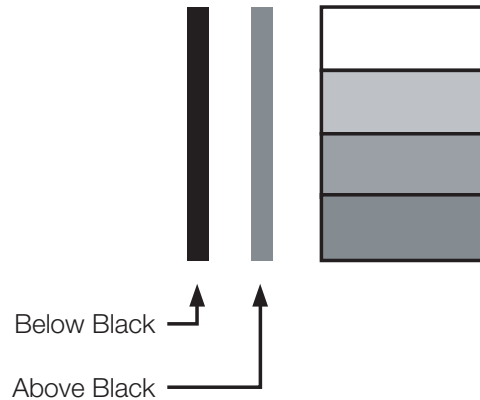


Figure 4-2. Typical PLUGE Pattern for Adjusting Brightness

PLUGE patterns vary but generally consist of some combination of black, white and gray areas against a black background. The example above includes two vertical bars and four shaded boxes.

Select Brightness from the Picture menu and press **ENTER**. Adjust the brightness so that:

- The darkest black bars disappear into the background.
- The dark gray areas are barely visible.
- The lighter gray areas are clearly visible.
- The white areas are a comfortable level of true white.
- The image contains only black, gray and white (no color).

Contrast: On your external test pattern source, select a stepped, gray-bar pattern like the one shown in Figure 4-3.

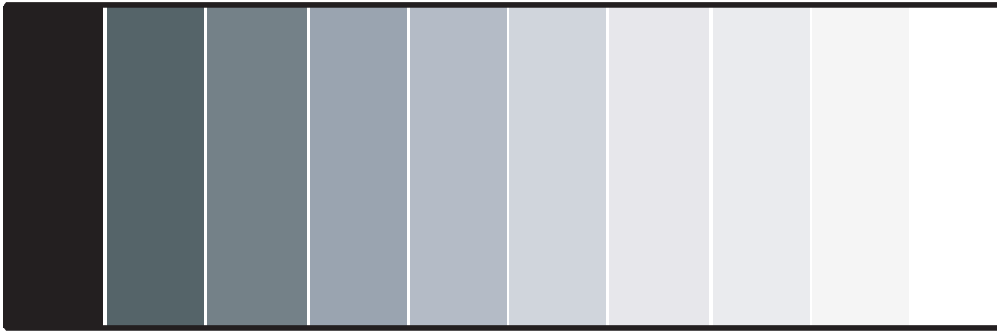


Figure 4-3. Typical Gray Bar Pattern for Adjusting Contrast

Select Contrast and press **ENTER**. Adjust the contrast to a point just below which the white rectangle starts to increase in size.



Note

Brightness and contrast controls are interactive. A change to one may require a subtle change to the other in order to achieve the optimum setting.

Color Saturation: On your external test pattern source, select a color bar pattern like the one shown in Figure 4-4.


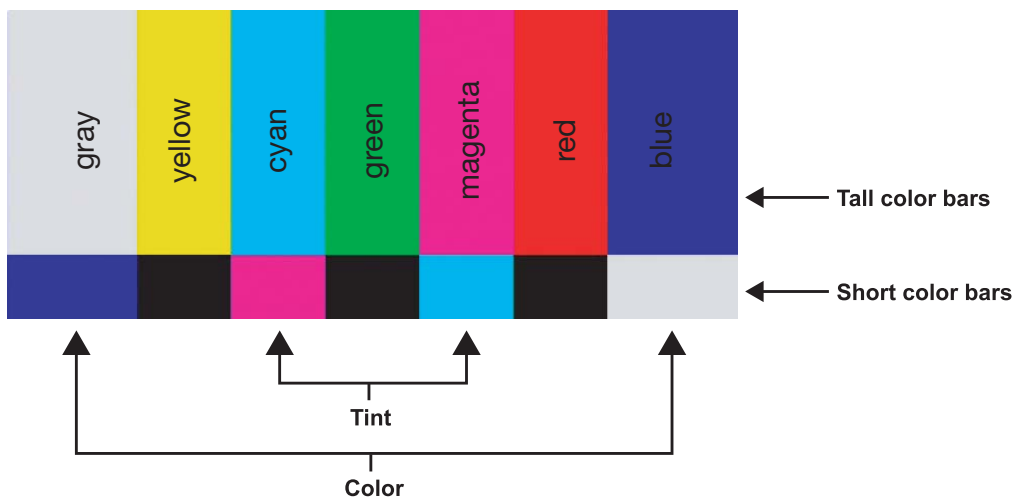


Figure 4-4. Typical Color Bar Pattern for Adjusting Color Saturation and Tint

1. Press the **MENU** button on the remote control or DHD Controller front panel.
2. Select Service from the Main Menu and press **ENTER**.
3. Enter the Service menu passcode.
4. Select Display Device from the Service menu and press **ENTER**.
5. Press **ENTER** again to select Configure.

6. Select Diagnostics and press **ENTER**.
7. Select Blue from the Diagnostics menu, then press **ENTER** to display only the blue color channel.
8. Press **EXIT** (or **MENU**) repeatedly to return to the Main Menu.
9. Select Picture from the Main Menu and press **ENTER**.
10. Select Color from the Picture menu and press **ENTER**.
11. Adjust the color saturation level until the outermost (gray and blue) color bars appear to be a single shade of blue:

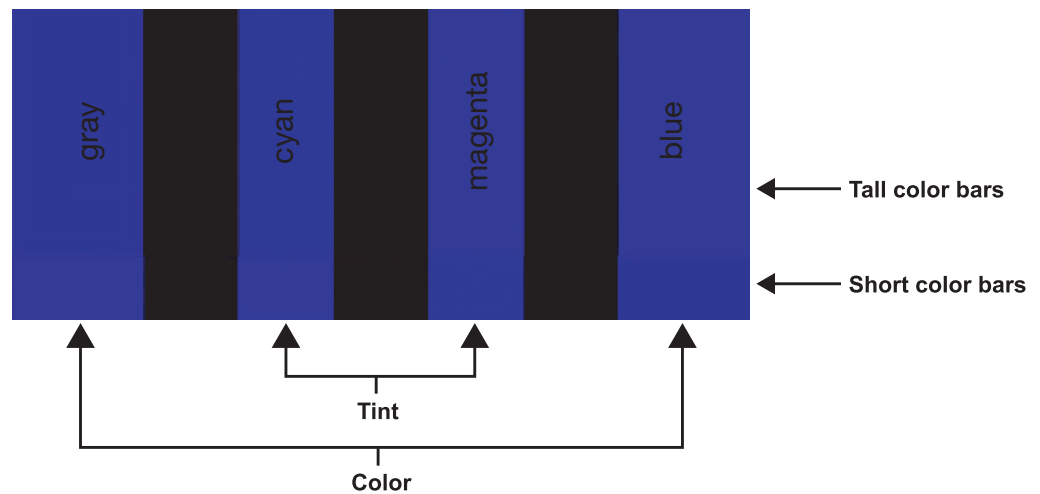

Tint: Tint or “hue” is essentially the ratio of red to green in the color portion of the image. When tint is decreased, the image appears redder; when it is increased the image appears greener.

To adjust the tint, enable “blue only” display mode in the Diagnostics menu, as you would for adjusting color saturation (refer to the previous section, **Color Saturation**).

Select Tint from the Picture menu and press **ENTER**. Adjust the tint level until the cyan and magenta color bars (on either side of the green bar) appear to be a single shade of blue.



Note

Like the brightness and contrast controls, the color and tint controls are interactive. A change to one may require a subtle change to the other in order to achieve the optimum setting.

Sharpness: “Sharpness” is the amount of high-frequency detail in the image. To adjust sharpness, select Sharpness from the Picture menu and press **ENTER**. On your external test pattern source, select a pattern like the one shown in Figure 4-5. Adjust as needed, looking for white edges around the transitions from black to gray and differently-sized lines in the “sweep” patterns at the top and bottom. Lower the sharpness setting to eliminate them.

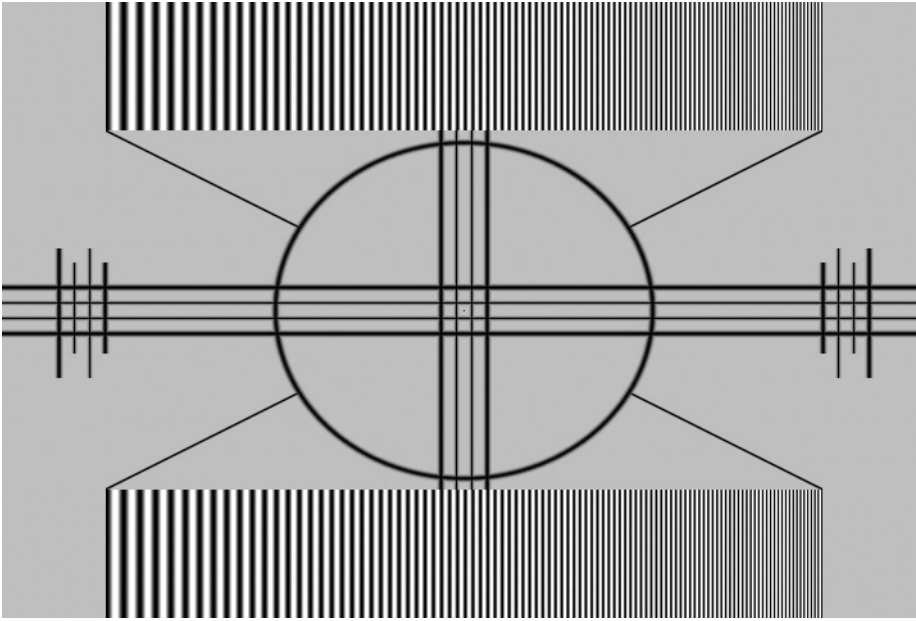


Figure 4-5. Typical Test Pattern for Adjusting Sharpness

Noise Filter: To apply noise filtering to the input signal, select Noise Filter from the Picture menu. The Noise Filter is useful for clearing up noisy images from 480i video sources.

Use the left- or right-arrow buttons to select the desired amount of noise reduction, keeping in mind that higher settings (which reduce high frequencies) may also “soften” the image.

Use the controls in the Input Position Menu to fine-tune the aspect ratio and image position for the current source.



Note

The input position settings are automatically saved for each input and resolution.

Left/Right: Select Left/Right from the Input Position menu to shift the projected image horizontally. Press ► to shift the image to the right; press ◀ to shift it to the left.

Up/Down: Select Up/Down from the Input Position menu to shift the projected image vertically. Press ► to shift the image upward; press ◀ to shift it downward.

Width: Select Width from the Input Position menu to change the projected image width. Press ► to increase the width; press ◀ to decrease it.

◀ Input Position

Input Position
Left/Right
Up/Down
Width
Height
Overscan
Overscan Mode
Phase
Tracking

Height: Select Height from the Input Position menu to change the projected image height. Press ► to increase the height; press ◀ to decrease it.

Overscan/Overscan Mode: Overscan pushes the outside edge of the active picture area of the video signal out beyond the edge of the display area.

Some television programs are produced based on the assumption that older television sets may not display the outer edges of the broadcast picture area. Overscan effectively trims away these inactive, outer edges and enlarges the remaining portion of the image to fill the display area.

For HDTV, DVDs and other video sources, Overscan is generally not necessary or desirable.

This control defines the amount of overscan applied to the image. The range is from 0 to 20. There are two overscan modes:

- In **Crop** mode, each increment adds a mask at the top, bottom, left and right edges of the source image equal to 0.5% of the displayed horizontal resolution (1% total). A setting of 10, for example, crops the image 5% on all sides or 10% total.
- In **Zoom** mode, each increment adds a factor to the scaling of the source image so that the vertical and horizontal resolutions are 100% plus 1% increments of the size determined by the aspect ratio function. A setting of 10, for example, zooms in on the image 5% on all sides or 10% total.

Figure 4-6 illustrates the effect of each overscan mode setting.

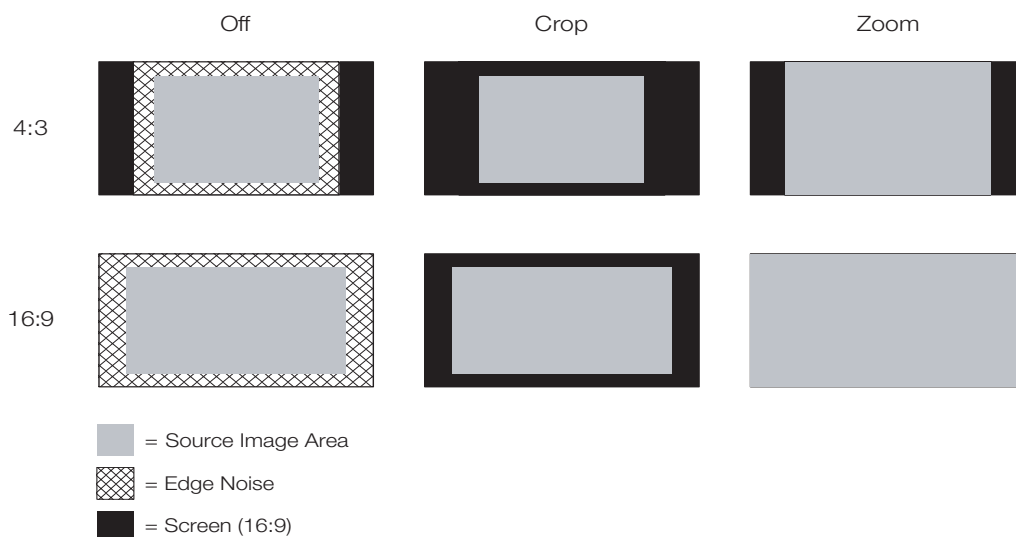


Figure 4-6. Overscan Modes

Phase (RGB, Component or SCART sources): This control adjusts the phase of the pixel sampling clock relative to the incoming signal. Adjust the phase when an RGB, Component or SCART image still shows shimmer or “noise” after Tracking has been optimized.



Tip

Adjust the Phase after adjusting Tracking (see below).

For best results, use a good test pattern such as a smooth gray consisting of a clear pattern of black and white pixels, or a similar “half on, half off” graphic image. Adjust the slider until the image stabilizes and each pixel is clearly defined. You may notice that you can stabilize the image at more than one point. Use either setting in such cases.

Tracking (RGB, Component or SCART sources): Tracking determines the frequency of the pixel sampling clock, indicated by the number of incoming pixels per line, so that all pixels generated by a particular source are sampled.

Steady flickering or several soft vertical stripes or bands across the entire image indicates poor pixel tracking. Proper pixel tracking helps ensure that the image quality is consistent across the screen, that aspect ratio is maintained and that pixel phase (see above) can be optimized.

For each input, the DHD Controller lets you save image quality settings as presets that you can recall at a later time. You can create up to four presets per input and display mode (resolution and frame rate).

The DHD Controller stores the following display modes in each memory preset:

- 480i
- 480p
- 576i
- 576p
- 720p/24 Hz
- 720p/25 Hz
- 720p/30 Hz
- 720p/50 Hz
- 720p/60 Hz
- 1080i/50 Hz
- 1080i/50 Hz (Australia)
- 1080i/60 Hz
- 1080p/24 Hz
- 1080p/25 Hz
- 1080p/30 Hz
- 1080p/50 Hz
- 1080p/60 Hz

Use the Memory Presets menu to recall saved image presets, or to save image settings in the “Custom 1” or “Custom 2” memory location. The currently-selected preset is indicated by a “➔” to its left; in the example shown here, ISF Night is selected.

◀ **Memory Presets**

Memory Presets			
➔	ISF Night		
	ISF Day		
	Custom 1	Save	Reset
	Custom 2	Save	Reset

You should save changes to any of the following settings to a preset; otherwise they will be lost when a new input source or resolution is selected:

- Brightness
- Contrast
- Color saturation
- Tint
- Sharpness
- Gamma
- Lamp Settings
- Color temperature and white balance

To select a memory preset, press ▲ or ▼ to highlight it and press **ENTER**.

To save the settings for the current input and display mode to the Custom 1 or Custom 2 memory preset, select it, press ◀ or ▶ to highlight Save and press **ENTER**.



Note

To save the settings for the current input and display mode to the ISF Night or ISF Day memory preset, select Save ISF Night or Save ISF Day from the Calibration menu (refer to **Save ISF Night/Save ISF Day** on page 83).

To reset the Custom 1 or Custom 2 memory preset to its factory-default state, select it, press ◀ or ▶ to highlight Reset and press **ENTER**.

3D Processing ➤


3D Processing
3D Mode
Reverse Eyes

Select 3D Processing from the Main Menu to set the following options related to formatting and delivery of HDMI 3D content.

3D Mode: Select 3D Mode from the 3D Processing menu to specify how the Primary and Secondary DHD Controllers process the “left eye” and “right eye” image components respectively.


- Choose **Auto** to have the DHD Controller determine the appropriate 3D mode based on the HDMI vendor-specific InfoFrame data. This is the default setting.
- Choose **Off** for 2D content.
- Choose **Side-by-Side** to have the Primary and Secondary DHD Controllers scale the left and right image halves respectively to fill the screen.

Side-by-Side multiplexing is used with 1080i source material.

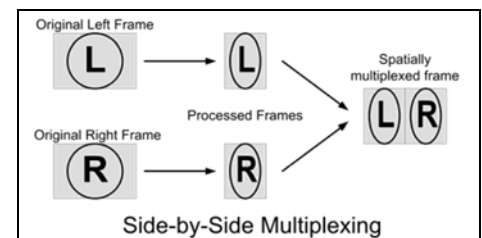

- Choose **Top-and-Bottom** to have the Primary and Secondary DHD Controllers scale the top and bottom image halves respectively to fill the screen.

Top-and-Bottom multiplexing is used with 720p or 1080p source material.

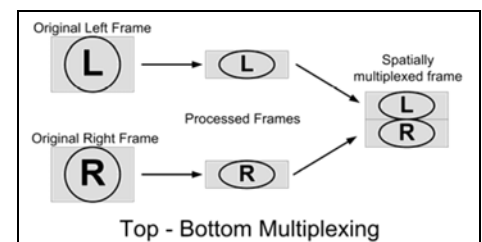

- Choose **Frame Packing** to have the 3Dimension Processor decode frame packed data into left and right eye data. In this mode, the DHD Controllers do not perform any 3D processing.

Reverse Eyes: By default, the Primary and Secondary DHD Controllers are dedicated to “left eye” and “right eye” image processing respectively. To reverse this relationship, choose Reverse Eyes from the 3D Processing menu and set it to **On**.

Select Sleep Timer from the Main Menu to turn off the D-113d after a specified interval. Press ▲ or ▼ to select Off, 30 Minutes, 60 Minutes, 90 Minutes, 2 Hours or 4 Hours. Then, press **ENTER**.

◀ **Sleep Timer**

Sleep Timer	
→	Off
	30 Minutes
	60 Minutes
	90 Minutes
	2 Hours
	4 Hours

Information ➤

Information
Signal
System
Network
Field Service
Manufacturing

Signal / System: Select Information from the Main Menu, then choose either Signal or System to display information about the current input signal (resolution, frequency, type et cetera) and installed firmware versions, as well as other information that uniquely identifies your DHD Controller and display device.

Should you ever need to contact Runco Technical Support, this information will help them answer your questions or resolve product performance issues.

Signal	
Input Source	HDMI 1
Signal Format	1080p/60
Input Resolution	1920x1080
Vertical Freq	59.94 Hz
Horizontal Freq	67.500 kHz
Pixel Clock	148.500 MHz
Color Space	REC709
Sync Type	Separate
Memory Preset	ISF Night

System	
Model	DHD4
Display Name	D-113d
Output Resolution	1920x1080
Serial Number	00000000
Boot Version	4.0
Firmware Version	4.0
Micro Version	4.0

Network	
MAC Address	1A:2B:3C:4D:5E:6F
IP Address	192.168.0.150
Subnet Mask	255.255.0.0
Default Gateway	192.168.1.1
DHCP	Enabled
Network Status	Connected

Network: Select Information from the Main Menu, then choose Network to display information about the Ethernet network connection.

To enable network communication via Ethernet, refer to **IP Configuration** on page 89.

Field Service / Manufacturing: The Field Service and Manufacturing menus are password-protected and intended for use only by Runco service personnel and factory technicians.

Use the Calibration menu to perform advanced picture quality adjustments. **This menu should be used by ISF-certified technicians only.**



Note

You must enter a passcode to access the Calibration menu.

To recall the ISF Night or ISF Day settings, select “ISF Night” or “ISF Day” from the Memory Presets menu (see page 73) or use the corresponding remote control buttons.

Display Color - Common Settings: Use the Display Color - Common Settings menu to adjust the color balance at the DHD Controller output. These settings are saved independently for each input and display mode.

- **Gain:** Use the Gain controls to correct color imbalances in the bright areas of the image. A good way to do this is to use a test pattern consisting mostly of solid white areas, such as an 80 IRE “window” pattern. If the white areas contain traces of red (Pr), green (Y) or blue (Pr), decrease the Gain for that color.
- **Offset:** Use the Offset controls to correct color imbalances in the dark areas of the image. A good way to do this is to use a test pattern consisting mostly of dark gray areas, such as a 30 IRE “window” pattern. If the gray areas contain traces of red (Pr), green (Y) or blue (Pr), decrease the Offset for that color.
- **Gamma:** Select Gamma from the Display Color - Common Settings menu to choose a de-gamma curve. Used correctly, the Gamma control can improve contrast while maintaining good details for blacks and whites. If excess ambient light washes out the image and it becomes difficult or impossible to see details in dark areas, lower the gamma setting to compensate. This improves contrast while maintaining good details for blacks. Conversely, if the image is washed out and unnatural, with excessive detail in black areas, increase the setting.
- **Mode:** With the D-113d, two Gamma adjustment modes are available: Simple or Advanced. The two modes are mutually exclusive; when you select the Simple mode, the Advanced selection in the Gamma menu is grayed out. Likewise, when you select Advanced, the Simple selection is grayed out.
- **Simple:** Use the Simple Gamma control to perform gamma correction at the display according to a simple power law gamma function. The value chosen here corresponds to the power variable in this equation:

$$\text{Output} = \text{Input}^{\text{Power}}$$

The DHD Controller applies this gamma curve to all three primary color channels (red, green and blue).

- **Advanced:** To select a custom gamma curve, select Mode from the Gamma menu and set it to Advanced. Then, select Advanced from the Gamma menu to select one of up to 20 pre-programmed gamma tables. Custom gamma tables provide the ability to perform complex, non-linear gamma correction on each primary color channel independently of the others.

◀ **Calibration**

Calibration
ISF Settings
Display Color
Input Image
Input Color
Save ISF Night
Save ISF Day
Copy/Paste
Output Shift
Image Alignment
Adjustment Mode
Splash Configure
OSD Position

- **Color Temp:** Select Color Temp from the Display Color - Common Settings menu to adjust the color temperature. Color temperature establishes the “color of gray” by adjusting the 75% white point to various color points.

What are “color points?” A “color point” is an x/y coordinate pair that defines a color’s location on the standard CIE chromaticity graph, shown in Figure 4-7. (CIE stands for “Commission Internationale de l’Éclairage” (International Commission on Illumination), the organization responsible for color measurement and management standards.)

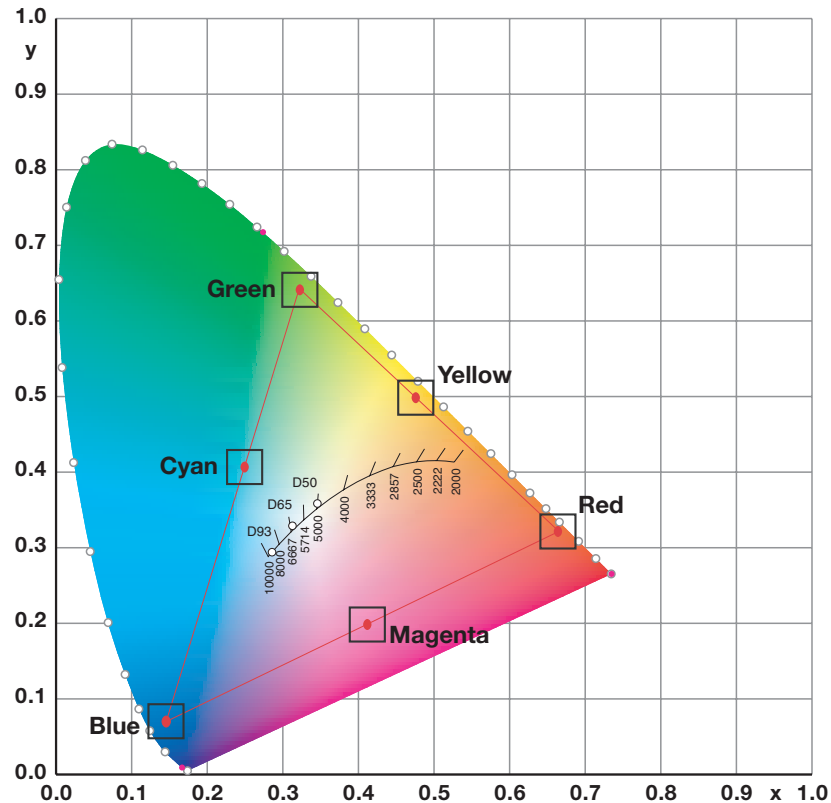


Figure 4-7. CIE 1931 Chromaticity Diagram

- **Simple:** Select Simple mode from the Color Temp menu (with the D-113d, this is the only choice) to choose one of five color temperature presets: 3200K, 5500K, 6500K, 7500K and 9300K. The default setting, 6500K, is appropriate for most situations. Higher settings produce a “bluer” picture; lower ones impart a reddish hue to the image.

Table 4-2 lists the x- and y-coordinates for each color temperature preset in “Simple” mode.

Table 4-2. Color Temperature Presets and Associated Color Points

Color Temperature Preset	Associated x/y Values	
	x	y
3200K	0.423	0.404
5500K	0.332	0.348
6500K	0.313	0.329
7500K	0.299	0.315
9300K	0.284	0.298

- **Color Gamut:** Select Color Gamut from the Display Color - Common Settings menu to select a color gamut (range) that may be different from the default color gamut.

Each setting defines the precise hue of each primary (red, green and blue) and secondary (yellow, cyan and magenta) color component used to generate the millions of colors produced in displays. Changing this setting relocates the “triangle” for possible colors (see Figure 4-7). For example, changing the x/y coordinates for red moves the color closer to either orange or violet, which in turn affects all displayed colors having a red component.



Note

The DHD Controller uses the Color Gamut settings for all display modes on a given input.

- The default setting, **Auto**, automatically chooses the appropriate color gamut:
 - **SMPTE C** for NTSC, 480i and 480p sources.
 - **EBU** for PAL, SECAM, 576i and 576p sources.
 - **REC709** for all other sources.
- Select **REC709** to use the color gamut defined in ITU-R BT.709-5.
- Select **SMPTE-C** to use the color gamut defined in SMPTE 170M-1999.
- Select **EBU** to use the color gamut defined in EBU Tech. 3213-E.
- Select **PCE** to use the Personal Color Equalizer feature of the D-113d. PCE lets you define a custom color gamut. Refer to the next section, **PCE**, for instructions on how to do this.

Table 4-3 lists the Color Gamut settings and associated x- and y-coordinates for each primary and secondary color component.

Table 4-3. x/y Color Gamut Values

Primary Color	Color Gamut Settings and Associated x/y Values					
	REC709		SMPTE "C"		EBU	
	x	y	x	y	x	y
Red	0.640	0.330	0.635	0.340	0.640	0.330
Yellow	0.419	0.505	0.421	0.506	0.418	0.502
Green	0.300	0.600	0.305	0.595	0.290	0.600
Cyan	0.225	0.329	0.228	0.326	0.220	0.329
Blue	0.150	0.060	0.155	0.070	0.150	0.060
Magenta	0.321	0.154	0.318	0.162	0.328	0.158

- **PCE:** To use the Personal Color Equalizer to define a custom color gamut, choose the "PCE" Color Gamut setting (refer to **Color Gamut** on page 79). Then, choose PCE from the Display Color - Common Settings menu and press **ENTER**.



Note

The DHD Controller uses the PCE settings for all display modes on a given input.

PCE provides the ability to define a custom color gamut in terms of a "white point" and primary (red, green, blue) color points; see Figure 4-7.

- **RGBW (Red, Green, Blue, White):** To precisely adjust the primary color points and white point associated with the custom color gamut, choose RGBW from the PCE sub-menu. Each control operates only on the color specified. Surrounding colors are linearly interpolated based on their distance from each of these colors.

Display Color		
RGBW		
Red x	<input type="text" value="0.640"/>	0.640
Red y	<input type="text" value="0.330"/>	0.330
Green x	<input type="text" value="0.300"/>	0.300
Green y	<input type="text" value="0.600"/>	0.600
Blue x	<input type="text" value="0.150"/>	0.150
Blue y	<input type="text" value="0.060"/>	0.060
White x	<input type="text" value="0.313"/>	0.313
White y	<input type="text" value="0.329"/>	0.329
<input checked="" type="checkbox"/> Auto Color Enable		
<input checked="" type="checkbox"/> Test Pattern Enable		

The **Auto Color Enable** and **Test Pattern Enable** checkboxes let you choose what to display on-screen while making these adjustments. These controls work together as follows:

Auto Color Enable Setting	Test Pattern Enable Setting	Description
Off	Off	When both boxes are unchecked, the input signal (normal picture) appears on the display.
Off	On	When only the Test Pattern Enable box is checked, a white “curtain” test pattern appears instead of the input signal.
On	Off	When only the Auto Color Enable box is checked, the input signal appears on the display. When you select a red, green or blue color point to adjust, the DHD Controller displays only that color channel. When you select a white point x- or y-value, all colors are visible (normal picture).
On	On	When both boxes are checked, the DHD Controller automatically displays a red, green, blue or white “curtain” test pattern when you select an x- or y-value for that color point to adjust.

Display Color - Projector Settings: These settings are also saved independently for each input and display mode.

- **Lamp:** Select Lamp from the Display Color - Projector Settings menu to adjust the projector lamp brightness.



Note

The Lamp settings affect all lamps.

- **Mode:** With the D-113d, two lamp adjustment modes are available: Power or Intensity (default). The two modes are mutually exclusive; when you select the Power mode, the Intensity selection in the Lamp menu is grayed out. Likewise, when you select Intensity, the Power selection is grayed out.



Tip

For 3D applications, “Intensity” is the preferred Lamp Mode as it maintains constant brightness balance throughout the life of the lamps. This eliminates the need to adjust the projector brightness to compensate for lamp aging.

- **Power:** To supply a constant wattage to the lamp, select Mode from the Lamp menu and set it to Power. Then, select Power from the Lamp menu to set the lamp power level. You can choose to run the lamp as bright as possible (this is the default setting) or you can choose a lower setting. Generally, lower lamp output prolongs the life of the lamp, but decreases brightness.

- **Intensity:** To maintain a constant brightness level, select Mode from the Lamp menu and set it to Intensity. Then, select Intensity from the Lamp menu to specify the desired brightness level. The projector automatically adjusts the amount of power applied to the lamp as needed to maintain the desired brightness level. The default Intensity setting, 0%, holds brightness equivalent to 300W constantly.
- **ConstantContrast:** Select ConstantContrast from the Display Color - Projector Settings menu to enable (**On**) or disable (**Off**) ConstantContrast in the optical engine. ConstantContrast uses a dynamic iris that modulates light to the DMD based on the actual content of the video material. Runco recommends that you disable ConstantContrast before adjusting Brightness, Contrast or other image settings, or if you change the RVR setting (see below) to something other than the default value.
- **RVR:** Use the RVR control to increase or decrease the Reflectance Volume Regulation setting. RVR lets you adjust the aperture or iris size (the physical opening through the lens; similar to an “f-stop” on a camera). Doing so allows you to optimize brightness and contrast according to the amount of ambient light in the viewing area.

Use a lower setting (larger aperture = higher brightness) for rooms with a lot of ambient light. Use a higher setting (smaller aperture = higher contrast) for more “theater-like” viewing conditions (little or no ambient light).

**Note**

You cannot use ConstantContrast and RVR at the same time (both controls affect the aperture size, in different ways). Generally, using RVR to set the total image brightness produces more satisfying results than using ConstantContrast.

- **Engine Configuration:** By default (and by design), the D-113d produces 2D images that are almost twice as bright as 3D images. If this is not desirable, choose Engine Configuration from the Display Color - Projector Settings menu and set it to **Single**. With this setting, the difference in brightness between 2D and 3D modes is much less noticeable.

Input Image: The Input Image controls are functionally similar to those in the Picture menu (refer to page 67), but are accessible only by entering the Calibration menu passcode.

**Note**

The Input Image settings establish the “zero point” for the Picture menu settings, whose values represent offsets from the Input Image settings. For example, if you set Brightness to 10 in this menu, setting Brightness to 10 in the Picture menu results in an actual setting value of 20 (10+10).

Input Color: The Input Color controls are similar to those in the Display Color menu (see above), but adjust the color balance of the incoming signal. These settings are also saved independently for each input and display mode.

- **Gain/Offset (HD1, HD2 and Component/SCART inputs only):** These controls operate similarly to those in the **Display Color - Common Settings** menu (described on page 77), but affect the Y, Pb and Pr signal components rather than the red, green and blue channels.
- **Chroma Delay:** use the Chroma Delay control to correct a mis-aligned image from a composite video source. Chroma delay in an image causes color shifts to occur to the left of the vertical edge transitions, producing artificial shadows or a “halo” effect. If necessary, adjust this setting to eliminate them.
- **Noise Filter:** To apply noise filtering to the input signal, select Noise Filter from the Input Color menu. The Noise Filter is useful for clearing up noisy images from 480i video sources.

Use the left- or right-arrow buttons to select the desired amount of noise reduction, keeping in mind that higher settings (which reduce high frequencies) may also “soften” the image.

Save ISF Night/Save ISF Day: Whenever you make a change to the ISF settings, you should always save it. Select Save ISF Night or Save ISF Day from the Calibration menu to do this.

Copy/Paste - Memory Preset: You can copy and paste settings from one memory preset to another. This gives you a convenient starting point for creating a new preset based on an existing one, to make the calibration process less time-consuming.

For example, you can use the Copy/Paste Memory Preset feature to:

- Apply settings from HDMI 1 to HDMI 2, or from HD1 to HD2.
- Calibrate an input for 720p source signals, then use those settings for 1080i sources.
- Duplicate ISF Night settings for a given source and signal format and save them in the Custom 1 memory preset.

To use this feature, select Copy/Paste from the Calibration menu, then select Memory Preset.

- **Memory Preset - Copy Settings:** Select Copy Settings from the Copy/Paste Memory Preset menu to place the settings for the current input source, signal format (resolution and frame rate) and memory preset onto a “clipboard,” which is a temporary memory location. When you do, the message “Settings Copied” briefly appears on-screen. The Copy/Paste menu then re-appears, indicating the source of the copied settings.

Copy/Paste
Memory Preset
Aspect Ratio

Memory Preset	
Copy Settings	
Paste Settings	
Copied From:	
Input Source	HDMI 1
Signal Format	1080p/60
Memory Preset	ISF Night



Note

Copied settings are not retained after a power cycle.

- **Memory Preset - Paste Settings:** To apply the settings on the clipboard to a different input source, signal format and/or memory preset, do **any or all** of the following:

- Switch to another input (for example, from HD1 to HD2).
- Change the output signal format at the source (for example, from 720p/60 to 1080i/60).
- Switch to another Memory Preset (for example, from ISF Night to Custom 1).

Then, select Paste Settings from the Copy/Paste Memory Preset menu. **If you want to keep these new settings, you must save them!** (Refer to **Save ISF Night/Save ISF Day** on page 83 or **Memory Presets** on page 73.)

Copy/Paste	
Memory Preset	
Aspect Ratio	

Aspect Ratio	
Copy Settings	
Paste Settings	
Copied From:	
Aspect Ratio	16:9
Screen	Screen 1

Copy/Paste - Aspect Ratio: You can also copy and paste certain settings, such as those for Output Shift and Image Alignment (see below) from one aspect ratio or “screen” (refer to **Screen** on page 67) to another.

To do this, select Copy/Paste from the Calibration menu, then select Aspect Ratio.

- **Aspect Ratio - Copy Settings:** Select Copy Settings from the Copy/Paste Aspect Ratio menu to place the Output Shift and Image Alignment settings for the current aspect ratio onto a “clipboard,” which is a temporary memory location. When you do, the message “Settings Copied” briefly appears on-screen. The Copy/Paste menu then re-appears, indicating the source of the copied settings.



Note

Copied settings are not retained after a power cycle.

- **Aspect Ratio - Paste Settings:** To apply the Output Shift and Image Alignment settings on the clipboard to a different aspect ratio and/or screen, do **either** of the following:

- Switch to another aspect ratio (for example, from 16:9 to Cinema).
- Switch from Screen 1 to Screen 2 or vice versa.

Then, select Paste Settings from the Copy/Paste Aspect Ratio menu. The new settings are saved automatically.

Output Shift: The Left/Right, Up/Down, Width and Height controls in the Output Shift menu are similar to those in the Input Position menu, except that they change the characteristics of the output signal. These settings are saved independently **for each aspect ratio and screen selection** (refer to **Screen** on page 67).

- **Screen Masking:** This control adjusts the amount of cropping on each edge of the output image. This differs from the regular Overscan control in two ways:
 - It allows separate adjustments on each edge; and
 - It is saved per aspect ratio, per screen (as opposed to per connector, per mode).

This is useful for installations where the aspect ratio of the screen doesn’t exactly match the aspect ratio of the display.

Image Alignment: Use the controls in the Image Alignment menu to ensure proper image geometry; that is, a perfectly rectangular projected image with no keystone or pincushion. For detailed instructions, refer to **Adjusting the Image Geometry** on page 54.

Adjustment Mode: By default, any command or control message you send using the remote control, front-panel keypad or RS-232 interface is acted upon by **both** the Primary and Secondary DHD Controllers. In some cases — for example, when using the lens controls or aligning the “left eye” or “right eye” output images — you may need to address a command to only the Primary or Secondary DHD Controller. To do this, select Adjustment Mode from the Calibration menu and set it to **Primary** or **Secondary**. The Main Menu title changes to “Runco Video (Pri.)” or “Runco Video (Sec.)” when you do this.

**Note**

*Lens controls are **not** available when the Adjustment Mode is set to **Both**.*

Splash Configure: Use the Splash Configure menu to control the appearance and behavior of the “splash” screen that appears on the display upon power-up.

- **Owner Name/ISF Calibrated/ISF Other:** You can have the D-113d display the owner’s name, your name, the phrase “ISF Calibrated” and/or any other string, up to 30 characters in length.

Use the up or down cursor button to select a character. Use the right and left cursor buttons to change the cursor position. Press **MENU** when you have finished entering text.

- **Splash Timer:** When you turn on the D-113d, it projects a welcome screen with the Runco and ISF logos, along with the personalized information you enter as described above. Select Splash Timer from the Splash Configure menu to set the amount of time for which this screen appears. The range is from 5 to 60 seconds, in one-second increments. Press ◀ or ▶ to set the timer, then press **MENU**.
- **Splash Enable:** When you have finished customizing the splash screen, select Splash Enable from the Splash Configure menu. Then, select On and press **ENTER**.

OSD Position: To adjust the position of the OSD, select OSD Position from the Calibration menu and press **ENTER**.

Press ▲ or ▼ to select “Hor.” or “Ver.” Then, press ◀ or ▶ to change the position.

Service ➤ Use the Service menu to access advanced projector configuration settings. **This menu should be used by ISF-certified technicians only.**

Service
Test Video
Input Names
Display Device
Network
Color Space
Triggers
Miscellaneous
Sync Threshold
HDMI
Front Panel Brightness
Auto Power Off
Standby Mode
System Reset



Note

You must enter a passcode to access the Service menu.

Test Video: Select Test Video from the Service Menu to access the internal test patterns on the DHD Controller. Table 4-4 lists the available test patterns and describes their suggested usage.

Table 4-4. Test Patterns and Their Suggested Usage

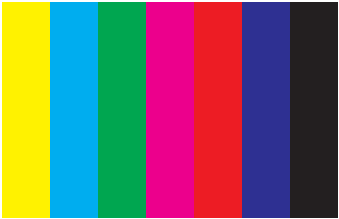
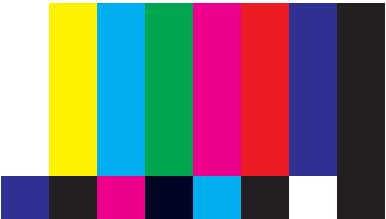
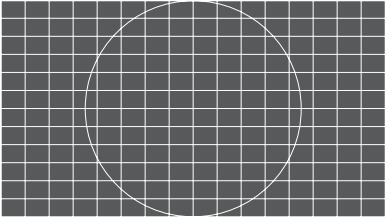
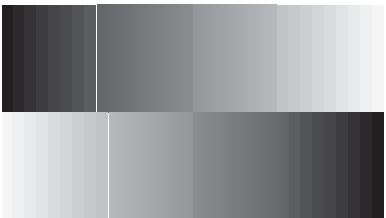
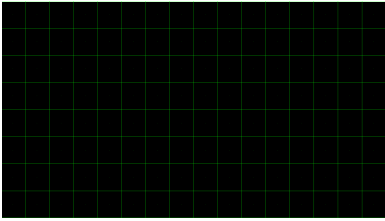
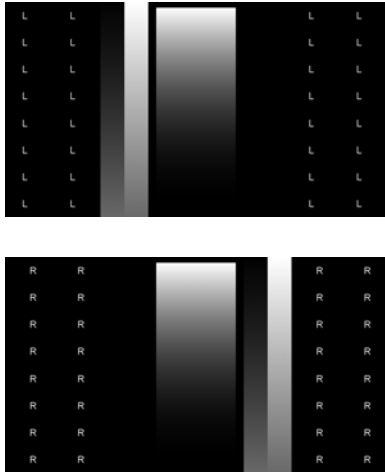
Pattern	Suggested Usage
Color Bars 1 	Use this pattern when making color saturation and tint adjustments.
Color Bars 2 	Use this pattern when making color saturation and tint adjustments.
Focus 	Use this pattern when adjusting the focus.
Grey Bars 	Use this pattern when making brightness, contrast or white balance (gain/offset) adjustments.

Table 4-4. Test Patterns and Their Suggested Usage (continued)

Pattern	Suggested Usage
<div> <div>Primary Alignment</div> <div>Secondary Alignment</div> <div>Dual Alignment</div>  </div>	<p>Use this pattern when aligning the output from the projector's primary or secondary optical engines (refer to Power-Up Sequence and Optical Alignment Procedure on page 49). Select Dual Alignment to have both optical engines output this pattern.</p>
<div> <div>3D</div>  </div>	<p>Use these patterns to confirm that the left-eye and right eye images are being processed correctly. To do this, close your right eye while viewing this test pattern through the 3D glasses. If you see only the left-eye portion, then the system is correctly configured for 3D.</p> <p>Normally, the Primary DHD Controller processes the left-eye image; the Secondary, the right-eye image. To change this, use the Reverse Eyes control in the 3D Processing menu (refer to Reverse Eyes on page 75).</p>

Press **MENU** to exit test pattern mode.

Input Names: You can give each input a descriptive name. For example, you may want to change the default input name to the type of source component connected to it: "VCR," "DVD," "Laptop" et cetera. Input names can be up to 12 characters long.

To edit an input name, select Input Names from the Service menu. Press **▲** or **▼** to select an input and press **ENTER**. Use the **▲** or **▼** buttons to change a character; press **◀** or **▶** to select a character to change. When you have finished editing the input name, press **ENTER** or **MENU**.

To restore the default input name, press **▼** repeatedly to highlight that input name in the "Restore" column. Then, press **ENTER**.

Input Names		
		Restore
Composite 1	1	Composite 1
Composite 2	2	Composite 2
Composite 3	3	Composite 3
Component		Component
HD 1		HD 1
HD 2		HD 2
SCART		SCART
HDMI 1		HDMI 1
HDMI 2		HDMI 2
HDMI 3		HDMI 3
HDMI 4		HDMI 4

Display Device - Configure: The options in the Display Device - Configure menu allow you to change the picture orientation, perform lens adjustments or access other, display-device specific functions.

- **Installation – Orientation:** Select Installation from the Display Device - Configure menu, then select Orientation to change the picture orientation to suit the method of installation (Floor Front or Floor Rear). Or, for front-projection installations, use the **Auto** setting to have the projector automatically determine the orientation using an internal sensor.
- **Lens:** Select Lens from the Display Device - Configure menu to access the motorized lens controls. Refer to **Adjusting the Focus, Zoom and Position of the Primary Lenses** on page 52.

**Note**

*Lens controls are **not** available when the Adjustment Mode is set to **Both** (refer to **Adjustment Mode** on page 85).*

- **Display Info.:** Select Display Info. from the Display Device - Configure menu to see the projector serial number and lamp usage information (number of hours in service).
- **Lamp Hours Reset:** When you replace a projector lamp (refer to **Lamp Replacement** on page 97), you should also reset its lamp hour counter to zero so that the lamp usage information in the Display Info. window is accurate. To do this, select Lamp Hours Reset from the Display Device - Configure menu. Then, select Lamp 1 Hours Reset or Lamp 2 Hours Reset. A confirmation dialog box appears. Select “Yes” to continue with the reset or “No” to cancel the operation.
- **Lamp Calibration:** When you replace a projector lamp (refer to **Lamp Replacement** on page 97), you must calibrate the system to ensure that the Intensity setting works correctly (refer to **Lamp** on page 81). To do this, select Lamp Calibration from the Display Device - Configure menu. A confirmation dialog box appears. Select “Yes” to continue with the calibration or “No” to cancel the operation. During calibration, which takes about 90 seconds, the shutter is closed and no image is seen.

**Caution**

After replacing a lamp, you must allow the projector to run for at least five (5) minutes before performing a lamp calibration.

- **Diagnostics:** Select Diagnostics from the Display Device - Configure menu, then select Red, Green, Blue, Yellow, Cyan or Magenta to display only that color channel (simulating a filter of that color). This can be useful for calibration or measurement purposes.

To restore the normal picture (all colors), select White.

Network: The options in the Network menu allow you to configure the network communication features.

- **IP Configuration:** Select IP Configuration from the Network menu to either set the IP address, subnet mask and default gateway of the DHD Controller manually or obtain these settings automatically, from a DHCP (Dynamic Host Configuration Protocol) server. (Most broadband routers and gateways support DHCP.) You can also test the network connection from this menu.
- **DHCP:** To enable the DHCP client in the DHD Controller, select DHCP from the IP Configuration menu and set it to **On**. With this setting, the DHD Controller's IP address, subnet mask and default gateway are assigned by the local DHCP server.

To manually configure these values, set DHCP to **Off**.



Note

The IP Address, Subnet Mask and Default Gateway items in the IP Configuration menu are disabled (grayed out) when DHCP is enabled.

- **IP Address:** Select IP Address from the IP Configuration menu to manually configure the IP Address of the DHD Controller, as follows:
 1. Press ▲ or ▼ to select the first, second, third or fourth byte of the address.
 2. Press ► or ◀ to set the value of that byte. The range is from 0 to 255 inclusive.
 3. Repeat Steps 1 and 2 for all four bytes of the address.
 4. Press **MENU** when you have finished setting the address.
- **Subnet Mask:** Select Subnet Mask from the IP Configuration menu to manually configure the IP subnet mask. The procedure is similar to that for setting the IP address.
- **Default Gateway:** Select Default Gateway from the IP Configuration menu to manually configure the default IP gateway. The procedure is similar to that for setting the IP address.
- **Communication Test:** Select Communication Test from the IP Configuration menu to verify proper operation of the network communication link.

To start the test, select Start Test from the Communication Test menu. The DHD Controller displays the message "Performing Communication Test." When the test completes, the DHD Controller displays either "Failed" (along with the error that occurred) or "Succeeded."

- **Auto Firmware Upgrade:** Select Auto Firmware Upgrade from the Network menu to enable automatic detection of a newer version of the DHD Controller firmware. If one is found, you can configure the DHD Controller to install it automatically. These features make it easier to keep your DHD Controller firmware up-to-date.
- **Auto Check For New Firmware:** To have the DHD Controller automatically check for firmware updates at periodic intervals, select Auto Check for New Firmware from the Auto Firmware Upgrade menu and set it to **On**. If you prefer to do this manually, set it to **Off** and use the Check For New Firmware sub-menu (described below).

- **Auto Perform Upgrade:** If the "Auto Check For New Firmware" process determines that a newer firmware version than the one currently installed is available, you can have the DHD Controller automatically download and install it. To do this, select Auto Perform Upgrade from the Auto Firmware Upgrade menu and set it to **On**. The upgrade will occur the next time the DHD Controller is "power-cycled" (powered off, then on again). If you prefer to do this manually, set it to **Off**. The DHD Controller will ask if you want to perform the upgrade the next time it is power-cycled.
- **Check For New Firmware:** To have the DHD Controller check for new firmware on demand (and perform an upgrade if it finds a new version), select Check For New Firmware from the Auto Firmware Upgrade menu. If the DHD Controller finds a new firmware version, select **Yes** to perform the upgrade or **No** to return to the previous menu.
- **E-Mail Notification:** Select E-Mail Notification from the Network menu to specify when and to whom the DHD Controller sends error and service notification messages via e-mail.

The notification messages are in the following format:

```
To: [E-Mail Address; see below]
From: do-not-reply@runco.com
Subject: [Type of notification] from Runco DHD4
Body:
```

This is an automated message sent from the Runco DHD4:

```
Notification: [One of the following:
               "DHD Error" / "Display Error"
               "Periodic Service Notification"
               "Lamp Life Notification" / "Calibration Data"]

Detailed Description: [ If a DHD Error, one of the following:
                       "Fan Failure 1" / "Fan Failure 2"
                       "Overtemp 1" / "Overtemp 2"
                       "Initialization Failure"

                       If a Display Error, a device-specific
                       error message such as "Lamp Door Open"

                       If a Periodic Service Notification, the elapsed
                       time since the last notification

                       If a Lamp Life Notification, the number of hours
                       the lamp has been in service

                       If a Calibration Data message,
                       "See Attached File" ]

Serial Number: [DHD Controller serial number]
Customer Information: [From "Customer Information" sub-menu;
                      see below]
```

Best Regards,

Runco International, LLC
 1195 NW Compton Drive
 Beaverton, OR 97006
 1-800-237-8262

-
- **E-Mail Address:** To specify the destination e-mail address for error and service notifications, select E-Mail Address from the E-Mail Notification menu. The procedure is similar to that for setting the IP address (refer to **IP Configuration** on page 89). Enter up to 45 alphanumeric characters.
 - **Error Notification:** To have the DHD Controller send a message to the destination e-mail address when a “DHD Error” or “Display Error” occurs, select Error Notification from the E-Mail Notification menu and set it to **On**.
 - **Error Notification to Runco:** To have the DHD Controller send an e-mail message to Runco Customer Support when a “DHD Error” or “Display Error” occurs, select Error Notification to Runco from the E-Mail Notification menu and set it to **On**.
 - **Periodic Service Notification:** You can have the DHD Controller send periodic reminders via e-mail to perform regular maintenance tasks. To do this:
 1. Select Periodic Service Notification from the E-Mail Notification menu.
 2. Highlight **Enable** and press **ENTER**.
 3. Highlight **On** and press **ENTER**.
 4. Press **MENU**.
 5. Highlight **Timer** and press **ENTER**.
 6. Press **►** or **◄** to set the notification interval in months. The range is from 1 to 255 inclusive; the default is 12 months.
 7. Press **MENU**.
 - **Lamp Life Notification:** To have the DHD Controller send a message to the destination e-mail address when the lamp hour counter reaches a certain threshold, select Lamp Life Notification from the E-Mail Notification menu. Then:
 1. Highlight **Enable** and press **ENTER**.
 2. Highlight **On** and press **ENTER**.
 3. Press **MENU**.
 4. Highlight **Lamp Hours** and press **ENTER**.
 5. Press **►** or **◄** to set the notification threshold in hours. The range is from 100 to 10,000 hours; the default is 1,000 hours.
 6. Press **MENU**.
 - **Customer Information:** Select Customer Information from the E-Mail Notification menu to supply this information to the DHD Controller, which includes it in all e-mail notification messages. Six lines (up to 30 characters per line) of text are provided; use them however you wish.
 1. Press **▲** or **▼** repeatedly to select a line of text to edit.
 2. Press **ENTER**.
 3. Press **▲** or **▼** repeatedly to set the highlighted character.
 4. Press **►** (or **◄**) to select the next (or previous) character. Use the **▲** and **▼** buttons to change it.
 5. Press **ENTER** when you have finished editing that line of text.
 6. Repeat Steps 1 through 5 for each line of text you want to edit.
 7. Press **MENU** when you have finished entering customer information.

- **E-Mail Calibration Data:** To have the DHD Controller collect all calibration data, attach it to a message and send it to the destination e-mail address, select E-Mail Calibration Data from the E-Mail Notification menu. To confirm this action, select **Yes** and press **ENTER**.

To cancel and return to the previous menu, select **No**.

- **Remote Network Control:** Select Remote Network Control from the Network menu to enable or disable control of the DHD Controller via an IP connection (typically using a web browser). Set it to **On** to allow all incoming remote network connectivity. Set it to **Off** to disable any incoming network communication that was not initiated by the DHD Controller.



Note

This setting has no effect on the E-Mail Notification or Auto Firmware Upgrade functions.

Color Space: Select Color Space from the Service menu to choose the color space of the source signal for HDMI, RGB, and component connections.

- The default setting, **Auto**, functions as follows:
 - **HDMI:** If the Auxiliary Video Information (AVI) infoframe contains color space and/or range data, the DHD Controller uses that information. Otherwise, for RGB sources, the DHD Controller uses the **RGB-Video** color space. For component SDTV and EDTV resolutions, **REC601** is used. For other component video resolutions, **REC709** is used.
 - **RGB:** If Hsync or Vsync signals are present, the DHD Controller uses the **RGB-PC** color space. Otherwise, **REC601** is used for SDTV and EDTV sources, and **REC709** for all other sources.
 - **Component:** For SDTV and EDTV resolutions, the DHD Controller uses the **REC601** color space. For all other resolutions, REC709 is used.

In most cases, the **Auto** setting determines the correct color space to use. If it does not, you can force the DHD Controller to use a specific color space. Choose one of the following:

- **REC709** sets the color space matrix to that defined in ITU-R BT.709.
- **REC601** sets the color space matrix to that defined in ITU-R BT.601.
- **RGB-PC** uses RGB color space and sets black at 0,0,0 RGB and white at 255,255,255 RGB, assuming an 8-bit image.
- **RGB-Video** uses RGB color space and sets black at 16,16,16 RGB and white at 235,235,235, assuming an 8-bit image, to correspond to the luminance values defined in digital component standards.

Triggers: Select Triggers from the Service menu to configure the 12-volt trigger outputs. You can assign one or more trigger outputs to each aspect ratio. Those triggers are then activated by selecting that aspect ratio.

Miscellaneous: Select Miscellaneous from the Service menu to set the following options:

- **Language:** Select Language from the Miscellaneous menu and press the up- or down-arrows to select the OSD Language (English, Français, Deutsch, Italiano, Español, Svenska, 简体中文 (Simplified Chinese), 繁體中文 (Traditional Chinese), Português, Русский (Russian), 日本語 (Japanese) or 한국어 (Korean)).
- **OSD Timer:** Select OSD Timer from the Miscellaneous menu to set the OSD Timer, which controls how long the menus remain on-screen after selecting them. Select from 5 to 60 seconds, in one-second increments. Or, set the timer to 0 (disabled) if you want the menus to remain on-screen indefinitely.
- **OSD Messages:** When you select a new aspect ratio, input source or memory preset, the DHD Controller briefly displays an on-screen message confirming your new selection. To prevent the display of these messages, select OSD Messages from the Miscellaneous menu to and set it to **Off**.
- **Blank Screen Color:** Select Blank Screen Color from the Miscellaneous menu to select the color that appears when no incoming signal is present. The range is from 0 to 255 inclusive for each color component (red, green and blue).
- **Sidebar Color:** Select Sidebar Color from the Miscellaneous menu to change the color of the inactive image area. The range is from 0 to 255 inclusive for each color component (red, green and blue). The inactive image area is on either side of the active image area when using the 4:3 aspect ratio.
- **Film Mode:** Use Film Mode to smooth out moving images from interlaced, standard-definition (SD) sources. In most cases, the DHD Controller detects the proper “pull-down” rate and vertical frequency. However, if your source is jittery and/or tearing you may want to enable Film Mode to ensure stable processing for that source.
- **CUE (Chroma Upsampling Error) Correction:** Some DVD players use MPEG decoders that do not correctly “upsample” the 4:2:0 format chroma information on the DVD to the 4:2:2 or 4:4:4 format required by the video encoder of the display device.

This so-called “chroma bug” sometimes causes streaky or spiky horizontal lines running through the chroma channel. It is most noticeable in static, interlaced scenes and on diagonal edges (especially red ones). Set CUE to **On** to correct this issue.

- **Remote Code:** Select Remote Code from the Miscellaneous menu to set the infrared (IR) code set to which the DHD Controller will respond. By default, it is set to 17. You can change this setting if either:
 - Another device in the theater (a DVD player, for example) is responding to commands from the DHD Controller remote control (Figure 2-8) in ways that are unpredictable or undesirable.
 - You have multiple DHD Controllers and want to control them independently, as opposed to broadcasting commands from a single remote to all of them. In this scenario, you can use multiple remotes programmed to use different IR codes. Or, you can use a single remote and change the IR code as needed to address a specific DHD Controller.




Tip

Use the DHD Controller front-panel keypad to change the IR code to which the controller will respond. Then, change the code sent by the remote to match as described below.

When you change a remote code on the DHD Controller, you must re-program the DHD Controller remote control to send that same code. To do this:

1. Press and hold the **LIGHT** button on the remote control for approximately three seconds, or until the LED on the remote lights solid red.
2. Enter a new two-digit code between 00 and 31 inclusive. Include a leading zero for single-digit codes; for example, enter 9 as "09."
3. The LED turns off to confirm the code change. If you enter an invalid code, the LED flashes for three or four seconds. Try again, entering a valid code.

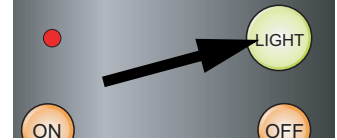

Sync Threshold: Select Sync Threshold to adjust the threshold at which negative pulses on the component video green/luma channel are interpreted to be sync pulses.

Sync Threshold adjustment is occasionally necessary when a DVD player or HDTV source signal drops "below black" (for example, during scenes with explosions or when subtitles are present) and causes the projector to temporarily lose sync. If the sync level from the source is persistently too low, the display device won't sync with the source at all.

The range is from 0 (approximately 60 millivolts (mV)) to 15 (approximately 300 mV).

HDMI: Select HDMI from the Service menu to set the following options affecting communication between HDMI sources, the DHD Controller and the D-113d.

- **HDMI EDID Extension:** Extended display identification data (EDID) is a data structure provided by a display device to describe its capabilities to a graphics card. It is what enables a modern personal computer to know what kind of monitor is connected.

Some modern display devices provide more information via EDID than others, in the form of "extensions." Some computer graphics cards do recognize or properly interpret this extended EDID information.

Select HDMI EDID Extension from the HDMI menu to specify whether or not the EDID extensions from the display device are passed through to the sources connected to the HDMI 1, HDMI 2, HDMI 3 or HDMI 4 inputs. By default, the extensions are on. Change these settings only if HDMI EDID incompatibility issues arise.

- **Audio Format:** Select Audio Format from the HDMI menu to choose an option for routing the audio signal from an HDMI source. With the D-113d, the recommended setting is **HDMI Out (Audio Only)**. (This is also the default setting.)
- **CEC:** This control chooses whether or not the DHD Controller responds to HDMI CEC control messages from a disc player, set-top box or other HDMI source.

The default setting is **On**. For more information about CEC, refer to **Using HDMI CEC Messages** on page 122.




Note

The DHD Controller does not transmit HDMI CEC control messages from the "HDMI Audio Out" connector, regardless of the CEC setting.

- **HPD Toggle Rejection:** Select HPD Toggle Rejection from the HDMI menu to specify whether or not the DHD Controller ignores extraneous Hot Plug Detect (HPD) signal state changes from a downstream HDMI device (third-party display or audio/video receiver).

The default setting, **Auto**, enables HPD toggle rejection on the D-113d. Use the other settings to troubleshoot compatibility issues or reduce the amount of time needed to lock to an incoming signal.

Front Panel Brightness: Select Front Panel Brightness from the Service menu to adjust the brightness of the front-panel LED and LCD status indicators.

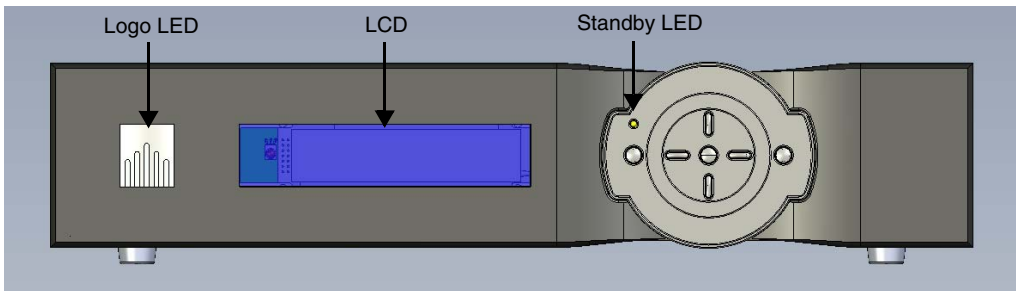

- **Logo LED:** Select Logo LED from the Front Panel Brightness menu to adjust the brightness of the large, illuminated logo on the left side of the display. The range is from 0 (off) to 31.

**Note**

During a firmware upgrade, this LED lights at full brightness regardless of the Logo LED setting.

- **Standby LED:** Select Standby LED from the Front Panel Brightness menu to change the behavior of the front-panel STANDBY indicator LED. When set to ON, the LED lights amber when the system is in standby mode; otherwise, it is off. When set to OFF, the LED is always off.

**Note**

During a firmware upgrade, this LED lights at full brightness regardless of the Standby LED setting.

- **LCD:** Select LCD from the Front Panel Brightness menu to adjust the brightness of the front-panel LCD. The range is from 0 (off) to 4.

Auto Power Off: Select Auto Power Off from the Service menu to have the D-113d turn itself off after a period of inactivity (no source signal present).

- **Enable:** By default, Auto Power Off is disabled. To enable it, select Enable from the Auto Power Off sub-menu and set it to On.
- **Hours:** The default time-out period is eight (8) hours; the range is from 1 to 24 hours.

Standby Mode: Select Standby Mode from the Service menu to control the DHD Controller's power management feature.

- Choose **Low Power** (the default setting) to have the DHD Controller shut down completely when it is turned off. This conserves power but increases the amount of time required by the DHD Controller to start up when it is turned on.
- **Fast Startup** is a "quick-start" mode that keeps the DHD Controller running when it is turned off, even though it appears to be in standby mode. This results in much quicker startup times but consumes more power.

System Reset: To reset ALL controller settings (including image settings) back to their factory defaults, choose System Reset from the Service menu.

A confirmation message appears. Select Yes to continue with the reset or select No to cancel.



Caution

This action is not undoable. Proceed with caution! Before you perform a System Reset, save your "Custom" Memory Presets (page 73) and ISF Day/Night Memory Presets (page 83).

5. Maintenance and Troubleshooting

The lamp should be replaced when it reaches the end of its life (typically 1,300 hours), or sooner if a noticeable degradation in brightness occurs.

Keep track of the number of hours the lamp has been in use and be aware of any changes to brightness. These indicators will help you effectively maintain operation of the projector. To find out how long the currently-installed lamp has been in service, select Display Info. from the Display Device - Configure menu (available by selecting **Service -> Display Device -> Configure -> Display Info.**, in sequence).

For lamp replacement, please contact your nearest Runco authorized service center or Runco dealer. Do not attempt to replace the lamp yourself!

1. Remove the two screws securing the Left (Exhaust) Side Panel (see Figure 2-2) to the projector. Then, remove the panel.
2. **To open the lamp compartment cover:** Using a Phillips screwdriver, turn the captive screw on the lamp compartment cover counter-clockwise to access the lamp compartment (see Figure 5-1). When the door is open, the lamp automatically turns off.

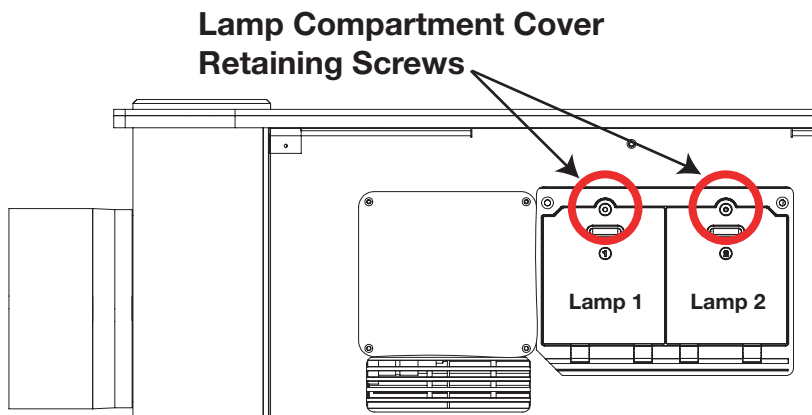


Figure 5-1. Opening the Lamp Door

3. **Wait at least 10 minutes to allow the lamp to cool before handling it!**
4. Remove the old lamp.
 - a Unscrew the three (3) captive screws securing the lamp using a #1 Phillips screwdriver.
 - b Carefully remove the lamp from the projector. Place the old lamp in a location where it cannot fall or be bumped.



WARNING

Handle lamps with extreme caution. Dispose of lamps according to safety regulations for your area. Discard the lamp using safe disposal/recycling practices or contact your Runco dealer for a possible re-lamping program.

5. Install the new lamp:
 - a Take care to align the new lamp properly in the correct orientation inside the lamp compartment.
 - b Press firmly on the lamp to properly seat it.
 - c Secure the lamp by tightening the three (3) captive screws.
6. Close the lamp compartment cover and tighten the captive screw.



Note

The lamp will automatically turn on again when the cover is closed.

7. Re-attach the Left (Exhaust) Side Panel to the projector.
8. **Reset the Lamp Hour Counter:** Perform the steps listed in **Lamp Hours Reset** on page 88.
9. Allow the projector to run for at least five (5) minutes with the new lamp installed.
10. Select Lamp Calibration from the Service -> Display Device - Configure menu. A confirmation dialog box appears. Select "Yes" to continue with the calibration or "No" to cancel the operation.

Table 5-1 provides some general guidelines for troubleshooting problems you may encounter with the D-113d. If the suggested solutions fail to resolve the problem or if you encounter an issue not described here, please contact Runco Technical Support.

5.2 Troubleshooting Tips

Table 5-1. Troubleshooting Chart

Symptom	Possible Cause(s)	Solution
The system does not turn on.	<ul style="list-style-type: none"> The D-113d is not plugged in and switched on, or the AC outlet is not active. The DHD Controller is not plugged in and switched on, or the AC outlet is not active. The remote control batteries have run out. 	<ul style="list-style-type: none"> Ensure that the D-113d is plugged in and switched on, and that the AC outlet is active. Ensure that the DHD Controller is plugged in and switched on, and that the AC outlet is active. Replace the batteries.
The projector and DHD Controller are both on, but there is no picture and on-screen menus do not appear.	<ul style="list-style-type: none"> Lens cover is on or shutter is closed. Lamp failed to ignite. Faulty or incorrect video connection between the DHD Controller and the D-113d. 	<ul style="list-style-type: none"> Ensure that the lens cover is off and the shutter is open. Ensure that the lamp door is closed. If it is and the problem persists, replace the lamp. Ensure that the HDMI output from the DHD Controller is properly connected to the Slot 2/HDMI 1 input on the D-113d (see Figure 3-11).
The display is on and menus appear, but there is no picture.	<ul style="list-style-type: none"> Incorrect source selection. Source component is not turned on. Source component is connected incorrectly or not at all. 	<ul style="list-style-type: none"> Select the correct source. Turn on the source component. Check connections from source component to DHD Controller.
A projected image from a DVD is split or otherwise scrambled.	<ul style="list-style-type: none"> DVD player is connected to the Component input and set to progressive scan mode. 	<ul style="list-style-type: none"> Turn off progressive scan on the DVD player. Or, connect the DVD player to the HD1 or HD2 input.
Image geometry is incorrect.	<ul style="list-style-type: none"> Incorrect aspect ratio selection. 	<ul style="list-style-type: none"> Select a different aspect ratio.

Table 5-1. Troubleshooting Chart (continued)

Symptom	Possible Cause(s)	Solution
The display is jittery or unstable.	<ul style="list-style-type: none"> Poor-quality or improperly connected source. The horizontal or vertical scan frequency of the input signal may be out of range for the projector. 	<ul style="list-style-type: none"> Ensure that the source is properly connected and of adequate quality for detection. Correct at the source.
Image is too bright and/or lacks definition in the bright areas of the image.	<ul style="list-style-type: none"> Contrast is set too high. 	<ul style="list-style-type: none"> Lower the contrast setting.
Image appears “washed out” and/or dark areas appear too bright.	<ul style="list-style-type: none"> Brightness is set too high. 	<ul style="list-style-type: none"> Lower the brightness setting.
Colors in the image are swapped; for example, reds appear blue or vice versa.	<ul style="list-style-type: none"> The Red/Pr, Green/Y or Blue/Pb outputs from the source are connected to the wrong inputs on the DHD Controller. 	<ul style="list-style-type: none"> Ensure that the source outputs are connected to the correct DHD Controller input.
The display freezes suddenly.	<ul style="list-style-type: none"> Excessive voltage noise on the AC or ground input has interrupted the projector’s ability to lock on to a signal. 	<ul style="list-style-type: none"> Power down the projector and disconnect from AC. Then, plug in again and power up as usual.
The projector will not turn back on after it was powered down, or the image disappears during operation.	<ul style="list-style-type: none"> The projector will not turn on for two minutes after power-down, to protect the lamp. The lamp has failed. 	<ul style="list-style-type: none"> Wait until the STANDBY LED at the front of the DHD Controller turns on (Figure 2-4). Replace the lamp.
AutoScope lens motor does not work.	<ul style="list-style-type: none"> The motor is not plugged in or the AC outlet is not active. The motor is not connected to a trigger output on the DHD Controller. Incorrect trigger assignment. 	<ul style="list-style-type: none"> Ensure that the motor is plugged in and that the AC outlet is active. Check the trigger connection between the lens motor and DHD Controller (Figure 3-15). Correct the trigger assignment (refer to Installing and Adjusting the CineWide Anamorphic Lens on page 56).

Table 5-1. Troubleshooting Chart (continued)

Symptom	Possible Cause(s)	Solution
<p>The projector does not turn on or respond to user commands. The vacuum fluorescent display on the Primary DHD Controller front panel displays the following message:</p> <p>Primary Display Error Communication Failure</p>	<ul style="list-style-type: none"> The serial connection from the Primary DHD Controller to the display is incorrect or the cable is faulty. 	<ul style="list-style-type: none"> Ensure that the Display Control (RS-232) output from the Primary DHD Controller is properly connected to the display (see Figure 3-11).
<p>The Secondary DHD Controller does not turn on or respond to user commands. The vacuum fluorescent display on the Primary DHD Controller front panel displays the following message:</p> <p>Secondary DHD Error Communication Failure</p>	<ul style="list-style-type: none"> The serial connection from the Primary DHD Controller to the Secondary DHD Controller is incorrect or the cable is faulty. 	<ul style="list-style-type: none"> Ensure that the RS-232 (To Accessory Box) connectors on the Primary and Secondary DHD Controllers are connected to each other, using a known-good, “null-modem” (cross-over) cable (see Figure 3-12).
<p>The 3Dimension Processor does not turn on or respond to user commands. The vacuum fluorescent display on the Primary DHD Controller front panel displays the following message:</p> <p>BAE Error Communication Failure</p>	<ul style="list-style-type: none"> The HDMI CEC connection from the Primary DHD Controller to the 3Dimension Processor is incorrect or the cable is faulty. 	<ul style="list-style-type: none"> Ensure that the HDMI 1 input on the Primary DHD Controller is connected to the Left HDMI output on the 3Dimension Processor, using a known-good HDMI cable (see Figure 3-12).
<p>When displaying 3D content, crosstalk or “ghosting” can be seen — that is, the left eye is perceiving some of what the right eye should be seeing or vice versa.</p>	<ul style="list-style-type: none"> Primary and Secondary images are not properly aligned. Rear-projection installation uses second-surface mirrors that are producing faint, secondary reflections. 	<ul style="list-style-type: none"> Refer to Power-Up Sequence and Optical Alignment Procedure on page 49. Always use first-surface mirrors in your rear-projection installation.
<p>With 3D glasses, image perspective is reversed — that is, “left-eye” frames appear in the right lens and vice versa.</p>	<ul style="list-style-type: none"> Incorrect Reverse Eyes setting. 	<ul style="list-style-type: none"> Change the Reverse Eyes setting (refer to Reverse Eyes on page 75).

Notes:

6. External Control

In addition to using the DHD Controller front-panel keypad or remote control unit, there are three methods of controlling the D-113d and DHD Controller externally:

- Using a serial (RS-232) link to send ASCII commands and receive responses to those commands.
- Using discrete infrared (IR) codes to program a third-party remote control unit.
- Using an HDMI connection to send Consumer Electronics Control (CEC) commands from a BD player or other source component that supports CEC.

The following sections describe these methods.

The DHD Controller uses a simple text-based control protocol to take requests from control devices and to provide responses to such devices. This section describes how to send control messages over a serial link between the DHD Controller and an automation/control system or a PC running terminal emulation software.



Note

The serial communication protocol described here replaces the serial protocol used by legacy Runco products (manufactured prior to September 2011) that include the DHD Controller.

Runco recommends using this new protocol, as it is more concise and provides greater control than the old one. However, to maintain backward compatibility with existing automation/control system modules, the legacy Runco serial protocol is also supported.

Connect your control system or PC to the RS-232 input of the Primary DHD Controller as shown in Figure 3-14.

Configure the RS-232 controller or PC serial port as follows: no parity, 8 data bits, 1 stop bit and no flow control. Set the baud rate to 19200, to match that of the DHD Controller RS-232 port.

Commands sent from an automation/control system or PC to the DHD Controller must have the following format:

(www:x yz) [CR]

Where:

- (and) indicate the start and end of the command data. If these characters are present, the DHD Controller assumes that valid command data is present in the command string. Otherwise, the DHD Controller ignores the command.
- www indicates the command code. This field is case insensitive; for example, PWR, pwr, and PwR are all equivalent.
- :x is the destination parameter. This is an optional parameter that indicates which memory the command is referencing. This parameter is reserved for future use.

6.1 Serial Communications

◀ RS-232 Connection and Port Configuration

◀ Command Format

- `y` is the operand, which can have one of the following values:

<code>?</code> = “Get” operand	<code>++</code> = “Increment” operand
<code>=</code> = “Set” operand	<code>--</code> = “Decrement” operand
- `z` is the value to set for this parameter. It can have one of two formats:
 - **Integer value:** Any positive or negative number; for example, `100`.
 - **String value:** Any string surrounded by double quotes; for example, `"This is a string."`
- `[CR]` is the ASCII carriage return key (0x0D).

Response Format ➤

Responses sent from the follower to the initiator shall have the following format:

$$(u; \text{www} : x = z) \quad [\text{CR}]$$

Where:

- (and) indicate the start and end of the command data. If these characters are present, the DHD Controller assumes that valid command data is present in the command string. Otherwise, the DHD Controller ignores the command.
- “u;” indicates the response code. This is only used by followers responding to a valid CLI command received. For any response code other than 0, the follower echoes back the command received rather than filling in the fields listed below.

The response code can be one of the following:

- 0 = Command successfully processed
 - 1 = Unknown command code
 - 2 = Invalid operator
 - 3 = Destination parameter not supported
 - 4 = Setting not available
 - 5 = Setting value not available
 - 6 = Setting value not supported
 - 7 = String too long
 - 8 = Command not supported in standby mode
 - 9 = Invalid parameter
 - 10 = Error processing command
 - 11 = Password not entered
- **www** indicates the command code. This field is case insensitive; for example, PWR, pwr and PwR are all equivalent.
 - **:x** is the destination parameter. This is an optional parameter that indicates which memory the command is referencing. This parameter is reserved for future use.
 - **z** is the new value (for Set, Increment or Decrement commands) or the current value (for Get commands) for this parameter. It can have one of two formats:
 - **Integer value:** Any positive or negative number; for example, 100.
 - **String value:** Any string surrounded by double quotes; for example, "This is a string."
 - **[CR]** is the ASCII carriage return key (0x0D).

Here are some examples of serial commands and their responses:

◀ Command and Response Examples

Command	Command Data	Response
Power query when unit is powered on	(PWR?) [CR]	(0 ; PWR=1) [CR]
Set power to 0 (off)	(PWR=0) [CR]	(0 ; PWR=0) [CR]
Increment brightness from 24 to 25	(BRT+) [CR]	(0 ; BRT=25) [CR]
Invalid command	(ZZZ=0) [CR]	(1 ; ZZZ=0) [CR]
Invalid parameter (received string, expected integer)	(CON="Some string") [CR]	(9 ; CON="Some string") [CR]

Table 6-1 lists all supported commands.

◀ Serial Command List

Table 6-1. Serial Commands

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Advanced Color Temp Auto Color Enable	AAC	R/W	No	0	1	No	0 = Off; 1 = On
Advanced Color Temp Diagnostic Color	AAD	R/W	No	0	6	No	0 = White 1 = Red 2 = Green 3 = Blue 4 = Yellow 5 = Cyan 6 = Magenta
PCE Blue x	ABX	R/W	Yes	-100	100	No	
PCE Blue y	ABY	R/W	Yes	-100	100	No	
Adjustment Mode	ADJ	R/W	No	0	2	No	0 = Both 1 = Left 2 = Right
PCE Green x	AGX	R/W	Yes	-100	100	No	
PCE Green y	AGY	R/W	Yes	-100	100	No	
Apply Image Alignment Values	AIA	R/W	No	0	1	No	0 = Off; 1 = On
Advanced Color Temp Mode Enable	AME	R/W	No	0	1	No	0 = Off; 1 = On
Auto New Firmware Check	ANF	R/W	No	0	1	No	0 = Off; 1 = On
Auto Power Off Enable	APE	R/W	No	0	1	No	0 = Off; 1 = On
Auto Power Off Timer	APT	R/W	Yes	1	24	No	
Auto Perform Upgrade	APU	R/W	No	0	1	No	0 = Off; 1 = On

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Aspect Ratio Copy	ARC	W	No	N/A	N/A	No	Action will be performed on any setting value
Aspect Ratio Paste	ARP	W	No	N/A	N/A	No	
PCE Red x	ARX	R/W	Yes	-100	100	No	
PCE Red y	ARY	R/W	Yes	-100	100	No	
Aspect Ratio	ASP	R/W	No	0	6	No	0 = 4:3 1 = 16:9 2 = Letterbox 3 = VirtualWide 4 = Cinema 5 = Virtual Cinema 6 = Native
Advanced Color Temp Test Pattern Enable	ATP	R/W	No	0	1	No	0 = Off; 1 = On
Image Alignment Bottom Left x	BLX	R/W	Yes	-100	100	No	
Image Alignment Bottom Left y	BLY	R/W	Yes	-100	100	No	
Image Alignment Bottom Middle y	BMY	R/W	Yes	-100	100	No	
Brightness Offset	BRO	R/W	Yes	-50	50	No	Picture menu
Brightness	BRT	R/W	Yes	-50	50	No	Calibration -> Input Image menu
PCE White x	AWX	R/W	Yes	-100	100	No	
PCE White y	AWY	R/W	Yes	-100	100	No	
Image Alignment Bottom Right x	BRX	R/W	Yes	-100	100	No	
Image Alignment Bottom Right y	BRY	R/W	Yes	-100	100	No	
Blank Screen Blue	BSB	R/W	Yes	0	255	No	
Blank Screen Green	BSG	R/W	Yes	0	255	No	
Blank Screen Red	BSR	R/W	Yes	0	255	No	
ConstantContrast	CCT	R/W	No	0	4	No	0 = Off 2 = Low 3 = Medium 4 = High
CEC Enable	CEC	R/w	No	0	1	No	0 = Off; 1 = On
Chroma Delay	CHR	R/W	Yes	0	7	No	
Color Gamut	CLG	R/W	Yes	0	6	No	0 = Auto 1 = REC709 2 = SMPTE C 3 = EBU 4 = Native 6 = PCE
Color Offset	CLO	R/W	Yes	-50	50	No	Picture menu

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Color	CLR	R/W	Yes	-50	50	No	Calibration -> Input Image menu
Color Space	CLS	R/W	No	0	4	No	0 = REC601 1 = REC709 2 = RGB 3 = RGB Video 4 = Auto
Image Alignment Center x	CNX	R/W	Yes	-100	100	No	
Image Alignment Center y	CNY	R/W	Yes	-100	100	No	
Contrast	CON	R/W	Yes	-50	50	No	Calibration -> Input Image menu
Contrast Offset	COO	R/W	Yes	-50	50	No	Picture menu
Color Temp Simple	CTS	R/W	No	0	4	No	1 = 5500K 2 = 6500K 3 = 7500K 4 = 9300K
CUE	CUE	R/W	No	0	1	No	0 = Off; 1 = On
Display Blue Gain	DBG	R/W	Yes	-100	100	No	
Display Blue Offset	DBO	R/W	Yes	-100	100	No	
Default Gateway Byte 1	DE1	R/W	Yes	0	255	No	
Default Gateway Byte 2	DE2	R/W	Yes	0	255	No	
Default Gateway Byte 3	DE3	R/W	Yes	0	255	No	
Default Gateway Byte 4	DE4	R/W	Yes	0	255	No	
Diagnostic Color	DGC	R/W	No	0	6	No	0 = White 1 = Red 2 = Green 3 = Blue 4 = Yellow 5 = Cyan 6 = Magenta
Display Green Gain	DGG	R/W	Yes	-100	100	No	
Display Green Offset	DGO	R/W	Yes	-100	100	No	
DHCP	DHC	R/W	No	0	1	No	0 = Off; 1 = On
Display Red Gain	DRG	R/W	Yes	-100	100	No	
Display Red Offset	DRO	R/W	Yes	-100	100	No	
Detected 3D Mode	DTD	R/W	No	1	4	No	1 = Off (2D) 2 = Side-by-Side 3 = Top-and-Bottom 4 = Frame Packing
Engine Configuration	ENG	R/W	No	0	1	No	0 = Dual 1 = Single

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Error Notification	ERN	R/W	No	0	1	No	0 = Off; 1 = On
Error Code	ERR	R	No	0		No	0 = None 1 = Display Lamp Overtemp 2 = Primary Display Ballast Overtemp 3 = Primary Display Fan Init Failure 4 = Primary Display Fan 1 Failure 5 = Primary Display Fan 2 Failure 6 = Primary Display Fan 3 Failure 7 = Primary Display Fan 4 Failure 8 = Primary Display Fan 5 Failure 9 = Primary Display Fan 6 Failure 10 = Primary Display Fan 7 Failure 11 = Primary Display Fan 8 Failure 12 = Primary Display DMD Failure 13 = Primary Display Lamp Strike Failure 14 = Primary Display Lamp Went Out 15 = Primary Display Ballast UART Failure 16 = Primary Display GPIO Failure 17 = Primary Display Lamp Door Open 18 = Primary Display Processor Failure 19 = Primary Display Hardware I2C Failure 20 = Primary Display Software I2C Failure 21 = Primary Display Lamp Error 22 = Primary Display Communication Error 23 = Secondary DHD Communication Error 24 = BAE Communication Error 25 = Primary DHD Fan 1 Failure 26 = Primary DHD Fan 2 Failure 27 = Primary DHD Overtemp 1 28 = Primary DHD Overtemp 2 29 = Secondary DHD Fan 1 Failure 30 = Secondary DHD Fan 2 Failure 31 = Secondary DHD Overtemp 1 32 = Secondary DHD Overtemp 2 33 = Secondary Display Lamp Overtemp 34 = Secondary Display Ballast Overtemp 35 = Secondary Display Fan Init Failure 36 = Secondary Display Fan 1 Failure

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Error Code	ERR	R	No	0		No	37 = Secondary Display Fan 2 Failure 38 = Secondary Display Fan 3 Failure 39 = Secondary Display Fan 4 Failure 40 = Secondary Display Fan 5 Failure 41 = Secondary Display Fan 6 Failure 42 = Secondary Display Fan 7 Failure 43 = Secondary Display Fan 8 Failure 44 = Secondary Display DMD Failure 45 = Secondary Display Lamp Strike Failure 46 = Secondary Display Lamp Went Out 47 = Secondary Display Ballast UART Failure 48 = Secondary Display GPIO Failure 49 = Secondary Display Lamp Door Open 50 = Secondary Display Processor Failure 51 = Secondary Display Hardware I2C Failure 52 = Secondary Display Software I2C Failure 53 = Secondary Display Lamp Error 54 = Secondary Display Communication Error 55 = BAE Fan Failure
Focus	FCS	W	Yes	0	0	No	(FCS+) or (FCS-) = Start; (FCS=0) = Stop
Film Mode	FLM	R/W	No	0	1	No	0 = Off; 1 = On
Fan 1 Speed	FN1	R/W	Yes	0	255	No	
Fan 2 Speed	FN2	R/W	Yes	0	255	No	
Firmware Upgrade	FWU	W	No	N/A	N/A	No	Action will be performed on any setting value
Gamma Advanced	GMA	R/W	Yes	0	20	No	
Gamma Mode	GMM	R/W	No	0	1	No	0 = Simple 1 = Advanced

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Gamma Simple	GMS	R/W	No	0	6	No	0 = 2.0 1 = 1.8 2 = 2.2 3 = 2.35 4 = 2.5
HDMI Audio Format	HAF	R/W	No	0	2	No	0 = Combined 1 = HDMI Out 1 2 = HDMI Out 2
HDMI EDID Extension 1	HE1	R/W	No	0	1	No	0 = Off; 1 = On
HDMI EDID Extension 2	HE2	R/W	No	0	1	No	
HDMI EDID Extension 3	HE3	R/W	No	0	1	No	
HDMI EDID Extension 4	HE4	R/W	No	0	1	No	
HPD Toggle Rejection	HPD	R/W	No	0	1	No	0 = Off; 1 = On
Horizontal Shift	HSH	W	Yes	0	0	No	(HSH+) or (HSH-) = Start; (HSH=0) = Stop
Input Name 1	I01	R/W	No	N/A	N/A	Yes	12 characters maximum
Input Name 2	I02	R/W	No	N/A	N/A	Yes	
Input Name 3	I03	R/W	No	N/A	N/A	Yes	
Input Name 4	I04	R/W	No	N/A	N/A	Yes	
Input Name 5	I05	R/W	No	N/A	N/A	Yes	
Input Name 6	I06	R/W	No	N/A	N/A	Yes	
Input Name 7	I07	R/W	No	N/A	N/A	Yes	
Input Name 8	I08	R/W	No	N/A	N/A	Yes	
Input Name 9	I09	R/W	No	N/A	N/A	Yes	
Input Name 10	I10	R/W	No	N/A	N/A	Yes	
Input Name 11	I11	R/W	No	N/A	N/A	Yes	
Input Blue Gain	IBG	R/W	Yes	-32	32	No	
Input Blue Offset	IBO	R/W	Yes	-32	32	No	
Information Boot Version	IBV	R	No	N/A	N/A	Yes	
Information Copied Aspect Ratio	ICA	R	No	N/A	N/A	Yes	
Information Current Color Space	ICC	R	No	0	3	Yes	0 = REC601 1 = REC709 2 = RGB 3 = RGB Video
Information Copied Input Source	ICI	R	No	N/A	N/A	Yes	

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Information Copied Memory Pre-set	ICM	R	No	N/A	N/A	Yes	
Information Copied Screen	ICR	R	No	N/A	N/A	Yes	
Information Copied Signal Format	ICS	R	No	N/A	N/A	Yes	
Information Display Name	IDN	R	No	N/A	N/A	Yes	
Information Firmware Version	IFV	R	No	N/A	N/A	Yes	
Input Green Gain	IGG	R/W	Yes	-32	32	No	
Input Green Offset	IGO	R/W	Yes	-32	32	No	
Information Horizontal Frequency	IHF	R	No	N/A	N/A	Yes	
Information Input Resolution	IIR	R	No	N/A	N/A	Yes	
information Micro Version	IMV	R	No	N/A	N/A	Yes	
Input Source	INS	R/W	No	0	10	No	0 = Composite 1 1 = Composite 2 2 = Composite 3 3 = Component 4 = HD 1 5 = HD 2 6 = SCART 7 = HDMI 1 8 = HDMI 2 9 = HDMI 3 10 = HDMI 4
Information Output Resolution	IOR	R	No	N/A	N/A	Yes	
IP Address Byte 1	IP1	R/W	Yes	0	255	No	
IP Address Byte 2	IP2	R/W	Yes	0	255	No	
IP Address Byte 3	IP3	R/W	Yes	0	255	No	
IP Address Byte 4	IP4	R/W	Yes	0	255	No	
Information Pixel Clock	IPC	R	No	N/A	N/A	Yes	
Input Position Height	IPH	R/W	Yes	0	20	No	
Input Position Left Right	IPL	R/W	Yes	-50	50	No	
Input Position Up Down	IPU	R/W	Yes	-50	50	No	
Input Position Width	IPW	R/W	Yes	0	50	No	
Input Red Gain	IRG	R/W	Yes	-32	32	No	
Input Red Offset	IRO	R/W	Yes	-32	32	No	
Information Signal Format	ISF	R	No	N/A	N/A	Yes	
Information Serial Number	ISN	R	No	N/A	N/A	Yes	

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Information Sync Type	IST	R	No	0	3	No	0 = None 1 = Separate 2 = Composite 3 = Sync-on-green
Information Vertical Frequency	IVF	R	No	N/A	N/A	Yes	
Remote Key	KEY	W	No	0	63	No	1 = On 2 = Off 3 = Menu 4 = Enter 5 = Up 6 = Down 7 = Left 8 = Right 9 = 16:9 10 = 4:3 11 = Letterbox 12 = VirtualWide 13 = Video 1 14 = Component 17 = HD 1 18 = HD 2 19 = HDMI 1 20 = HDMI 2 21 = HDMI 3 22 = HDMI 4 23 = SCART 24 = Video 2 25 = Video 3 32 = Sleep Timer Off 33 = Sleep Timer 30 Mins 34 = Sleep Timer 60 Mins 35 = Sleep Timer 90 Mins 36 = Sleep Timer 2 Hours 37 = Sleep Timer 4 Hours 38 = Screen 1 39 = Screen 2 44 = Cinema 45 = Virtual Cinema 46 = Native 48 = ISF Night 49 = ISF Day 50 = Custom 1 51 = Custom 2 52 = Exit
Remote Key Repeat	KRT	W	No	0	63	No	

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Language	LAN	R/W	No	0	9	No	0 = English 1 = French 2 = German 3 = Italian 4 = Spanish 5 = Portuguese 6 = Simplified Chinese 7 = Traditional Chinese 8 = Swedish 9 = Russian 10 = Japanese 11 = Korean
Lamp 2 Hours	LH2	R	No	0	(Note)	No	Max = 2,147,483,647
Lens Home Position	LHP	W	No	N/A	N/A	No	Action will be performed on any setting value
Lamp Hours Reset	LHR	W	No	N/A	N/A	No	Action will be performed on any setting value
Lamp Hours	LHS	R	No	0	(Note)	No	Max = 2,147,483,647
Image Alignment Left Middle x	LMX	R/W	Yes	-100	100	No	
Image Alignment Left Middle y	LMY	R/W	Yes	-100	100	No	
Lamp Life Notification Enable	LNE	R/W	No	0	1	No	0 = Off; 1 = On
Lamp Life Notification Hours	LNH	R/W	Yes	100	10,000	No	
Logo LED Brightness	LOG	R/W	Yes	0	31	No	
Display Serial Number	LSN	R	No	N/A	N/A	Yes	
Model Name	MDL	R	No	N/A	N/A	Yes	
Memory Preset	MMP	R/W	No	0	3	No	0 = ISF Night 1 = ISF Day 2 = Custom 1 3 = Custom 2
Memory Preset Copy	MPC	W	No	N/A	N/A	No	Action will be performed on any setting value
Memory Preset Paste	MPP	W	No	N/A	N/A	No	
Memory Preset Reset	MPR	W	No	0	3	No	0 = ISF Night 1 = ISF Day 2 = Custom 1 3 = Custom 2
Memory Preset Save	MPS	W	No	0	3	No	
Noise Filter	NFL	R/W	Yes	0	10	No	
Noise Filter Offset	NFO	R/W	Yes	0	10	No	
Orientation	ORI	R/W	No	0	4	No	0 = Floor Front 2 = Floor Rear 4 = Auto

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
OSD Position Horizontal	OSD	R/W	Yes	0	100	No	
Output Shift Height	OSH	R/W	Yes	-50	0	No	
Output Shift Left Right	OSL	R/W	Yes	-300	300	No	
OSD Message Enable	OSM	R/W	No	0	1	No	0 = Off; 1 = On
OSD Timer	OST	R/W	Yes	0	60	No	Values from 1-4 are not allowed; if increment or decrement is used, these values will be skipped.
Output Shift Up Down	OSU	R/W	Yes	-200	200	No	
OSD Position Vertical	OSV	R/W	Yes	0	100	No	
Output Shift Width	OSW	R/W	Yes	-50	0	No	
Overscan Mode	OVM	R/W	No	0	1	No	0 = Zoom 1 = Crop
Overscan	OVS	R/W	Yes	0	20	No	
Phase	PHS	R/W	Yes	0	31	No	
Periodic Notification Enable	PNE	R/W	No	0	1	No	0 = Off; 1 = On
Periodic Notification Months	PNM	R/W	Yes	1	255	No	
Power	PWR	R/W	No	0	1	No	0 = Off; 1 = On
Input Name 1 Restore	R01	W	No	N/A	N/A	No	Action will be performed on any setting value
Input Name 2 Restore	R02	W	No	N/A	N/A	No	
Input Name 3 Restore	R03	W	No	N/A	N/A	No	
Input Name 4 Restore	R04	W	No	N/A	N/A	No	
Input Name 5 Restore	R05	W	No	N/A	N/A	No	
Input Name 6 Restore	R06	W	No	N/A	N/A	No	
Input Name 7 Restore	R07	W	No	N/A	N/A	No	
Input Name 8 Restore	R08	W	No	N/A	N/A	No	
Input Name 9 Restore	R09	W	No	N/A	N/A	No	
Input Name 10 Restore	R10	W	No	N/A	N/A	No	
Input Name 11 Restore	R11	W	No	N/A	N/A	No	
Remote Code	RMC	R/W	Yes	0	31	No	
Image Alignment Right Middle x	RMX	R/W	Yes	-100	100	No	
Remote Network Control	RNC	R/W	No	0	1	No	0 = Off; 1 = On
Standby LED Enable	SBL	R/W	No	0	1	No	0 = Off; 1 = On

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Splash Configure String 1	SC1	R/W	No	N/A	N/A	Yes	30 characters max
Splash Configure String 2	SC2	R/W	No	N/A	N/A	Yes	
Splash Configure String 3	SC3	R/W	No	N/A	N/A	Yes	
Sidebar Color Blue	SCB	R/W	Yes	0	255	No	
Sidebar Color Green	SCG	R/W	Yes	0	255	No	
Screen	SCN	R/W	No	0	1	No	0 = Screen 1 1 = Screen 2
Sidebar Color Red	SCR	R/W	Yes	0	255	No	
Send Errors to Runco	SER	R/W	No	0	1	No	0 = Off; 1 = On
Sharpness Offset	SHO	R/W	Yes	-50	50	No	Picture menu
Sharpness	SHP	R/W	Yes	-50	50	No	Calibration -> Input Image menu
Screen Masking Bottom	SMB	R/W	Yes	0	200	No	
Screen Masking Test Pattern Enable	SME	R/W	No	0	1	No	0 = Off; 1 = On
Screen Masking Left	SML	R/W	Yes	0	200	No	
Screen Masking Test Pattern Mode Enable	SMM	R/W	No	0	1	No	0 = Off; 1 = On
Screen Masking Right	SMR	R/W	Yes	0	200	No	
Screen Masking Top	SMT	R/W	Yes	0	200	No	
Splash Enable	SPE	R/W	No	0	1	No	0 = Off; 1 = On
Splash Timer	SPT	R/W	Yes	5	60	No	
Status	STA	R	No	0	4	No	
Sync Threshold	STH	R/W	Yes	0	15	No	
Sleep Timer	STM	R/W	No	0	5	No	0 = Off 1 = 30 Minutes 2 = 60 Minutes 3 = 90 Minutes 4 = 2 Hours 5 = 4 Hours
Subnet Mask Byte 1	SU1	R/W	Yes	0	255	No	
Subnet Mask Byte 2	SU2	R/W	Yes	0	255	No	
Subnet Mask Byte 3	SU3	R/W	Yes	0	255	No	
Subnet Mask Byte 4	SU4	R/W	Yes	0	255	No	
System Reset	SYS	W	No	N/A	N/A	No	Action will be performed on any setting value

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Trigger 1 16:9	T11	R/W	No	0	1	No	0 = Off; 1 = On
Trigger 1 4:3	T12	R/W	No	0	1	No	
Trigger 1 Letterbox	T13	R/W	No	0	1	No	
Trigger 1 VirtualWide	T14	R/W	No	0	1	No	
Trigger 1 Cinema	T15	R/W	No	0	1	No	
Trigger 1 Virtual Cinema	T16	R/W	No	0	1	No	
Trigger 1 Native	T17	R/W	No	0	1	No	
Trigger 2 16:9	T21	R/W	No	0	1	No	
Trigger 2 4:3	T22	R/W	No	0	1	No	
Trigger 2 Letterbox	T23	R/W	No	0	1	No	
Trigger 2 VirtualWide	T24	R/W	No	0	1	No	
Trigger 2 Cinema	T25	R/W	No	0	1	No	
Trigger 2 Virtual Cinema	T26	R/W	No	0	1	No	
Trigger 2 Native	T27	R/W	No	0	1	No	
Trigger 3 16:9	T31	R/W	No	0	1	No	
Trigger 3 4:3	T32	R/W	No	0	1	No	
Trigger 3 Letterbox	T33	R/W	No	0	1	No	
Trigger 3 VirtualWide	T34	R/W	No	0	1	No	
Trigger 3 Cinema	T35	R/W	No	0	1	No	
Trigger 3 Virtual Cinema	T36	R/W	No	0	1	No	
Trigger 3 Native	T37	R/W	No	0	1	No	
3D Test Pattern Enable	TDE	R/W	No	0	1	No	0 = Off; 1 = On
3D Mode	TDM	R/W	No	0	4	No	0 = Auto 1 = Off 2 = Side-by-Side 3 = Top-and-Bottom 4 = Frame Packing
3D Reverse Eyes	TDR	R/w	No	0	1	No	0 = Off; 1 = On
Image Alignment Top Left x	TLX	R/W	Yes	-100	100	No	
Image Alignment Top Left y	TLY	R/W	Yes	-100	100	No	
Image Alignment Top Middle x	TMX	R/W	Yes	-100	100	No	
Image Alignment Top Middle y	TMY	R/W	Yes	-100	100	No	
Tint Offset	TNO	R/W	Yes	-50	50	No	Picture menu

Table 6-1. Serial Commands (continued)

Setting	Command Code	Read/Write	Inc/Dec	Min Value	Max Value	String?	Notes
Tint	TNT	R/W	Yes	-50	50	No	Calibration -> Input Image menu
Test Pattern Enable	TPE	R/W	No	0	1	No	0 = Off; 1 = On
Primary Test Pattern	TPP	R/W	No	0	1	No	0 = Off; 1 = On
Secondary Test Pattern	TPS	R/W	No	0	1	No	0 = Off; 1 = On
Tracking	TRK	R/W	Yes	-100	100	No	
Image Alignment Top Right x	TRX	R/W	Yes	-100	100	No	
Image Alignment Top Right y	TRY	R/W	Yes	-100	100	No	
Test Video	TST	R/W	No	0	4	No	1 = Color Bars 1 11 = Color Bars 2 12 = Gray Bars 13 = Focus 14 = Off 15 = Off (Restore OSD) 16 = Primary Alignment 17 = Secondary Alignment 18 = Dual Alignment 19 = 3D
VFD Brightness	VFD	R/W	Yes	0	4	No	0 = 0% 1 = 25% 2 = 50% 3 = 75% 4 = 100%
Vertical Shift	VSH	W	Yes	0	0	No	(VSH+) or (VSH-) = Start; (VSH=0) = Stop
Zoom	ZOM	W	Yes	0	0	No	(ZOM+) or (ZOM-) = Start; (ZOM=0) = Stop

6.2 Using Discrete IR Codes

The DHD Controller accepts commands in the form of IR signals that conform to the Phillips RC5 protocol. Each DHD Controller remote control button has an RC5 control code associated with it.

You can use these codes to program a third-party, “universal” remote control unit to work with the DHD Controller. These third-party products usually come with a computer software application for this purpose. For more information, consult the documentation provided with the remote control unit.

IR Command Protocol ➤

The IR control codes have the following characteristics:

- Each code consists of 14 bits:
 - Two (2) **start bits** (always 1);
 - A **toggle bit**. This bit is inverted every time a key is released and pressed again. This allows the DHD Controller to distinguish between a button that remains down and one that is pressed repeatedly.
 - Five (5) **address bits**. The default address is **17** (binary 10001). To change it, select Remote Code from the Miscellaneous menu (in the Service menu) and follow the steps given on page 93.
 - Six (6) **data bits**.
- The carrier frequency is 36 kHz, with the modulated pulses having a 25% duty cycle.
- Commands are sent at a maximum rate of 9 Hz.

For example, here is the RC5 control code for the **ON** button on the DHD Controller remote control unit (assuming the default address is used):

With Toggle Bit = 0													
Hex	3		4				4				1		
Binary	1	1	0	1	0	0	0	1	0	0	0	0	1
With Toggle Bit = 1													
Hex	3		C				4				1		
Binary	1	1	1	1	0	0	0	1	0	0	0	0	1
Function	Start Bits		Toggle Bit	Address				Command					

Figure 6-1 shows the pulse train for this command (with the toggle bit set to zero).

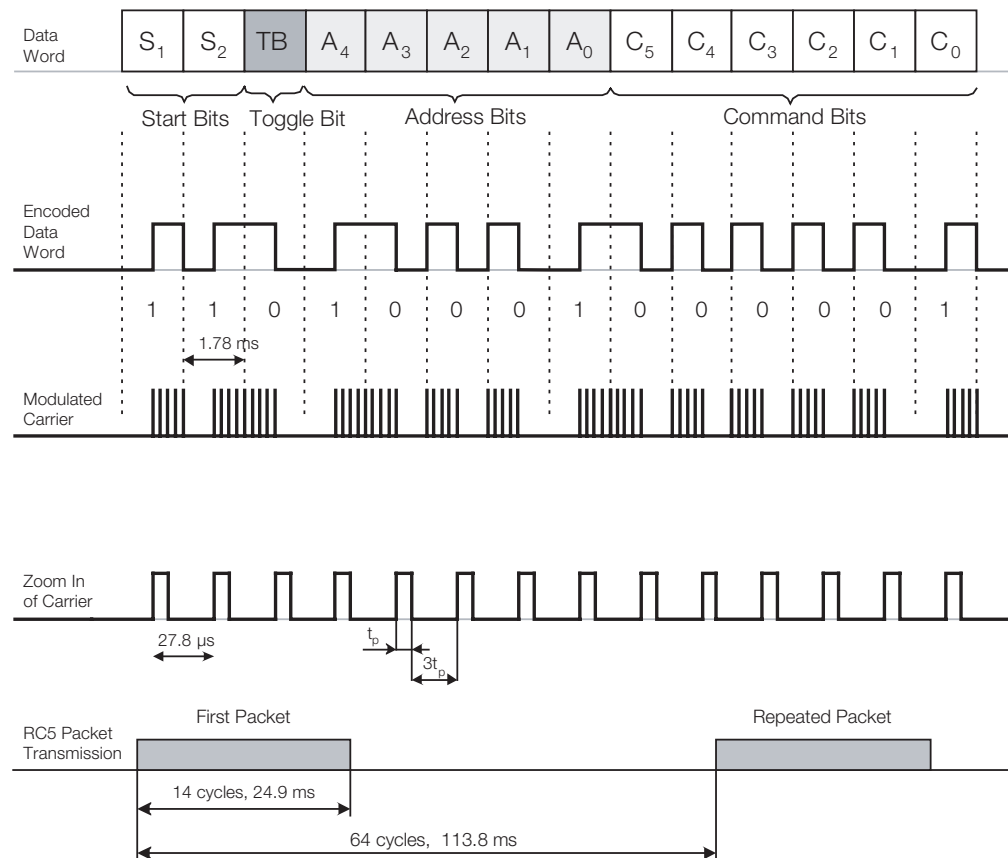


Figure 6-1. RC5 Message Format

IR Command List ➤ Table 6-2 lists the RC5 control codes for the DHD Controller.

Table 6-2. RC5 Control Codes for the DHD Controller

Function	RC5 Data from Remote Control (Note)	RC5 Data with Toggle Bit = 1 (Note)	Description
16:9	0x3449	0x3C49	16:9 aspect ratio
3D AUTO	0x3475	0x3C75	3D Mode = Auto
3D OFF	0x3476	0x3C76	3D Mode = Off
3D SBS	0x3477	0x3C77	3D Mode = Side-by-Side
3D TAB	0x3478	0x3C78	3D Mode = Top-and-Bottom
3D FP	0x3479	0x3C79	3D Mode = Frame Packing
4:3	0x344A	0x3C4A	4:3 aspect ratio
CINEMA	0x346C	0x3C6C	Cinema aspect ratio
COMP	0x344E	0x3C4E	Component video input
CUST 1	0x3472	0x3C72	Custom 1 memory preset
CUST 2	0x3473	0x3C73	Custom 2 memory preset
DOWN	0x3446	0x3C46	Down-Arrow (▼)
ENTER	0x3444	0x3C44	ENTER
EXIT	0x3474	0x3C74	EXIT
HD 1	0x3451	0x3C51	HD1 video input
HD 2	0x3452	0x3C52	HD2 video input
HDMI 1	0x3453	0x3C53	HDMI1 video input
HDMI 2	0x3454	0x3C54	HDMI2 video input
HDMI 3	0x3455	0x3C56	HDMI3 video input
HDMI 4	0x3456	0x3C56	HDMI4 video input
ISF DAY	0x3471	0x3C71	ISF Day memory preset
ISF NT	0x3470	0x3C70	ISF Night memory preset
LEFT	0x3447	0x3C47	Left-Arrow (◀)
LET BOX	0x344B	0x3C4B	Letterbox aspect ratio
MENU	0x3443	0x3C43	MENU
NATIVE	0x346E	0x3C6E	Native aspect ratio
OFF	0x3442	0x3C42	Power off

Note: These codes assume that the default address of 17 is used. If you change it to something other than 17, you will need to modify these codes accordingly.

Table 6-2. RC5 Control Codes for the DHD Controller (continued)

Function	RC5 Data from Remote Control (Note)	RC5 Data with Toggle Bit = 1 (Note)	Description
ON	0x3441	0x3C41	Power on
RIGHT	0x3448	0x3C48	Right-Arrow (▶)
SCART	0x3457	0x3C57	SCART video input
SCREEN1	0x3466	0x3C66	Selects "Screen 1"
SCREEN2	0x3467	0x3C67	Selects "Screen 2"
STOFF	0x3460	0x3C60	Sets the sleep timer to Off
ST30MIN	0x3461	0x3C61	Sets the sleep timer to 30 minutes
ST60MIN	0x3462	0x3C62	Sets the sleep timer to 60 minutes
ST90MIN	0x3463	0x3C63	Sets the sleep timer to 90 minutes
ST2HRS	0x3464	0x3C64	Sets the sleep timer to 2 hours
ST4HRS	0x3465	0x3C65	Sets the sleep timer to 4 hours
UP	0x3445	0x3C45	Up-Arrow (▲)
VID 1	0x344D	0x3C4D	Composite video input 1
VID 2	0x3458	0x3C58	Composite video input 2
VID 3	0x3459	0x3C59	Composite video input 3
V-CINE	0x346D	0x3C6D	Virtual Cinema aspect ratio
V-WIDE	0x344C	0x3C4C	VirtualWide aspect ratio
Note: These codes assume that the default address of 17 is used. If you change it to something other than 17, you will need to modify these codes accordingly.			

6.3 Using HDMI CEC Messages

The DHD Controller accepts and can respond to CEC command messages from a disc player, satellite receiver or DVR/set-top box via an HDMI connection. Using CEC, the DHD Controller can perform the following actions:

- Turn itself and the display device on and select the correct input when the source component initiates playback of a disc or recorded program.
- Turn the source component on when you switch to its corresponding input on the DHD Controller.
- Turn the source component off when the DHD Controller is turned off (unless the source component is in playback mode).
- Change its OSD language when a similar change is made at the source.

To use CEC, connect your CEC-compatible sources to the HDMI inputs on the D-113d. Set the CEC option to **On** (refer to **CEC** on page 94). Additional steps may be needed to enable CEC at the source. Refer to the documentation for your source device for more information.

CEC Command List ➤ Table 6-3 lists the CEC commands supported by the DHD Controller.

Table 6-3. CEC Commands Supported by the DHD Controller

Opcode	Value	Supported? (√ = Yes, – = No)	
		Initiator	Follower
Feature Abort	0x00	√	√
Standby	0x36	√	√
Routing Change	0x80	√	√
Routing Information	0x81	√	√
Active Source	0x82	√	√
Request Active Source	0x85	√	√
Device Vendor ID	0x87	√	√
Give Device Vendor ID	0x8C	√	√
Vendor Command With ID	0xA0	√	√
Polling Message	N/A	√	√
Text View On	0x0D	√	–
Report Physical Address	0x84	√	–
Inactive Source	0x9D	√	–
CEC Version	0x9E	√	–
Set OSD Name	0x47	√	–
Menu Status	0x8E	√	–
Report Power Status	0x90	√	–
Set Menu Language	0x32	–	√

Table 6-3. CEC Commands Supported by the DHD Controller (continued)

Opcode	Value	Supported? (√ = Yes, – = No)	
		Initiator	Follower
Give Physical Address	0x83	–	√
Set Stream Path	0x86	–	√
Get CEC Version	0x9F	–	√
Abort Message	0xFF	–	√
User Control Pressed	0x44	–	√
User Control Released	0x45	–	√
Give OSD Name	0x46	–	√
Menu Request	0x8D	–	√
Give Device Power Status	0x8F	–	√

**Note**

The DHD Controller does not transmit HDMI CEC control messages from the “HDMI Audio Out” connector.

Notes:

7. Specifications

Table 7-1 lists the D-113d projector specifications.

Table 7-1. D-113d Projector Specifications

Projector Type:	Texas Instruments Digital Light Processing™ (DLP) dual imaging system, SuperOnyx™ DMD™
Native Resolution:	Full HD 1920 x 1080 (1080p)
Illumination System:	Four (4), 350W HPM lamps; Individually swappable while projector is in operation
Lamp Life:	1,300 hours typical
Glasses:	Ships with 6 pairs of PreciseColor by Panavision™ 3D System passive glasses
Aspect Ratios:	Refer to Table 7-2
DTV Compatibility:	480i, 480p, 576i, 576p, 720p, 1080i 50/60, 1080p 24/50/60
3D Support:	All HDMI 1.4a mandatory 3D formats are supported with included Runco 3Dimension Processing system
Picture Size (16:9 Screen, 2D)	Recommended Width: 120 - 348 in. Maximum Width: 480 in.
Picture Size (16:9 Screen, 3D)	Recommended Width: 96 - 190 in. Maximum Width: 254 in.
Processing:	Runco 3Dimension Processor with ViVix IV™ technology and BRiC (Backup, Recovery and Clone) tool
Control Options:	<ul style="list-style-type: none"> • Serial commands via RS-232 • Discrete infrared (IR) remote • Consumer Electronics Control (CEC) protocol support via HDMI • Ethernet
Inputs:	Refer to Table 7-2
Video Standards:	NTSC, PAL, SECAM, CEA-861D
Calibration:	ISF Certified Calibration Configuration
Throw Distance (Factor x Screen Width):	Refer to Table 3-3
Horizontal & Vertical Offset:	Refer to Table 3-4

7.1 D-113d Projector Specifications

Table 7-1. D-113d Projector Specifications (continued)

Light Output (2D):	CSMS Specifications* – Private Cinema Calibration: 11,750 ANSI Lumens; 420 Foot-Lamberts (fL) Uncalibrated: 20,000 ANSI Lumens *Measured on a 1.0 gain, 84" wide 16:9 screen
Light Output (3D):	CSMS Specifications* – Private Cinema Calibration: 1,175 ANSI Lumens; 128 Foot-Lamberts (fL) Uncalibrated: 4,000 ANSI Lumens *Measured on a 3.0 gain, 84" wide 16:9 screen
Contrast Ratio:	CSMS* Contrast Ratio: >500:1 (ANSI); 10,000:1 full-on, full-off (dynamic)
Power Requirements:	100 VAC to 240 VAC +/- 10% @ 50/60Hz
Power Consumption:	2,640W maximum; Current - 26.4A @100V
Operating Temperature:	10°C to 40°C, up to 7,500' altitude 10°C to 35°C, 7,500' to 10,000' altitude
Operating Humidity:	10 - 80% humidity (non-condensing)
Dimensions:	See Figure 7-1 and Figure 7-2
Weight (without lenses or feet):	275 lbs. (124.74 kg) Top and bottom projection units ship separately
Regulatory Approvals:	FCC Part 15, Subpart B Class A, UL 60950, IEC60950, RoHS
Limited Warranty:	Two (2)-year PremierCare™ warranty; lamp warranty 1000 hours or (6) six months, whichever comes first (US and Canada only)
Specifications are subject to change without notice.	

Table 7-2 lists the DHD Controller specifications.

Table 7-2. DHD Controller Specifications

Aspect Ratios:	4:3, Letterbox, 16:9, VirtualWide, Cinema, Virtual Cinema, Native
Video Standards:	<ul style="list-style-type: none"> • HDMI and DVI with HDCP for digital video • Component and RGB HDTV (1080p, 1080i, 720p) • Component and RGB EDTV (576p, 480p) • Component and Composite SDTV (576i, 480i) • RGB SCART with adaptor • NTSC (M, 4.43) • PAL (B, G, H, I, N, M) • SECAM (M)
Inputs:	(4) HDMI with CEC and Deep Color (1) Component/SCART (3 x RCA) (2) Component/RGBHV (5 x BNC) (3) Composite
Outputs:	(1) HDMI with Deep Color to projector (1) HDMI with Deep Color to second display or audio processor
Control Options:	<ul style="list-style-type: none"> • Front panel vacuum fluorescent display and keypad • Discrete infrared (IR) remote • RS-232 (female DB9) for serial commands • USB (type B female) for firmware upgrade • RS-232 (male DB9) for accessories • 3.5-mm wired IR input for Niles/Xantech-compatible IR systems • Consumer Electronics Control (CEC) protocol support via HDMI • Ethernet
Ethernet Communication:	RJ45 (female) for web server, e-mail, auto firmware upgrade and Telnet
RS-232 Communication Parameters:	19200 bps, no parity, 8 data bits, 1 stop bit, no flow control
Trigger Outputs:	(3) +12 VDC, each rated at 250 mA and thermal fuse-protected
Accessory Applications:	Runco Firmware Upgrader, Runco BRiC (backup, restore, clone), CalMAN by SpectraCal for automatic calibration
Power Requirements:	100-240V~, 47-63Hz, 0.45 Amps
Operating Environment:	41°F to 104°F (5°C to 40°C), 0% to 90% humidity (non-condensing); up to 10,000 feet (3,048 meters) altitude
Dimensions:	Width = 17.50 inches (444.5 mm) Depth = 11.19 inches (284.1 mm) Height = 3.75 inches (95.3 mm)
Weight:	15.4 lbs. (7.00 kg)

7.2 DHD Controller Specifications

Table 7-2. DHD Controller Specifications (continued)

Regulatory Approvals:	cTUVus, FCC class B, CE, RoHS, China RoHS, WEEE, C-Tick, CCC, local conformances as required
Limited Warranty:	Two (2) years parts and labor from the date of shipment from Runco.

Specifications are subject to change without notice.

7.3 3Dimension Processor Specifications

Table 7-3 lists the 3Dimension Processor specifications.

Table 7-3. 3Dimension Processor Specifications

Aspect Ratios:	Refer to Table 7-2
Video Standards:	Refer to Table 7-2
3D:	System includes demultiplexing algorithms for every required HDMI 3D format, including frame-packed, maintaining optimal synchronization and stereo separation
Inputs:	(4) HDMI with CEC and Deep Color (1) Component/SCART (3 x RCA) (2) Component/RGBHV (5 x BNC) (3) Composite
Outputs:	(2) HDMI with Deep Color to Primary ("left eye") and Secondary ("right eye") DHD Controllers (2) Analog HD (5 x BNC) to Primary and Secondary DHD Controllers (2) Analog SD Composite (RCA) to Primary and Secondary DHD Controllers
External Control:	Consumer Electronics Control (CEC) protocol support via HDMI (pass-through)
Power Requirements:	100-240V~, 47-63Hz, 0.45A
Operating Environment:	41°F to 104°F (5°C to 40°C), 0% to 90% humidity (non-condensing)
Dimensions:	Width = 17.50 inches (444.5 mm) Depth = 11.19 inches (284.1 mm) Height = 3.75 inches (95.3 mm)
Weight:	13.0 lbs. (5.90 kg)
Regulatory Approvals:	cTUVus, FCC class B, CE, RoHS, China RoHS, WEEE, C-Tick, CCC, local conformances as required
Limited Warranty:	Two (2) years parts and labor from the date of shipment from Runco.
Specifications are subject to change without notice.	

Figure 7-1 shows the D-113d dimensions.

7.4
D-113d Dimensions

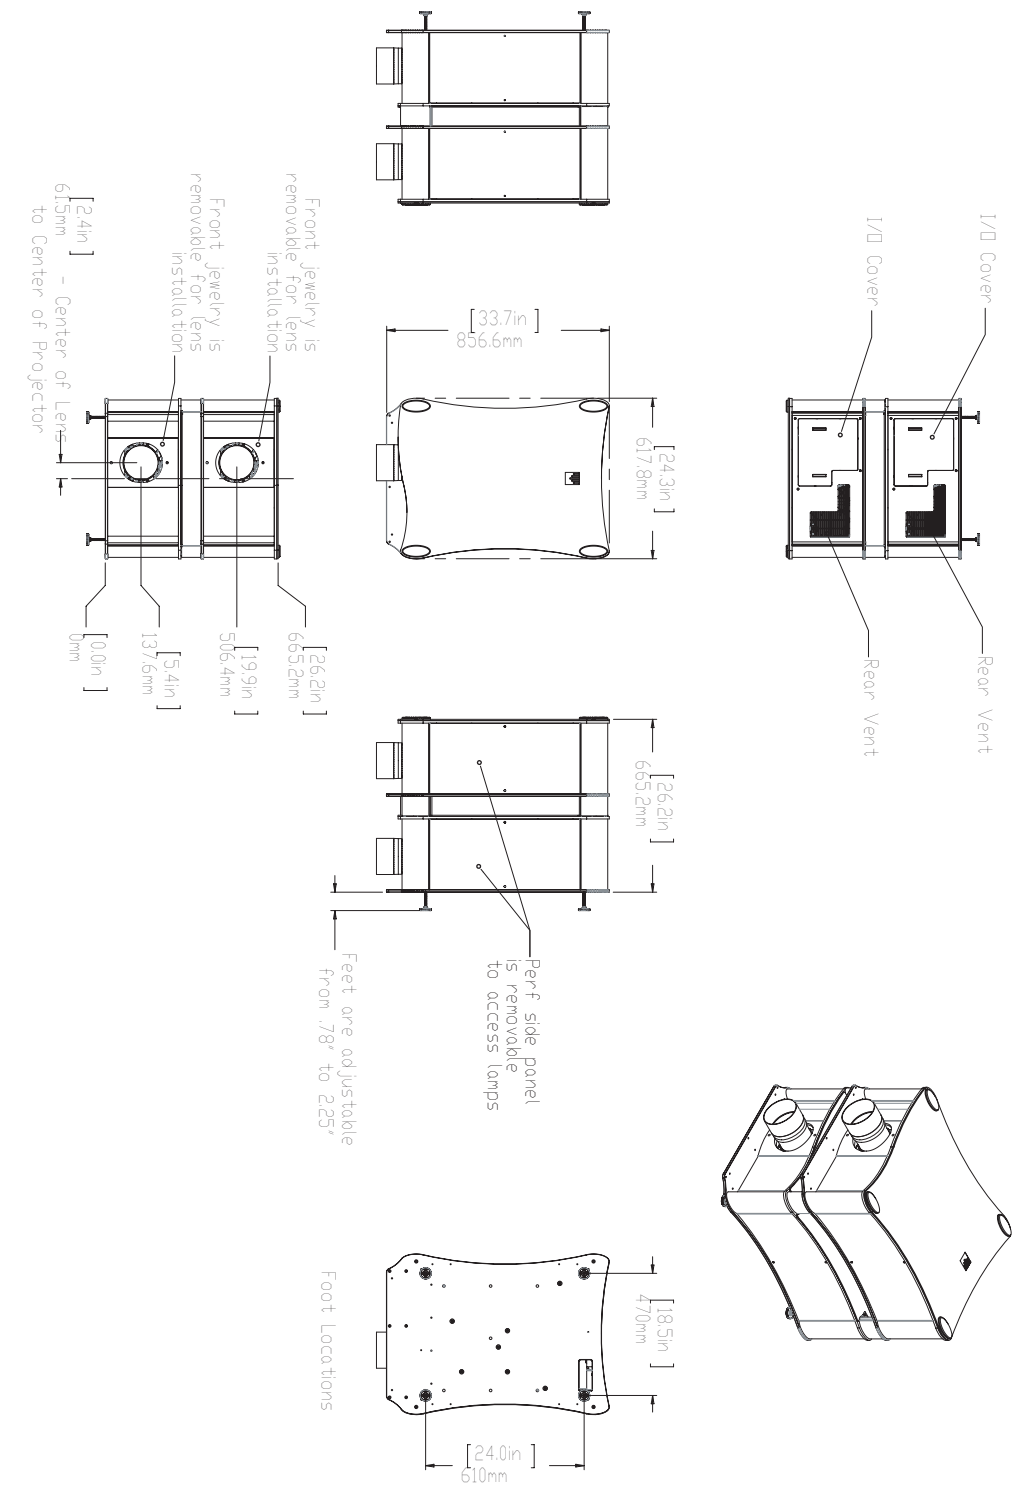


Figure 7-1. D-113d Dimensions

7.5
D-113d Dimensions
with CineWide with
AutoScope Assembly

Figure 7-2 shows the D-113d dimensions with the optional CineWide with AutoScope assembly.

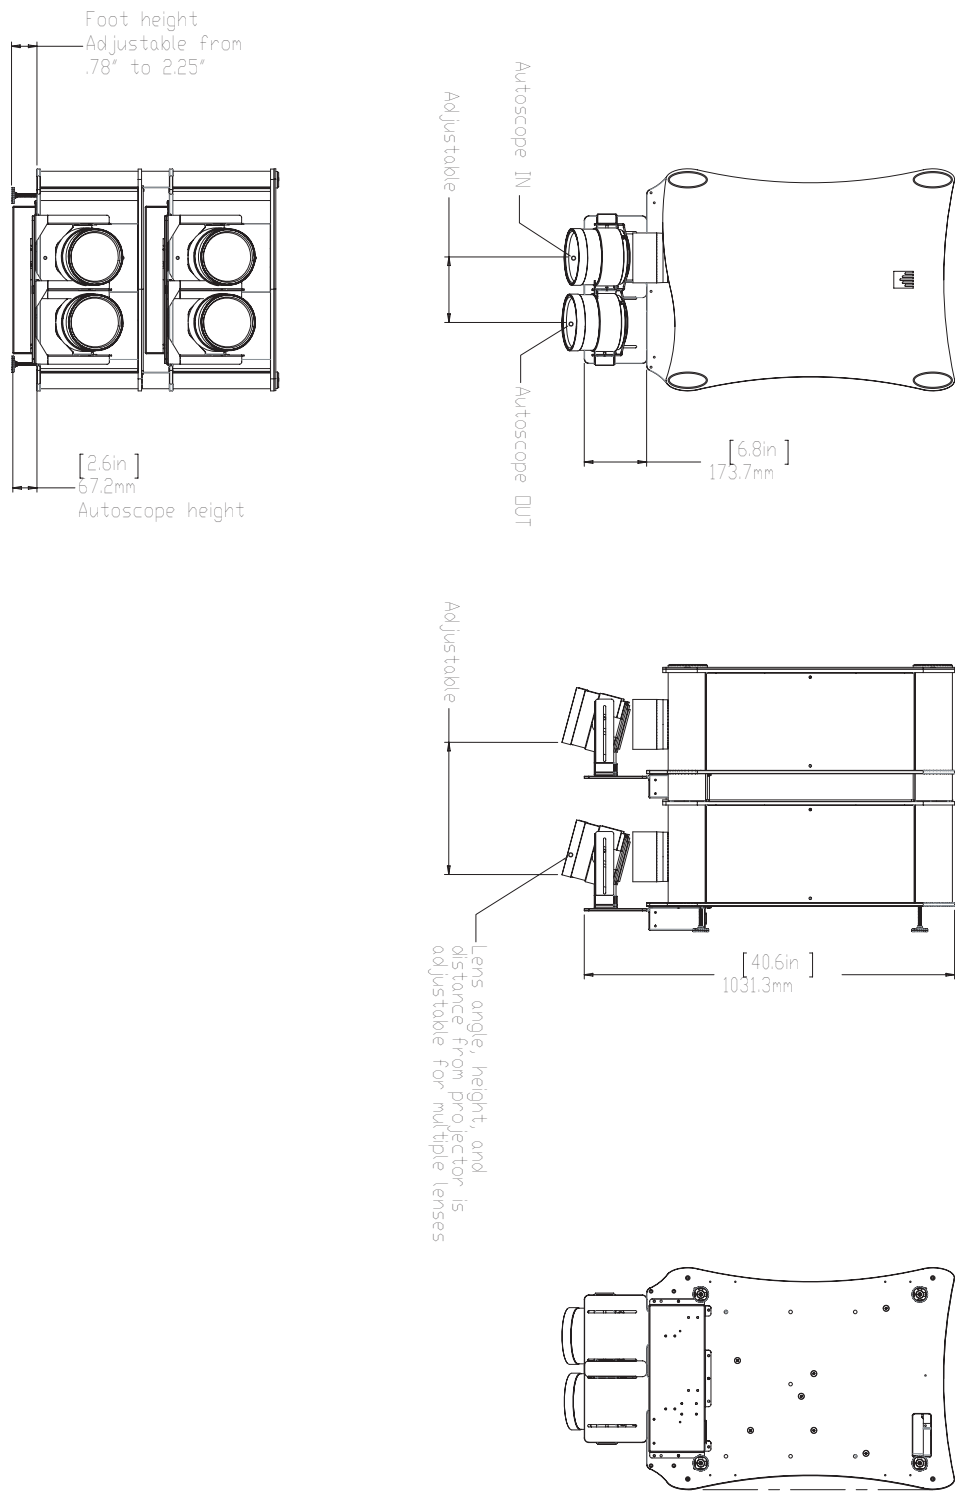


Figure 7-2. D-113d/CineWide with AutoScope Dimensions

Table 7-4 lists the signal types supported by each input on the DHD Controller.

7.6 Supported Timings

Table 7-4. Supported Signal Timings by Input

Format	Resolution	Refresh Rate (Hz)	Horizontal Frequency (kHz)	Pixel Frequency (MHz)	Supported? (√ = Yes, – = No)				
					HD 1 HD 2	HDMI 1 HDMI 2 HDMI 3 HDMI 4	Component	SCART	Composite 1 Composite 2 Composite 3
Supported 3D Modes									
1080i SBS (Side-by-Side)	1920x1080	50.00	28.125/31.250	74.250/72.000	–	√	–	–	–
		59.94	33.716	74.175	–	√	–	–	–
		60.00	33.750	74.250	–	√	–	–	–
720p TAB (Top-and-Bottom)	1280x720	50.00	37.500	75.250	–	√	–	–	–
		59.94	44.715	74.406	–	√	–	–	–
		60.00	45.000	74.250	–	√	–	–	–
720p SBS (Side-by-Side)	1280x720	50.00	37.500	75.250	–	√	–	–	–
		59.94	44.715	74.406	–	√	–	–	–
		60.00	45.000	74.250	–	√	–	–	–
720p FP (Frame Packing)	1280x720	50.00	37.500	75.250	–	√	–	–	–
		59.94	44.715	74.406	–	√	–	–	–
		60.00	45.000	74.250	–	√	–	–	–
1080p SBS (Side-by-Side)	1920x1080	23.98	26.978	74.175	–	√	–	–	–
		24.00	27.000	74.250	–	√	–	–	–
		29.97	33.716	74.175	–	√	–	–	–
		30.00	33.750	74.250	–	√	–	–	–
		50.00	56.250	148.500	–	√	–	–	–
		59.94	67.433	148.350	–	√	–	–	–
		60.00	67.500	148.500	–	√	–	–	–

Table 7-4. Supported Signal Timings by Input (continued)

Format	Resolution	Refresh Rate (Hz)	Horizontal Frequency (kHz)	Pixel Frequency (MHz)	Supported? (√ = Yes, – = No)				
					HD 1 HD 2	HDMI 1 HDMI 2 HDMI 3 HDMI 4	Component	SCART	Composite 1 Composite 2 Composite 3
Supported 3D Modes (continued)									
1080p TAB (Top-and-Bottom)	1920x1080	23.98	26.978	74.175	–	√	–	–	–
		24.00	27.000	74.250	–	√	–	–	–
		29.97	33.716	74.175	–	√	–	–	–
		30.00	33.750	74.250	–	√	–	–	–
		50.00	56.250	148.500	–	√	–	–	–
		59.94	67.433	148.350	–	√	–	–	–
		60.00	67.500	148.500	–	√	–	–	–
1080p FP (Frame Packing)	1920x1080	23.98	26.978	74.175	–	√	–	–	–
		24.00	27.000	74.250	–	√	–	–	–
		29.97	33.716	74.175	–	√	–	–	–
		30.00	33.750	74.250	–	√	–	–	–
Supported 2D Modes									
640x480	640x480	60.00	31.469	25.175	√	√	√	–	–
		66.59	35.892	29.862	√	√	√	–	–
		72.00	37.861	31.500	√	√	√	–	–
		75.00	37.500	31.500	√	√	√	–	–
		85.00	43.269	36.000	√	√	√	–	–
800x600	800x600	60.00	37.879	40.000	√	√	√	–	–
		72.00	48.077	50.000	√	√	√	–	–
		75.00	46.875	49.500	√	√	√	–	–
		85.00	53.674	56.250	√	√	√	–	–
832x624	832x624	74.54	52.849	60.036	√	√	√	–	–
848x480	848x480	47.95	25.270	27.089	√	√	√	–	–
		60.00	31.020	33.750	√	√	√	–	–
1024x768	1024x768	60.00	48.363	65.000	√	√	√	–	–
		70.00	56.476	75.000	√	√	√	–	–
		75.00	60.023	78.750	√	√	√	–	–
		85.00	68.677	94.500	√	√	√	–	–

Table 7-4. Supported Signal Timings by Input (continued)

Format	Resolution	Refresh Rate (Hz)	Horizontal Frequency (kHz)	Pixel Frequency (MHz)	Supported? (√ = Yes, – = No)				
					HD 1 HD 2	HDMI 1 HDMI 2 HDMI 3 HDMI 4	Component	SCART	Composite 1 Composite 2 Composite 3
Supported 2D Modes (continued)									
1152x864	1152x864	75.00	67.500	108.000	√	√	√	–	–
1280x720	1280x720	47.95	37.833	64.769	√	√	√	–	–
1280x768	1280x768	60.00	47.396	68.250	√	√	√	–	–
		60.00	47.776	79.500	√	√	√	–	–
		75.00	60.289	102.250	√	√	√	–	–
		85.00	68.633	117.500	√	√	√	–	–
1280x960	1280x960	60.00	60.000	108.000	√	√	√	–	–
		85.00	85.938	148.500	√	√	√	–	–
1280x1024	1280x1024	60.00	63.981	108.000	√	√	√	–	–
		75.00	79.976	135.000	√	√	√	–	–
		85.00	91.146	157.500	√	√	√	–	–
1360x768	1360x768	60.00	47.712	85.500	√	√	√	–	–
1400x1050	1400x1050	60.00	64.744	101.000	√	√	√	–	–
		60.00	65.317	121.750	√	√	√	–	–
		75.00	82.278	156.000	√	√	√	–	–
1600x1200	1600x1200	60.00	75.000	162.000	√	√	√	–	–
1680x1050	1680x1050	60.00	64.674	119.000	√	√	√	–	–
1920x1080	1920x1080	47.95	56.821	150.007	√	√	√	–	–
1920x1200	1920x1200	60.00	74.038	154.000	√	√	√	–	–

Table 7-4. Supported Signal Timings by Input (continued)

Format	Resolution	Refresh Rate (Hz)	Horizontal Frequency (kHz)	Pixel Frequency (MHz)	Supported? (√ = Yes, – = No)				
					HD 1 HD 2	HDMI 1 HDMI 2 HDMI 3 HDMI 4	Component	SCART	Composite 1 Composite 2 Composite 3
Supported 2D Modes (continued)									
SCART RGBS	–	50.00	–	–	–	–	–	√	–
480/60i	720x487	59.94	15.734	13.500	√	√	√	–	–
480/60p	720x483	59.94	31.469	27.000	√	√	√	–	–
576/50i	720x576	50.00	15.625	14.750	√	√	√	–	–
576/50p	720x576	50.00	31.250	29.000	√	√	√	–	–
720/24p	1280x720	23.98/24.00	17.982/18.000	59.341/59.400	√	√	√	–	–
720/25p	1280x720	25.00	18.750	74.250	√	√	√	–	–
720/30p	1280x720	29.97/30.00	22.478/22.500	74.175/74.250	√	√	√	–	–
720/50p	1280x720	50.00	37.500	75.250	√	√	√	–	–
720/60p	1280x720	60.00	45.000	74.250	√	√	√	–	–
1080/50i	1920x1080	50.00	28.125/31.250	74.250/72.000	√	√	√	–	–
1080/60i	1920x1080	59.94/60.00	33.716/33.750	74.175/74.250	√	√	√	–	–
1080/24p	1920x1080	23.98/24.00	26.978/27.000	74.175/74.250	√	√	√	–	–
1080/50p	1920x1080	50.00	56.250	148.500	√	√	√	–	–
1080/60p	1920x1080	59.94/60.00	67.433/67.500	148.350/148.500	√	√	√	–	–
NTSC 3.58	–	59.94/60.00	15.734/15.750	3.580	–	–	–	–	√
NTSC 4.43	–	59.94/60.00	15.734/15.750	4.430	–	–	–	–	√
PAL-B/G/H/I	–	50.00	15.625	4.430	–	–	–	–	√
PAL-M	–	59.94/60.00	15.734/15.750	3.580	–	–	–	–	√
PAL-N	–	50.00	15.625	3.580	–	–	–	–	√
SECAM	–	50.00	15.625	13.500	–	–	–	√	√

020-1165-00 Rev. A
October 2011